
ABS Bracket Template


(Except ALT7215)

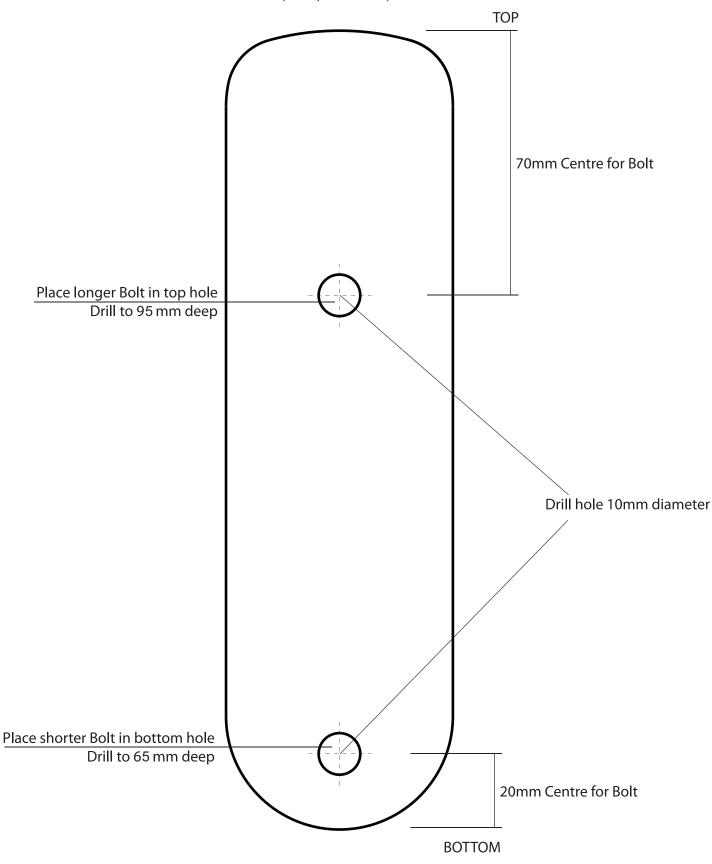


138-140 Bayfield Rd East, Bayswater North, Vic, 3153 Tel: (03) 9720 4333 • Fax: (03) 9720 4344

altamonte

Door & Window Canopy Installation Instructions

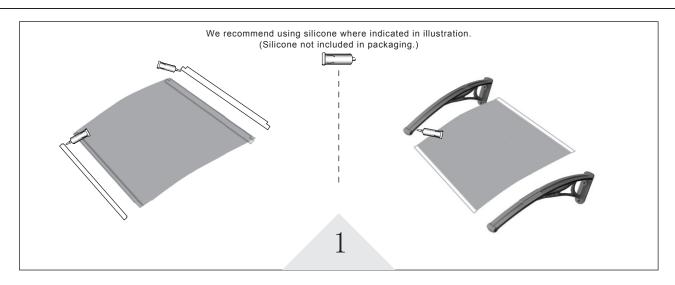

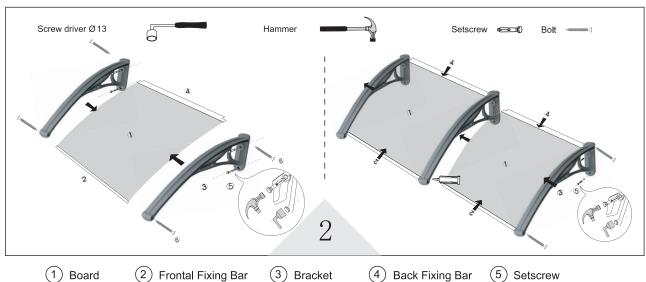

*We recommended using dish washing liquid for ease of installation.

Components

	Drawing	Number	Indication		Drawing	
1.		1	Board	4.		
				5.		
2.		1	Frontal Fixing Bar	6.		_
3.		2	Wall brackets			

138-140 Bayfield Rd East, Bayswater North, Vic, 3153 Tel: (03) 9720 4333 • Fax: (03) 9720 4344



Number

Indication

Back Fixing Bar

Setscrew

Bolt