



STEP 1


Feed brackets over first rod.

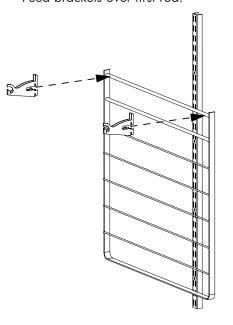

STEP 2

Angle brackets and feed top hooks through the first set of slots.

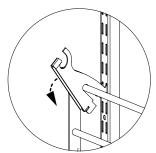

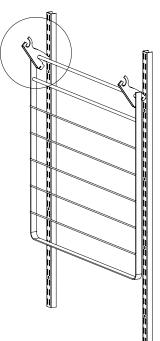

STEP 3

Feed bottom bracket hooks into second set of slots and push down.

