75mm | Safety Pattern


Hasp & Staple




Tools required: Pencil, No.2 Phillips screwdriver, drill and 2mm drill bit.

Installation instructions:

- 1. Place hasp and staple in location to ensure that it functions as intended.
- **2.** Mark screw locations and drill pilot holes with 2mm drill bit. Fasten with screws. Please ensure you do not over tighten as this is not recommended.

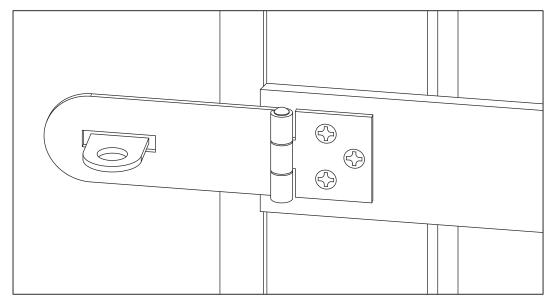

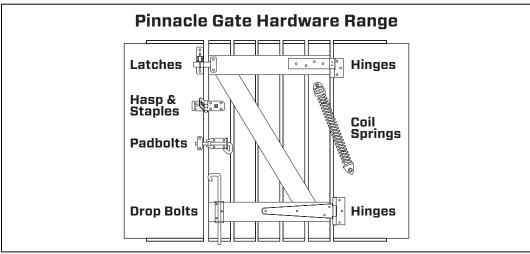

Corrosion Protection Chart

Finish:	Rating:
Stainless Steel	Ultimate
Galvanised	High U
Zinc Plated	Moderate

CONNECT WITH US!
PINNACLE.NET.AU





