

Allegro

Linked Toilet Suite

stylus

PLUMBERS' INSTALLATION INSTRUCTIONS For Allegro Linked 6/3 Toilet Suite PLEASE READ CAREFULLY BEFORE INSTALLATION THESE INSTRUCTIONS SUPERSEDE ALL INSTALLATION INSTRUCTIONS PRINTED ON THE BOX. PLEASE READ CAREFULLY BEFORE INSTALLATION

Preparation for bedding for 'S' trap

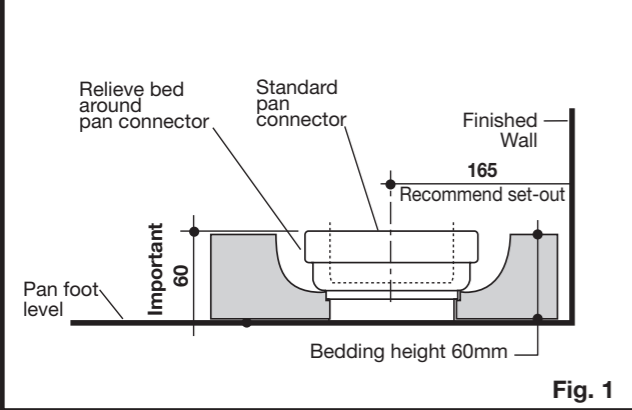


Fig. 1

'P' trap installation

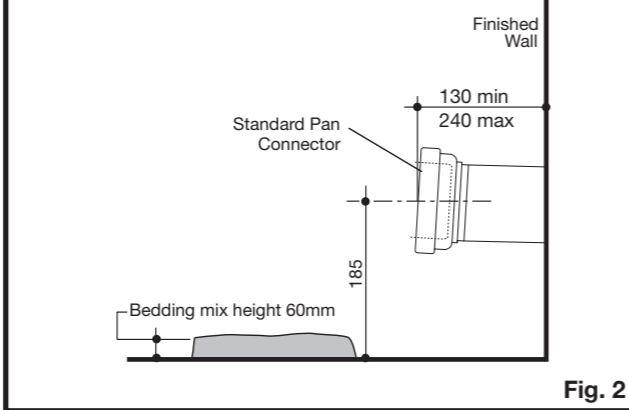


Fig. 2

IMPORTANT:
ALL DIMENSIONS ARE TO THE UNDERSIDE OF THE PAN. IT IS IMPORTANT TO MAKE A HEIGHT ALLOWANCE FOR BEDDING.

Bedding Installation

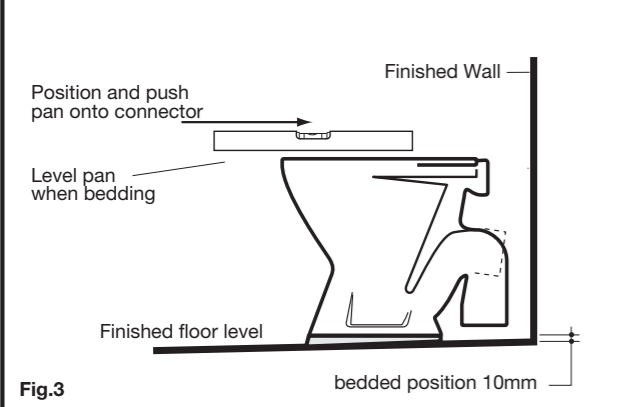


Fig. 3

Screw Fixing Installation

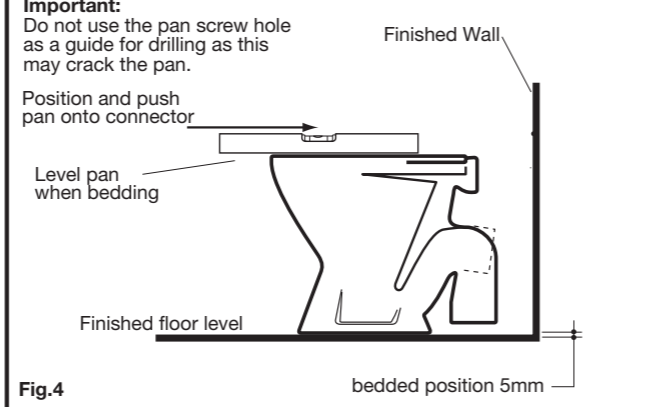


Fig. 4

Allegro Linked Dual Flush Toilet Suite

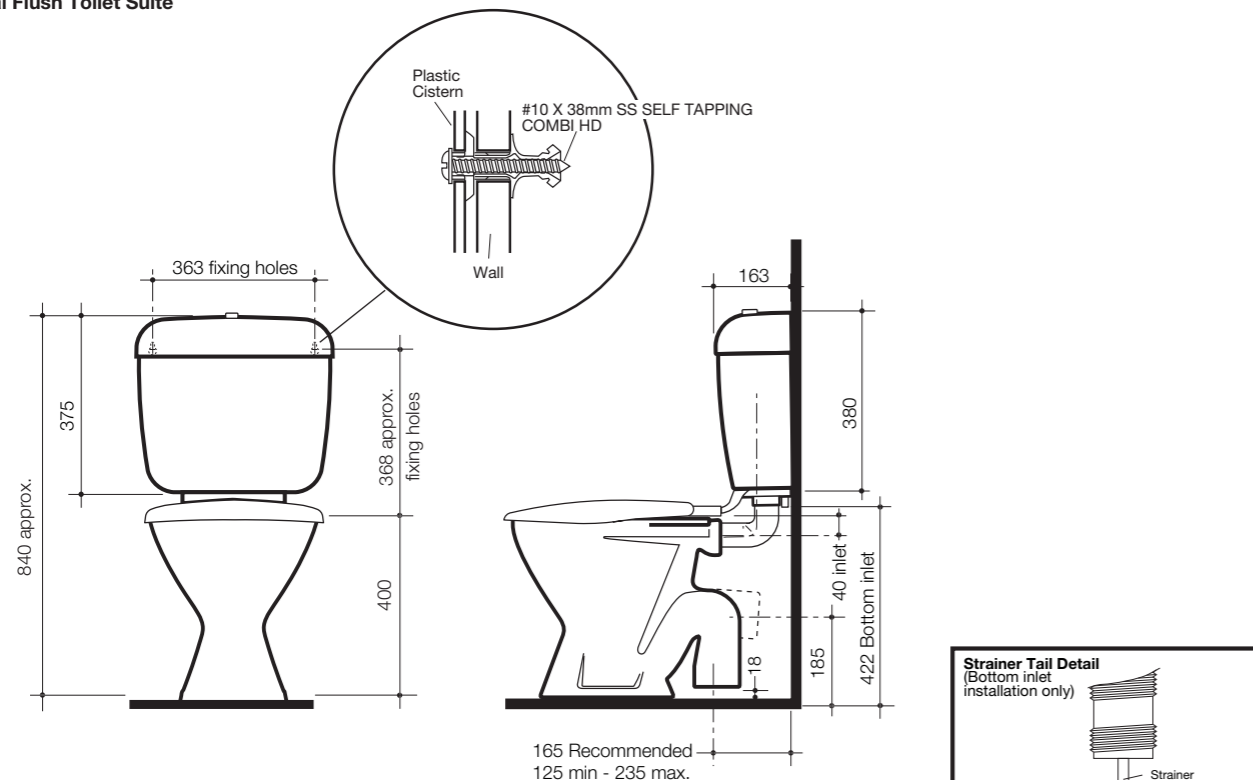


Fig. 5

ROUGHING IN:

It is essential for installation of the Allegro Linked Toilet Suite that the soil pipe and pan collar for 'S' and 'P' trap installation is accurately fixed into position as detailed in Fig. 1 or Fig. 2.

PAN FIXING PROCEDURE

Pan bedding:

- 1- Remove an area of tiles which are within the internal area covered by the foot of the pan to expose the subfloor and provide a bondage key for the bedding mixture.
- 2- Ensure that the bedding area is clean and free of building material.
- 3- Prepare bedding sand cement mixture 3:1 to depth of 60mm as detailed in Fig 1. Note: Do not fill the foot of the pan with bedding mix or include lime or fast drying cement in the mix, these may cause cracking in the foot of the pan.
- 4- Position pan and connect with pan connector and level pan into bedding mixture, so that the back of the foot of the pan is approximately 10mm above the finished floor as detailed in Fig 3 . It is recommended that wedges are used to support the foot of the pan during the positioning.
- 5- Locate the cistern on to the pan and check that the cistern is level side to side) and aligned with the tiling edges. Adjust pan position if necessary. Allow bedding mixture to set for at least 24 hours prior to use.

Screw fixing:

- 1- Position pan onto pan connector and mark location of pan fixing holes on the floor, as detailed in Fig 4.
- 2- Drill two holes in the marked positions on the floor. The hole diameter is dependent on the type of fixing system and floor finish.
- 3- Ensure that the area around the floor is clean and free from building material.
- 4- Run a bead of acetic cured silicone sealant at a height of 8mm approximately fully around the foot of the pan which contacts the floor. Use Wedges around the foot base (if required) so that the **maximum height of acetic cured silicone sealant is not greater than 5mm on completion of bedding.**
- 5- Connect pan to pan connector and fix to the floor with suitable corrosion resistant screws. The acetic cured silicone sealant will bed the pan to the floor. Remove any excess silicone, as detailed in Fig 4.

CISTERN FIXING PROCEDURE

Note: The inlet valve can be changed from right to left.

- 1- Position cistern and mark fixing holes as specified on the finished wall, as detailed in Fig 5.
- 2- Drill cistern fixing holes in marked position on wall. Drill 8 mm dia. for Caroma multi wall plug.
- 3- Insert wall plugs into wall.
- 4- Position fixing grommet holes in cistern over wall plugs, insert 10 # by 2" Combi Hd. self tapping screws.

Cut flush pipe to size.

- 1- Mount the cistern temporarily on the wall.
- 2- Measure the distance of the pan inlet to the centre outlet. Add 25mm to this measurement to allow for the flush pipe to be inserted into the pan inlet, and cut the flush pipe to this length.
- 3- Remove cistern from the pan and fit the keeseal onto the inlet end of the flushpipe.

- 4- Insert the flush pipe into the inlet using a small amount of lubricant. Place the flared cap nut and flush pipe ring over the flush pipe,

- 5- Mount the cistern onto the wall. Lower the cistern over the flush pipe. Fasten the cistern to the wall. Tighten the cap nut to create a water tight seal.

Cut connector piece to size.

- 1- Slide the connector piece under the cistern so that the collar fits securely around the cistern outlet valve. The front of the connector piece should be resting on the back edge of the pan.
- 2- Mark a line on the connector piece corresponding to the centre of the seat bolts on the toilet pan. Remove connector piece. Using the line that was marked cut the connector piece square across and remove burrs.
- 3- Slide the connector piece into position so that the collar fits around the cistern outlet valve.
- 4- Fit seat bolts into bolt holes in pan and loosely fit wing nuts.
- 5- Slide seat over the connector piece and ensure that the seat bolt heads are fitted into the slots in the underside of the seat hinge block.
- 6- Centre seat over the pan and tighten seat bolt wing nuts.
- 7- Connect water supply and check operation of cistern.
- 8- **Water level adjustment.** Flush the cistern and allow the cistern to re-fill. Adjust water level to the water level mark inside the cistern by simply turning the float arm screw in a clockwise or anti-clockwise direction.
- 9- Fit lid to check push button operation to complete installation.

IMPORTANT: THE INLET VALVE IS FITTED WITH A LINE STRAINER. ITS TAIL IS CENTRALLY LOCATED TO ALLOW EASY REMOVAL FOR CLEANING. THIS TAIL FITS EASILY INTO THE COPPER CONNECTION PIPE. INSTALLATION OF THE CISTERN WITHOUT THE STRAINER CAN LEAD TO DAMAGE OF THE INLET VALVE FROM THE WATER-BORNE CONTAMINANTS LEADING TO CISTERN MALFUNCTION.

All measurements are subject to accepted manufacturing tolerances. To ensure accuracy please check actual product dimensions before drilling for installation. The manufacturer reserves the right to change specifications at any time without giving prior notification. This product should be installed by a qualified plumber. Local authority, Water Board, and Building Regulations may apply to the installation of this product, and you should consult the appropriate bodies on these requirements. Failure to comply may invalidate the product warranty.

Issue No: 2
Date of Issue: 19.08.08