

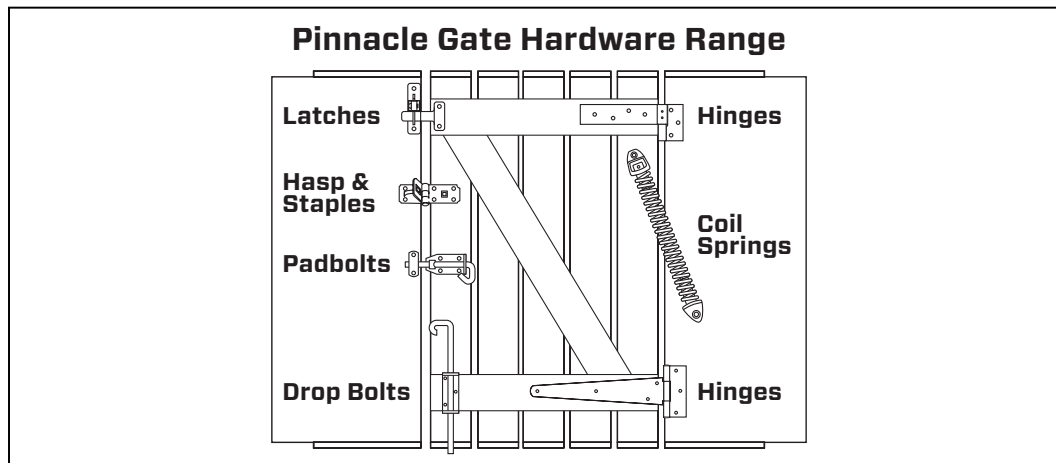
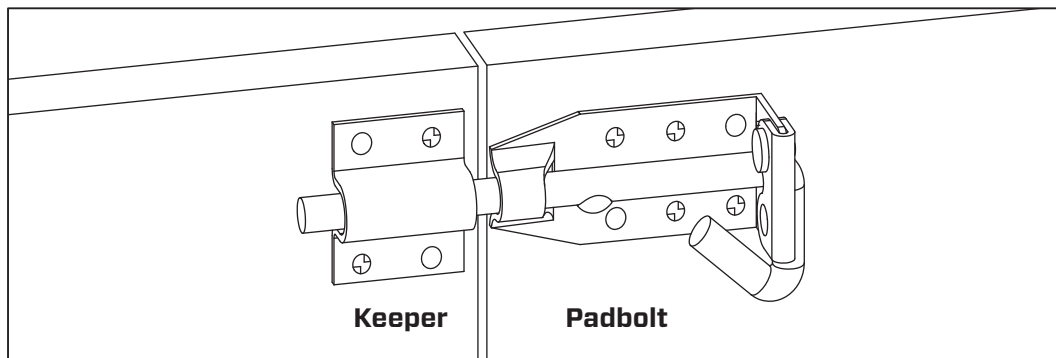
# 200mm | High Security Padbolt

**Important:** For this padbolt, use a padlock that's 40mm or larger.




**Tools required:** Pencil, 10mm spanner, 8mm flat-head screwdriver, drill, 4mm & 7mm drill bit.

## Installation instructions:

1. Place padbolt in desired location. Mark the location of coach bolts (square holes) and drill holes with 7mm drill bit. Fasten coach bolts. For remaining holes, drill pilot holes with 4mm drill bit and fasten with anti-theft screws.
  2. Position the keeper over the extended padbolt (locked position). Mark the location of coach bolts (square holes) and drill holes with 7mm drill bit. Fasten coach bolts. For remaining holes, drill pilot holes with 4mm drill bit and fasten with anti-theft screws.
- Hint:** If using on a gate we recommend the padbolt should be fixed to the gate and the keeper fixed to the post.



## Corrosion Protection Chart

Finish:	Rating:
Stainless Steel	Ultimate 
Galvanised	High 
Zinc Plated	Moderate 

Suitable for model no: GHS092.

CONNECT WITH US!  
[PINNACLE.NET.AU](http://PINNACLE.NET.AU)

