


## INSTALLATION INSTRUCTIONS

Shower Door Kit - MON9567, MON9574,  
MON9581, MON9598, MON9604, MON9611

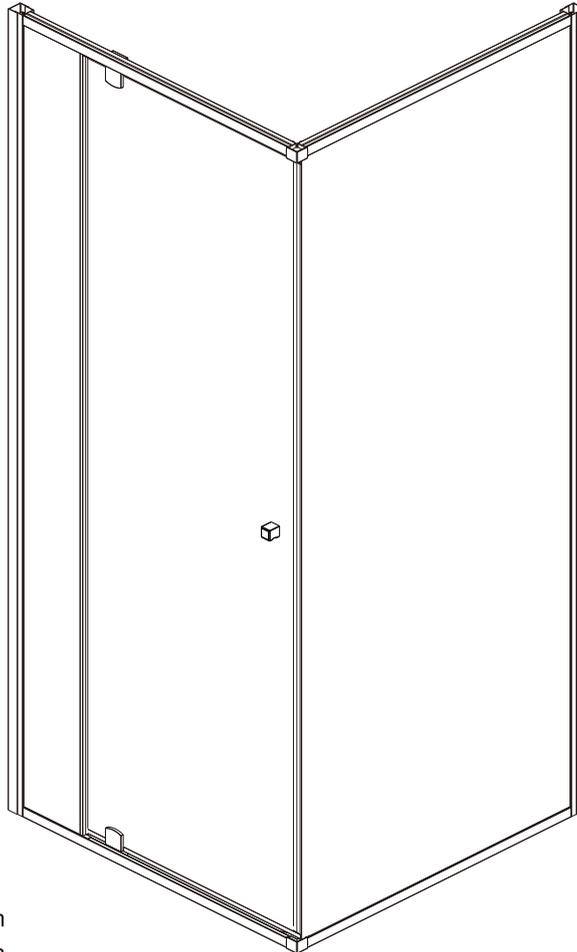

### External Dimensions

(860-875) x (860-875) x 1830mm

(860-875) x (860-875) x 2000mm

(1160-1175) x (860-875) x 2000mm



### **Please read the following guidelines carefully prior to attempting installation.**

This product is made of toughened glass which requires special handling. We recommend professional tradesman with experience in handling glass. Mishandling of the glass causing shattering or other damage is not covered by warranty.

### **Protective Equipment**

It is recommended to wear safety glasses and gloves. Ensure the gloves provide adequate grip to prevent slippage.

### **Storage**

Do not stand or lay the glass on hard surfaces. Use a thick blanket or similar to protect the glass. Some glass panels may come with rubber corner guards. It is recommended to keep these on the glass until installation is completed.

### **Temperature**

Toughened glass ideally needs to be at room temperature to minimise the possibility of shattering. Store the glass in the house at least one day before planned installation.

### **Handling**

It is important to be mindful of the edges of the glass. Over time, due to the glass expanding and contracting, small chips could result in the entire panel shattering. Do not torque the panel in any way (e.g. lifting up one corner when the panel is laying flat). Do not stand or tilt the panel with all the weight resting on one corner. The glass panels are heavy and assistance from another person is recommended. Heavy duty suction cups can also be used to assist in lifting and moving the glass.

# GENERAL INFORMATION

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later cannot be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.

**Note: Safety glass cannot be re-worked.**

Please read these instructions carefully before start of installation.  
Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.  
Note: This product is heavy and may require two people to install.







## Care and Maintenance

A regular weekly use of warm soapy water or mild detergent and a clean microfibre cloth followed by a rinse of clean water. Note: No bleaches, solvents, alcohol, citrus based chemicals, bath oils, bath salts, or abrasive cleaners should be used.

Please keep these instructions for future reference.






---

## Tools Required

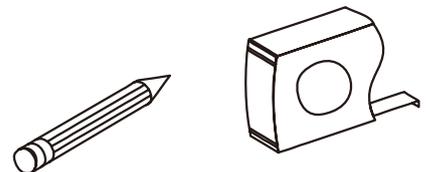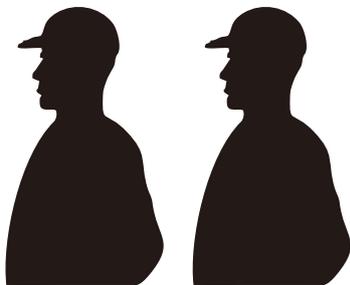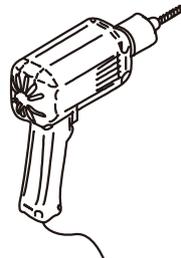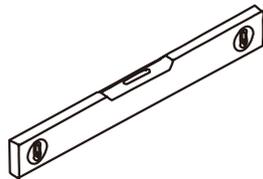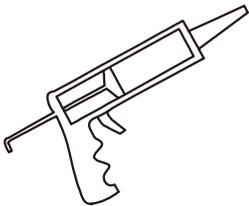


**This product is heavy and may require two people to install.**


# BOX CONTENTS

[1] 1 x Installation Instructions	➔	
[2] 8 x Wall Plugs	➔	
[3] 2 x Wall Profiles	➔	
[4] 8 x Screws ST4x30	➔	
[5] 8 x Screws ST4x10	➔	
[6] 12 x Screw Caps	➔	
[7] 2 x Vertical Weather Seal	➔	
[8] 1 x Pivot Door	➔	
[9] 2 x Pivot Cover Caps	➔	
[10] 2 x Bottom Seals	➔	
[11] 2 x Corner Brackets	➔	

# BOX CONTENTS

[12] 1 x Side Panel		
[13] 2 x Magnetic Seals		
[14] 1 x Handle		
[15] 4 x Screws ST4x6 (Flat End)		

# ASSEMBLY DIAGRAM

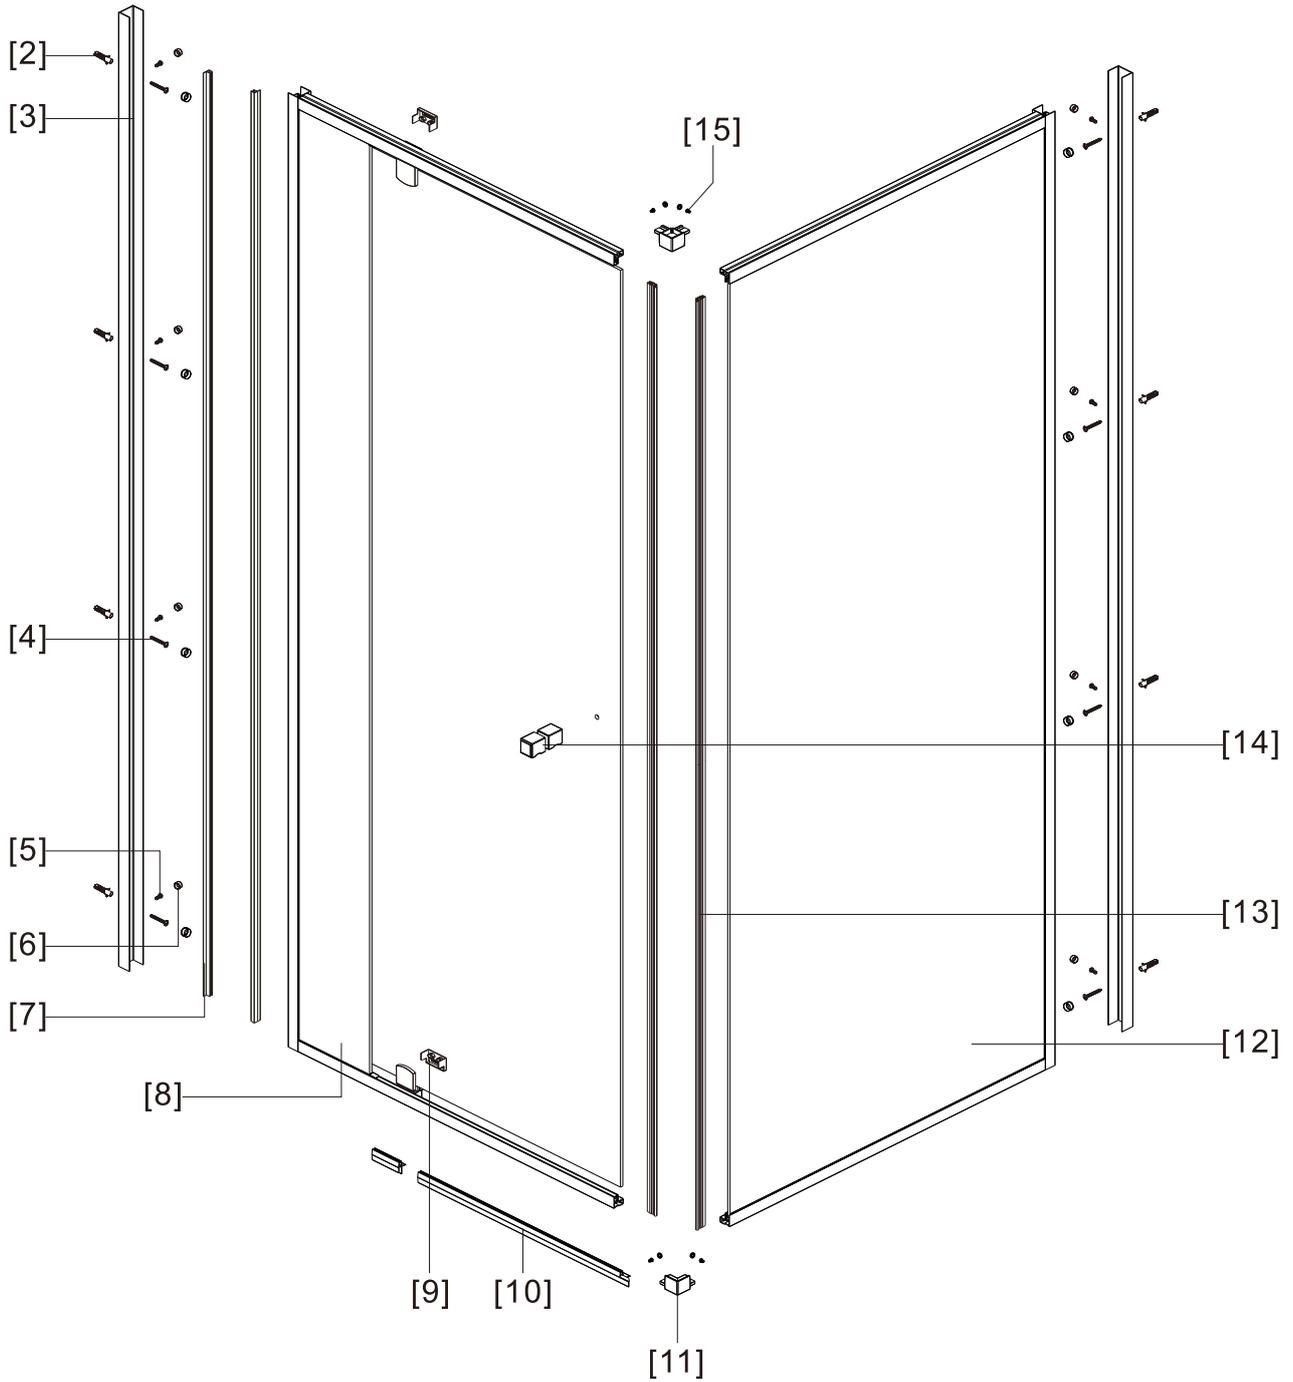

- [2] 8 x Wall Plugs
- [3] 2 x Wall Profiles
- [4] 8 x Screws ST4x30
- [5] 8 x Screws ST4x10
- [6] 12 x Screw Caps
- [7] 2 x Vertical Weather Seals
- [8] 1 x Pivot Door



- [9] 2 x Pivot Cover Caps
- [10] 2 x Bottom Seals
- [11] 2 x Corner Brackets
- [12] 1 x Side Panel
- [13] 2 x Magnetic Seals
- [14] 1 x Handle
- [15] 4 x Screws ST4x6 (Flat End)

# INSTALLATION STEPS

## Step 1

- Mark wall fixing position.
- Drill wall and screw to the wall.

Note: Please ensure the shower base is level and the walls plumb prior to installation.

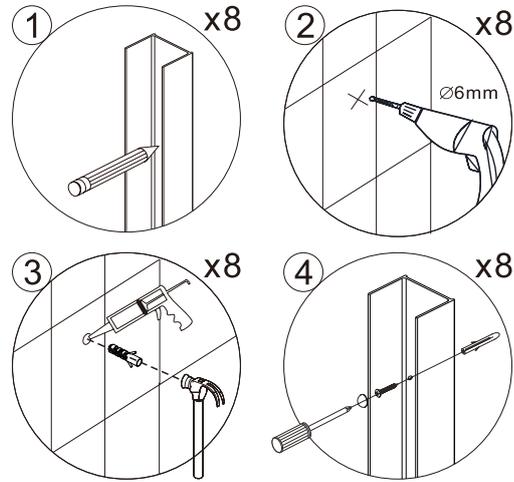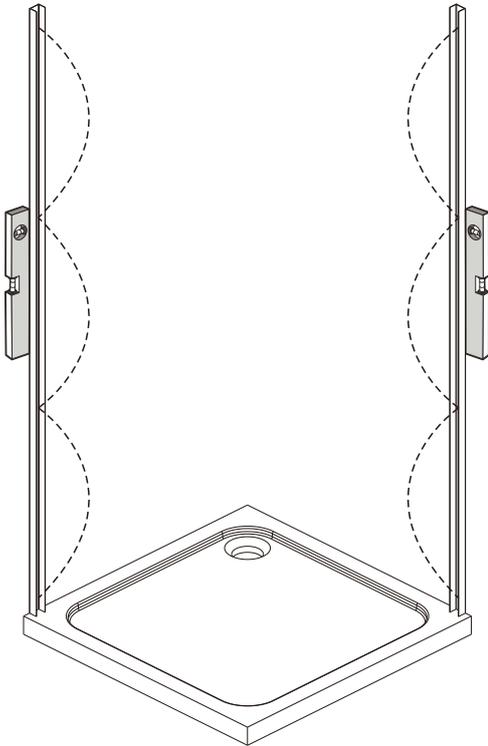


Measurement table

DOOR & RETURN	DOOR SET	RETURN PANEL
875 x 875 x 1830mm	860-875	860-875
875 x 875 x 2000mm	860-875	860-875
875 x 1175 x 2000mm	1160-1175	860-875





## Step 2

- Slide shower door onto tray.

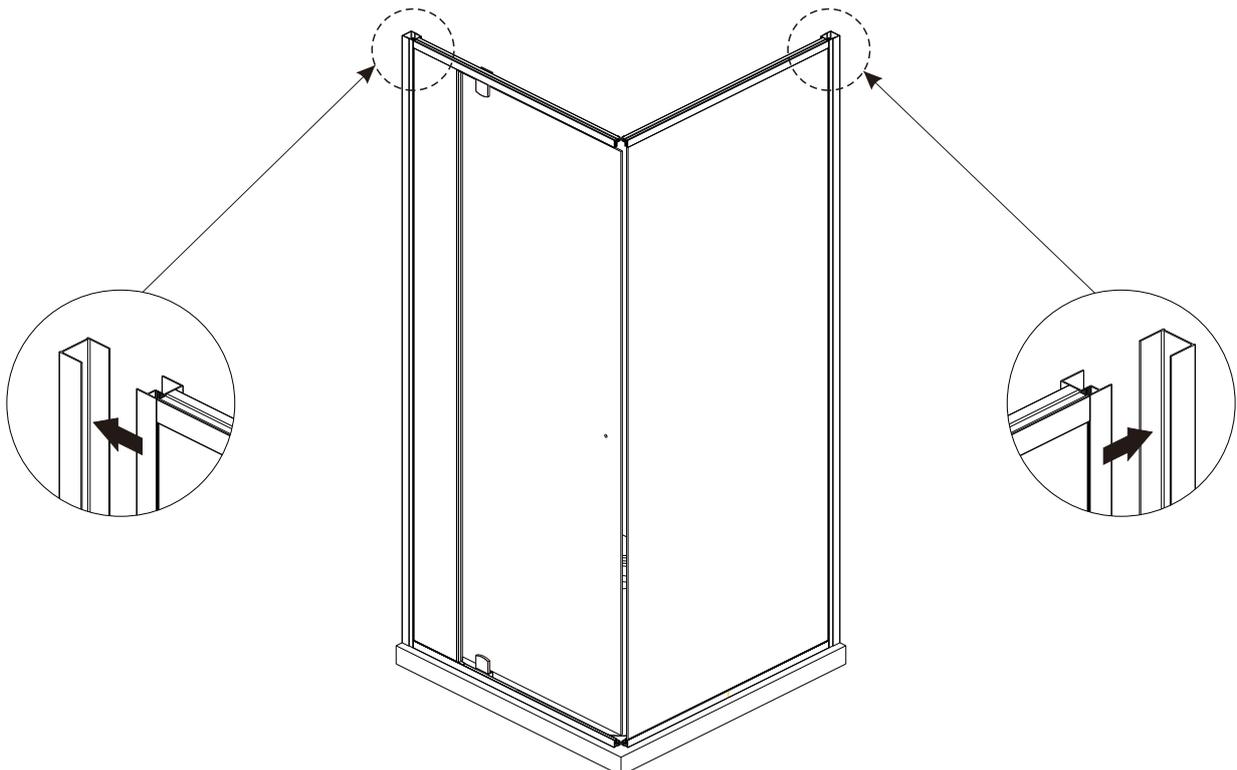







### Step 3

- Fixing corner bracket.

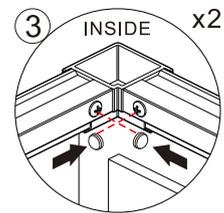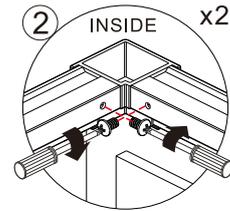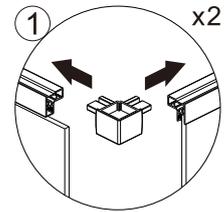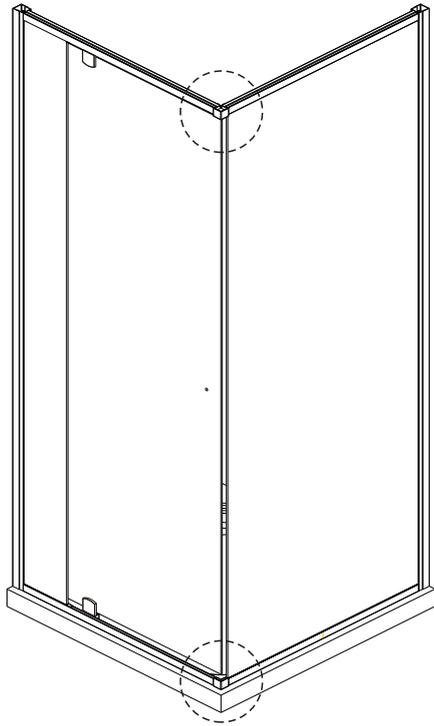


### Step 4

- Fixing door frame to the wall profiles

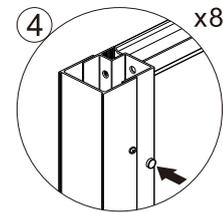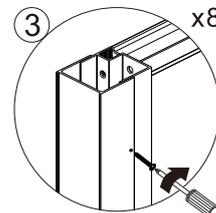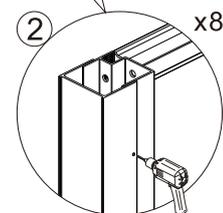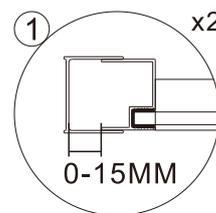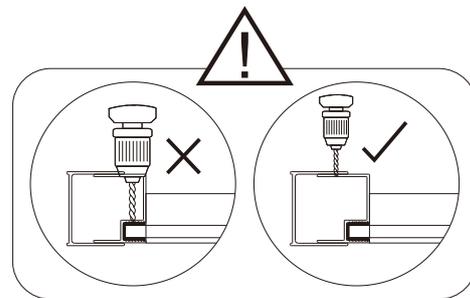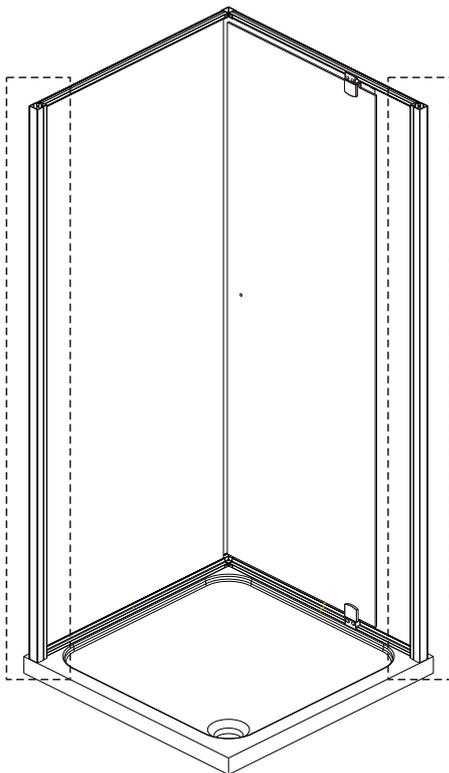


## Step 5

- Fixing seals and magnetic seal.

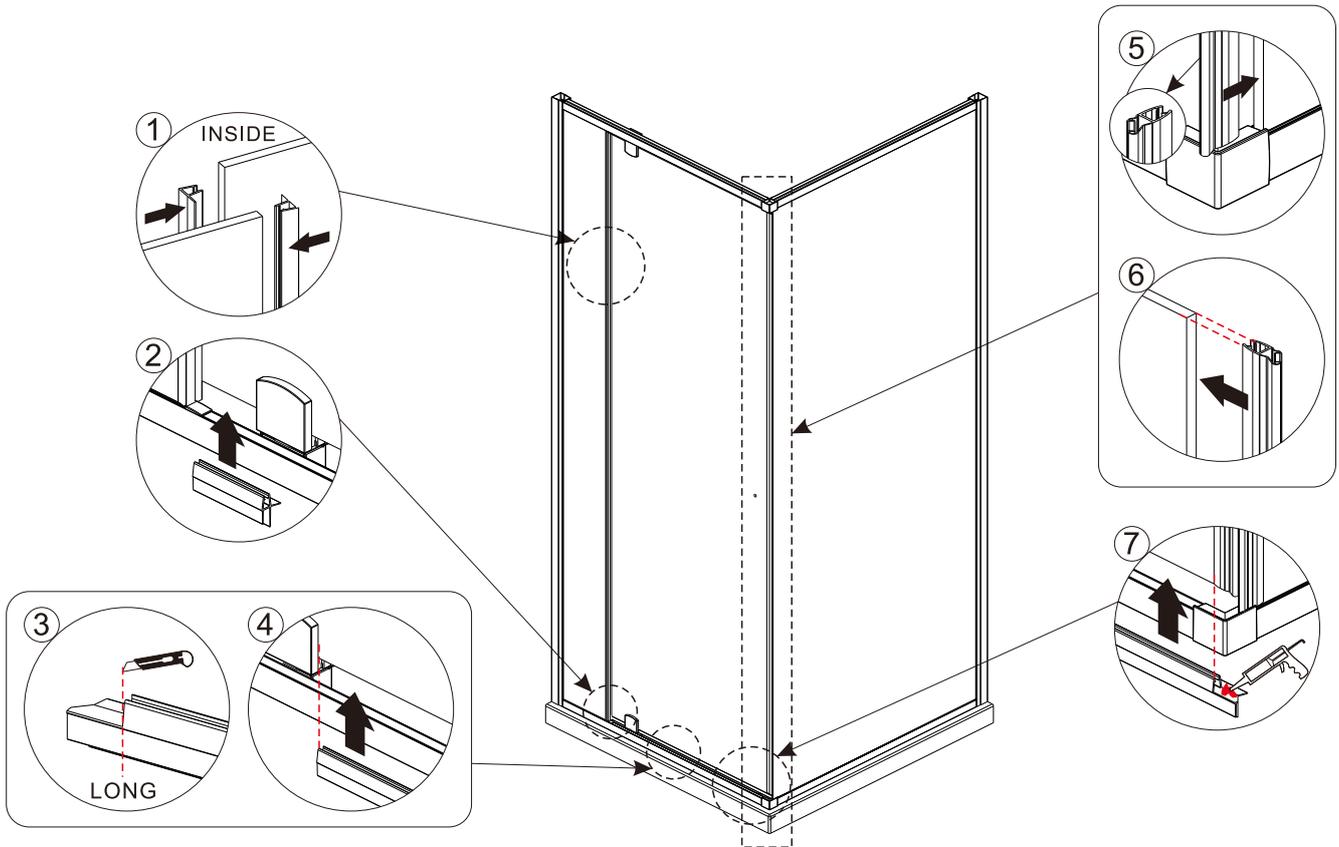


## Step 6

- Fixing pivot cover caps, handle.

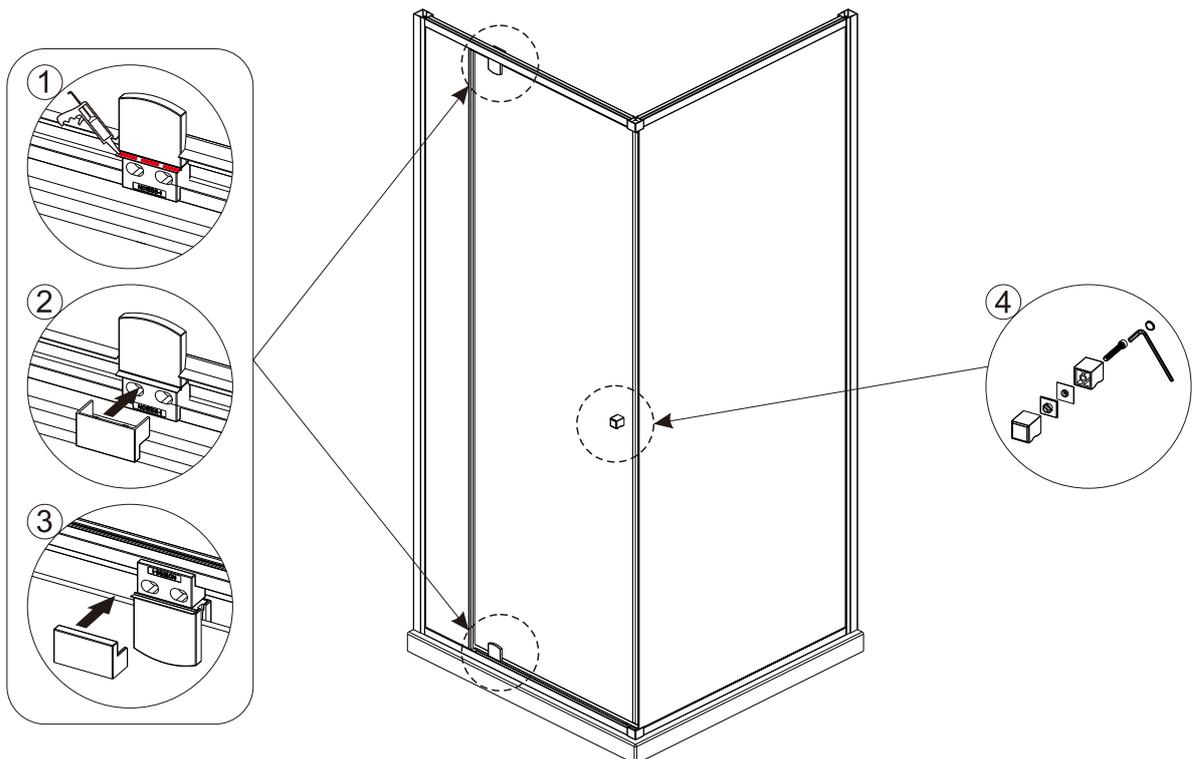

## Step 7

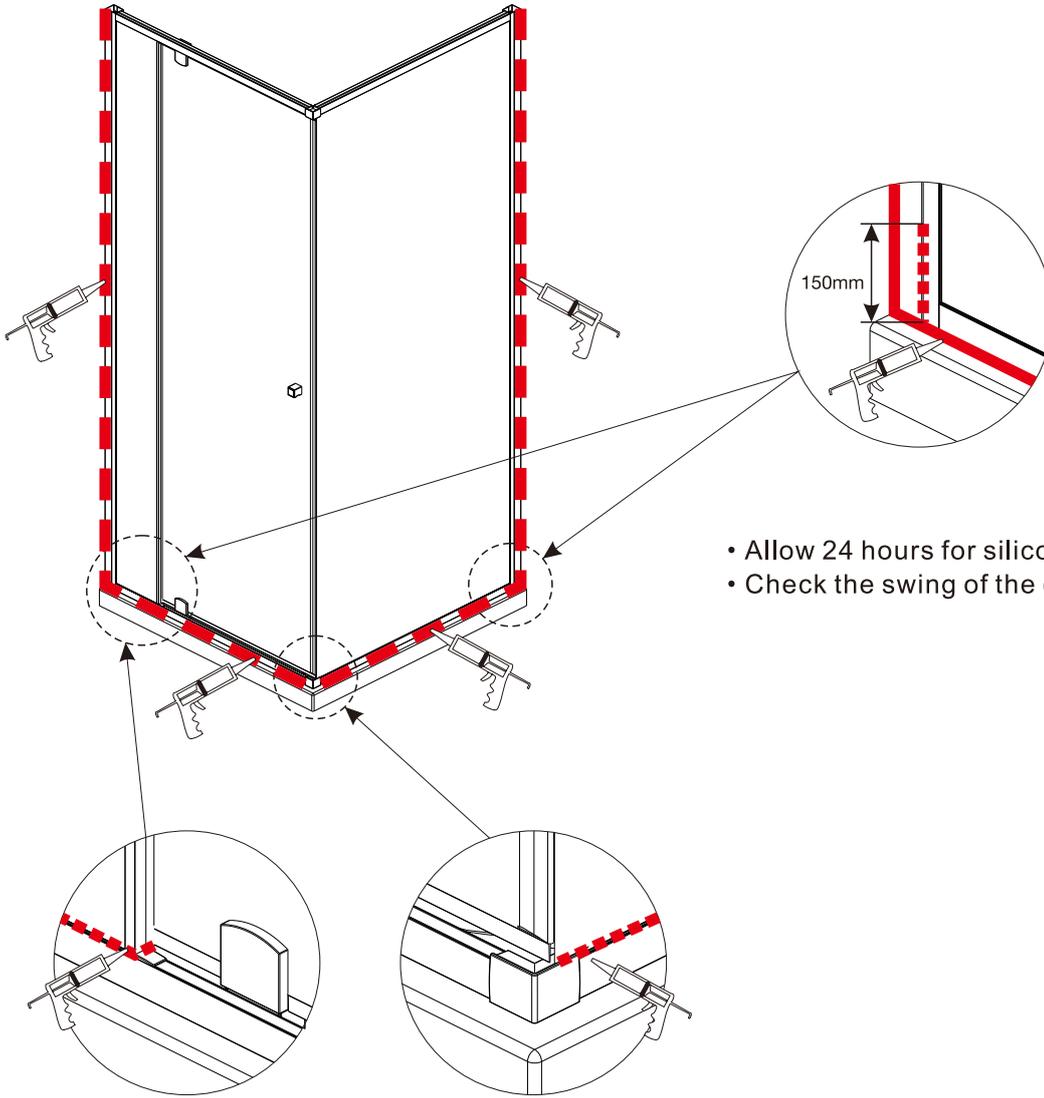

- Allow 24 hours for silicone to dry before use.
- Check the swing of the door.