


INSTALLATION INSTRUCTIONS

Shower Panel Frameless - MON9747, MON9730 875mm / 1175mm

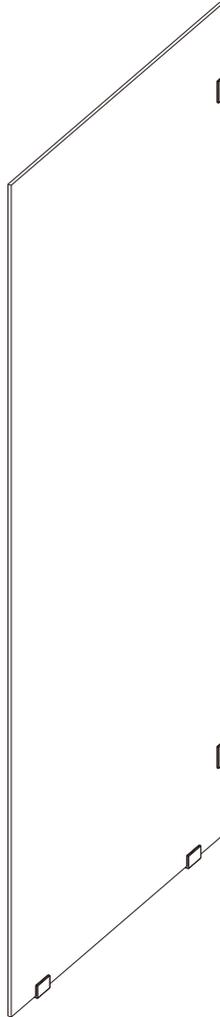

Please read the following guidelines carefully prior to attempting installation.

This product is made of toughened glass which requires special handling. We recommend professional tradesman with experience in handling glass. Mishandling of the glass causing shattering or other damage is not covered by warranty.

Protective Equipment

It is recommended to wear safety glasses and gloves. Ensure the gloves provide adequate grip to prevent slippage.

Storage

Do not stand or lay the glass on hard surfaces. Use a thick blanket or similar to protect the glass. Some glass panels may come with rubber corner guards. It is recommended to keep these on the glass until installation is completed.

Temperature

Toughened glass ideally needs to be at room temperature to minimise the possibility of shattering. Store the glass in the house at least one day before planned installation.

Handling

It is important to be mindful of the edges of the glass. Over time, due to the glass expanding and contracting, small chips could result in the entire panel shattering. Do not torque the panel in any way (e.g. lifting up one corner when the panel is laying flat). Do not stand or tilt the panel with all the weight resting on one corner. The glass panels are heavy and assistance from another person is recommended. Heavy duty suction cups can also be used to assist in lifting and moving the glass.

GENERAL INFORMATION

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later cannot be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.

Note: Safety glass cannot be re-worked.







Please read these instructions carefully before start of installation.
Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.
Note: This product is heavy and may require two people to install.

Care and Maintenance

A regular weekly use of warm soapy water or mild detergent and a clean microfibre cloth followed by a rinse of clean water. Note: No bleaches, solvents, alcohol, citrus based chemicals, bath oils, bath salts, or abrasive cleaners should be used.


Please keep these instructions for future reference.

Tools Required

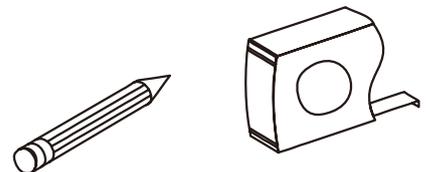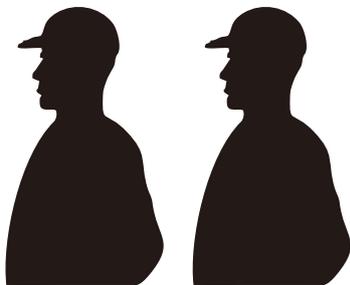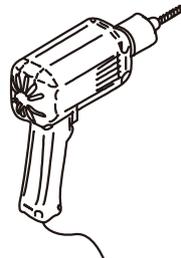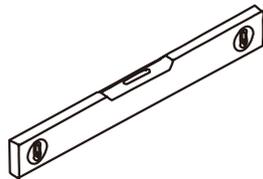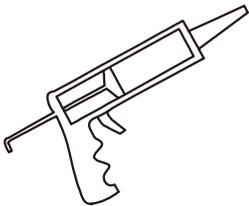


This product is heavy and may require two people to install.

BOX CONTENTS

[1] 1 x Installation Instructions		
[2] 4 x Floor Brackets		
[3] 1 x Return Panel		

ASSEMBLY DIAGRAM

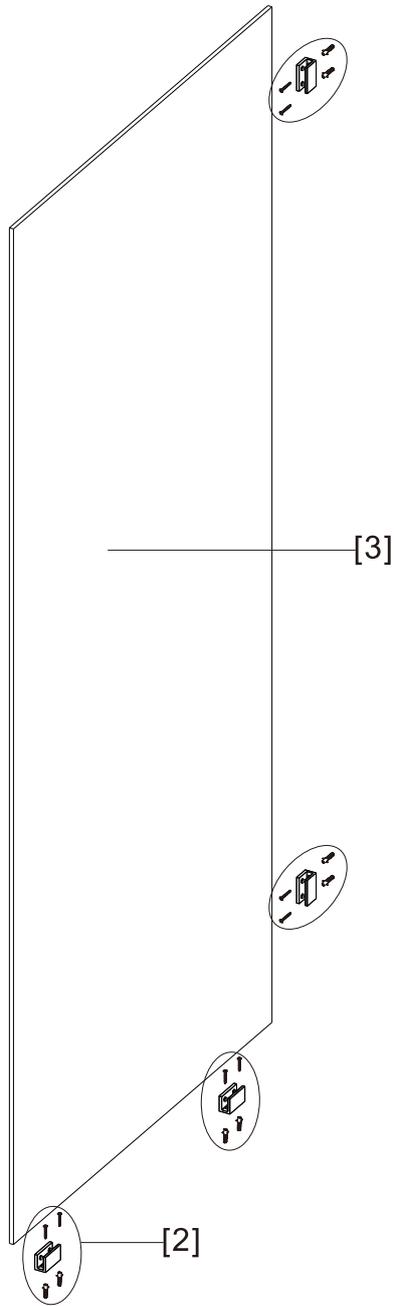


[2] 4 x Floor Brackets

[3] 1 x Return Panel


INSTALLATION STEPS

Step 1

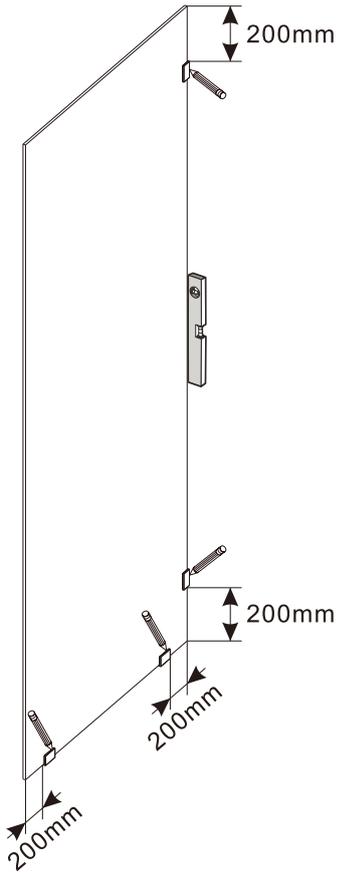


- Check that the wall and floor are square. Walls/foors that are out of square may need to be packed out so that the door can be installed correctly.
- Place the floor brackets onto the bottom and wall side of the fixed panel.
- Place the fixing panel into the desired position, then use a pencil to mark the position of the brackets. Check to ensure that the panel is square and level in all directions.
- We recommend that the brackets are installed approximately 200mm from the edges of the panel, as shown.


Step 2

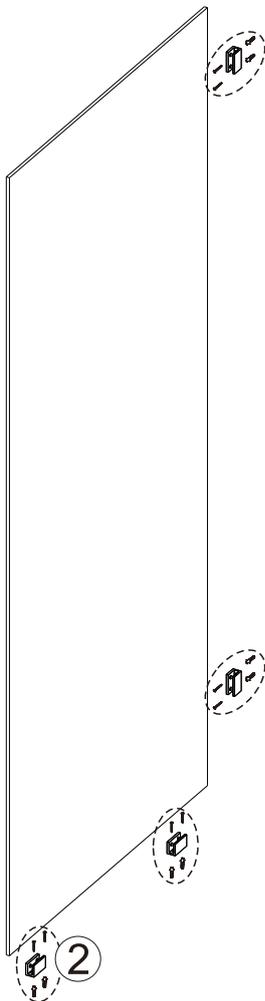

- Remove the fixing panel from the area, ensuring it is safely stored. Remove the brackets from the panel.
- Place the brackets back into the marked positions, then mark the drill locations in the floor and wall. Drill holes to suit the provided plugs.
- Place a dab of silicone into the drilled holes, then insert the plugs. Run a bead of silicone under the brackets, then secure them to the wall and floor by tightening the screws.
- Carefully position the fixing panel into the floor brackets.
- Carefully slide the panel into the floor brackets.
- Tighten the screws to secure the fixing panel to the wall and floor. **Do not overtighten.**

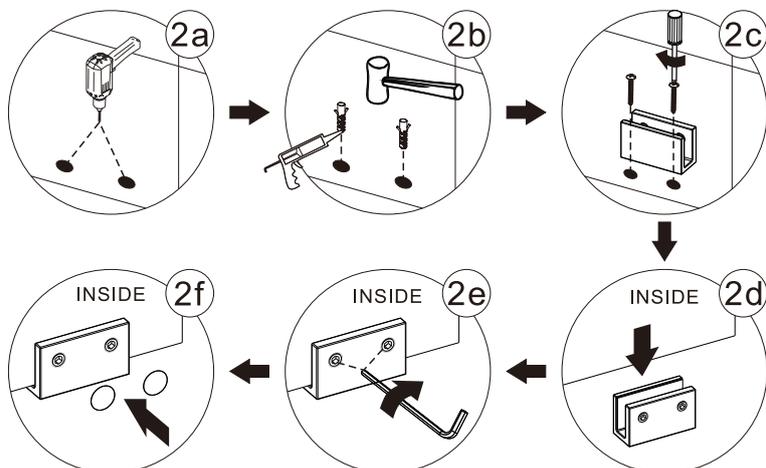

Step 3

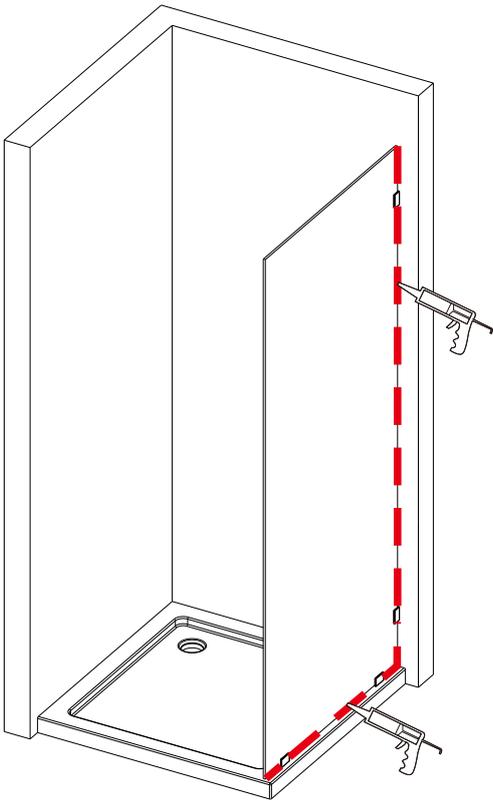

- Run a bead of silicone along the edges of the panel as shown.
- Allow 24 hours for silicone to dry before use.