

# Remsafe Patio Bolt



- ✓ Suitable for aluminium and timber sliding and hinged doors (Internal use only)
- ✓ Easy DIY installation
- ✓ Reversible bolt for left and right-handed installations

## The Remsafe Patio Bolt is supplied with:


1 x Bolt lock body	2 x 4.8 x 30mm timber screws (for lock body)
1 x locking bolt	2 x 4.8 x 25mm self-drilling screws (for lock body - aluminium frame installations)
1 x packing plate	2 x 3.7 x 25mm timber screws (for ferrule or strike plate)
2 x keys	2 x 4.2 x 25mm self-drilling screws (for aluminium frame installations)
1 x strike plate	
1 x ferrule	

## Installation:

1. Choose your desired installation position according to your door type. The Patio Bolt may be installed at either the top and/or bottom of sliding, hinged or patio doors.



**HINGED DOOR**

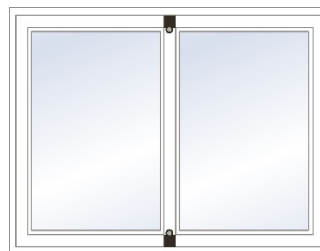

**SLIDING DOOR**

2. Prior to installation, unclip the cover plate from the back of the lock body. Lift the cover plate off to expose the bolt.
3. Unlock the locking bolt with the key. Simultaneously depress the spring-loaded chrome plate and pull the bolt out of the lock body.
4. With the cover plate and bolt removed, hold the lock body in position against the door. The bolt is reversible to allow for installation in either orientation.  
Once in position, mark the fixing holes with a pencil.
5. Drill 2.5 mm pilot holes for the fixing screws.
6. Attach the lock body to the frame using either the timber gauge or self-drilling screws provided. Self-drilling screws are to be used on aluminium frames only.  
If required, install the packing plate for added clearance and strength when the bolt is in the locked position.
7. With the door closed, insert the bolt through the lock body and gently tap the top of the bolt head to mark the bolt position on the frame above or below. Drill the hole for the locking bolt using a 12 mm drill bit.
8. To install the ferrule over the bolt hole, hold the ferrule in position and mark the fixing holes with a pencil. Drill the holes for the fixing screws using a 1.5 mm drill bit.
9. Attach the ferrule over the bolt hole with the ferrule screws provided. Self-drilling screws are to be used on aluminium frames only.

\*For hinged doors where the locking bolt does not engage the door frame, use the strike plate provided instead of the ferrule, to capture the bolt when in the locked position.

Hold the strike plate in the position required to capture the bolt when the door is closed. Mark the fixing holes with a pencil. Drill the fixing holes with a 1.5 mm drill bit and secure the strike plate in position with the screws provided.

10. Test the lock for correct positioning and re-attach the cover plate to the lock body.
11. Check the operation of the lock to ensure the bolt engages and does not interfere with the opening or closing of the door.  
\*\* For added security, it is recommended to install a lock at both the top and bottom of the door  
\*\*The Remsafe Patio Bolt is for internal use only

# Remsafe Patio Bolt



## Maintenance:

The manufacturer recommends maintenance is carried out on Remsafe products by a licensed tradesman every twelve (12) months. In addition, it is recommended that regular checks (every three to six months) are carried out by the user of each window safety device at the time of operation. Repeated force on a Remsafe lock or safety device may lead to general wear and tear and/or cause screws to become loose.

Consideration must be given to the local environment and maintenance carried out accordingly.

1. All screws must be checked to ensure they have not loosened. Loose screws must be tightened.
2. All lock components must be checked for any signs of corrosion, cracking, or loss of function. Any locks showing signs of corrosion, cracking, or loss of function must be replaced immediately.
3. All components must be checked to ensure against excessive movement. Any lock showing excessive movement must be replaced immediately.
4. If a window is able to be opened greater than 100 mm at any point a licensed tradesperson should be consulted for advice on the most appropriate window restrictor device for each window.

Warning: Window falls may result in injury or death. Falls from heights may still occur through windows with safety devices installed. To prevent falls from heights, climbable elements should be removed from below windows and children should be supervised around openable windows.

**NEVER LEAVE THE KEY UNATTENDED IN ANY REMSAFE WINDOW LOCKS PRODUCT.**

**Remsafe Window Locks offer safety solutions for all window types.**

**Contact us for orders and enquiries on +61 2 9453 5625, email [info@remsafewindowlocks.com.au](mailto:info@remsafewindowlocks.com.au)  
or visit [www.remsafewindowlocks.com.au](http://www.remsafewindowlocks.com.au)**