

DECORATIVE PANEL

PLANTATION 1800x600x7.5mm

THERMAL EXPANSION AND CONTRACTION

All plastic products will expand and contract with changes in temperature. If during installation no allowance is made for this, damage to the panel may result, which will void the warranty.

We recommend installation using the Matrix Screen Mounting Kit or C-Channel Frame Kit according to the instructions in the kit. Alternatively drill eight to ten 12mm holes and use screws with 20mm washers to cover the holes. For best appearance, paint the screws and washers black before use.


IMPORTANT: Position each screw at the top of its hole and do not tighten it fully. If the screen buckles in the heat, then the screws are too tight or incorrectly positioned. Release or reposition them to allow movement. To avoid distortion, store the panel flat.



Design Flow Pty Ltd
Ph. 1300 361 771
8 Silkwood Rise

Carrum Downs VIC 3201
www.designflow.com.au
sales@designflow.com.au

B-PL1806-CH

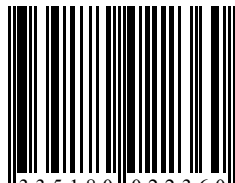

9 335180 022360

