


HOW TO INSTALL YOUR MATCHSTICK BLIND

1

Measure the Window:


Hold your blind up to the window. Mark on timber frame where the blind hooks will hang. Drill small pilot holes where marked.

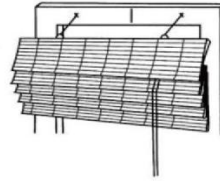

2

Install Screw Hooks:


Install the screw hooks into the small holes you drilled. If necessary use a pair of pliers to tighten the screw hooks.

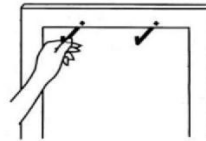

3

Hang the Blind:


The width of the blind may be trimmed with a fine tooth saw to fit your window prior to hanging. Hang the blind onto the hooks with cords protruding through the hole facing the room.

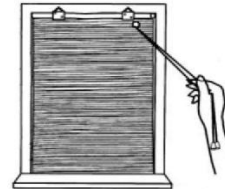

4

Install the Cleat:

Secure the cleat in a suitable location beside the blind where it will not interfere with blind operation. Simply pre-drill holes for screws to attach cleat. Whilst the blind is fitted with an auto-lock pulley it is advisable to use the cleat for any excess cord. The cleat must be 1.6mtrs off the ground.

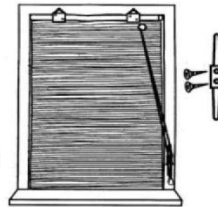

⚠️ WARNING

1. A cord guide may be installed lower than 1600mm above floor level if the cord is sufficiently secured or tensioned to prevent a loop 220mm or longer from being formed.
2. If a cord guide is installed lower than 1600mm above floor level it must be designed to prevent a child from being able to remove the cord.
3. If a cleat is used to secure the cord it must be at least 1600mm above floor level because a child is capable of unwinding a cord from a cleat.

⚠️ WARNING

To avoid creating a possible strangulation hazard for children, the corded internal window covering must be installed in such a way that a loose cord cannot form a loop 220mm or longer at a height of less than 1600mm above floor level.