
LUGNA FUNCTION

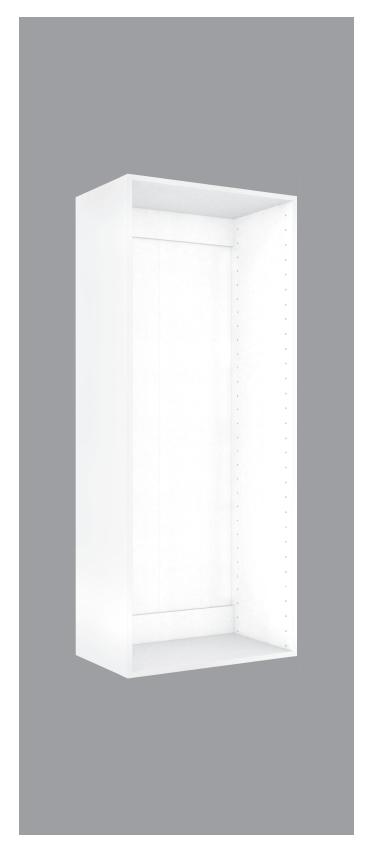

ASSEMBLY INSTRUCTIONS

CABINET SHELL

HEIGHT 512mm

HEIGHT 768mm

HEIGHT 1024mm

LUGNA understands the importance of timeless style and practical durability for a home's form and function. Our European-inspired collection is simple and easy to use, with five modern colours that complement any style and space. LUGNA's modular system allows for endless configurations and additions, with various-sized cabinets, drawers, shelving, and hinged doors that can be combined to create a bespoke look on any budget. Whether you're looking for something modern and sleek or classic and elegant, LUGNA has something for everyone.









WARNING

Serious injury or death can be caused by toppling furniture. Attach unit to wall using safety bracket provided. Fix bracket in middle of unit with 16mm screw. Fix to wall stud using 25mm screw. For other wall types use suitable fixings (not provided).

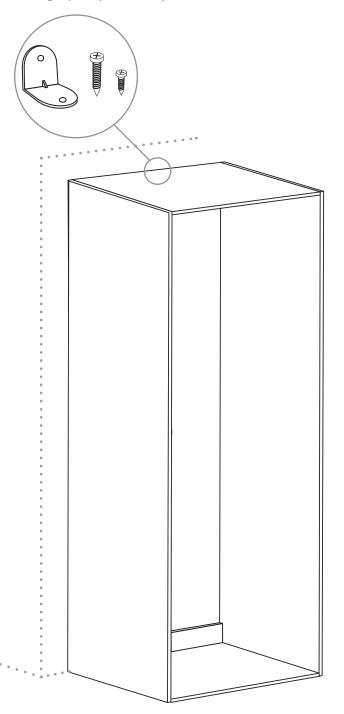


What you will need

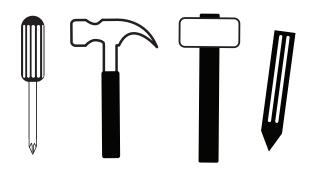

Before Commencing!

If fitting drawers, this can impact on the location of the fixed shelf. Please refer to instructions included with drawers before

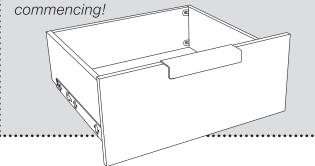


Carpet Floors


When installing the cabinet on carpet floors, the carpet can prevent the bottom drawers or doors from opening. To fix this, raise the cabinet slightly by installing the optional foot mounts at the cabinet's bottom flush with the cabinet sides.



WARNING!
Do not screw
foot mounts
to the base.
Position the
foot mounts
to take the
weight of the
cabinet sides.

Includes

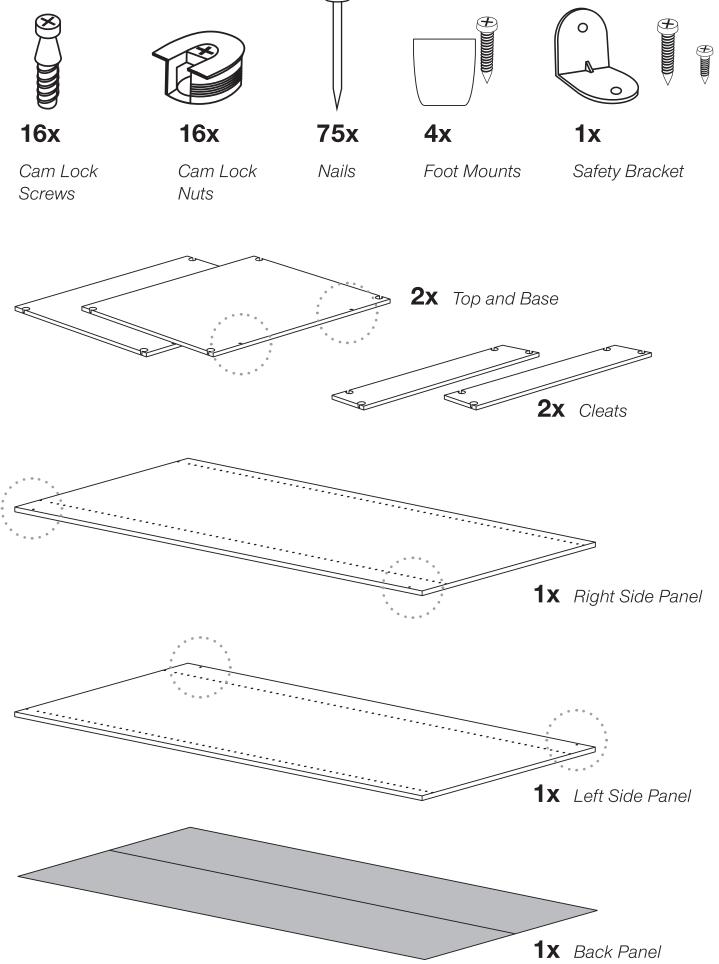

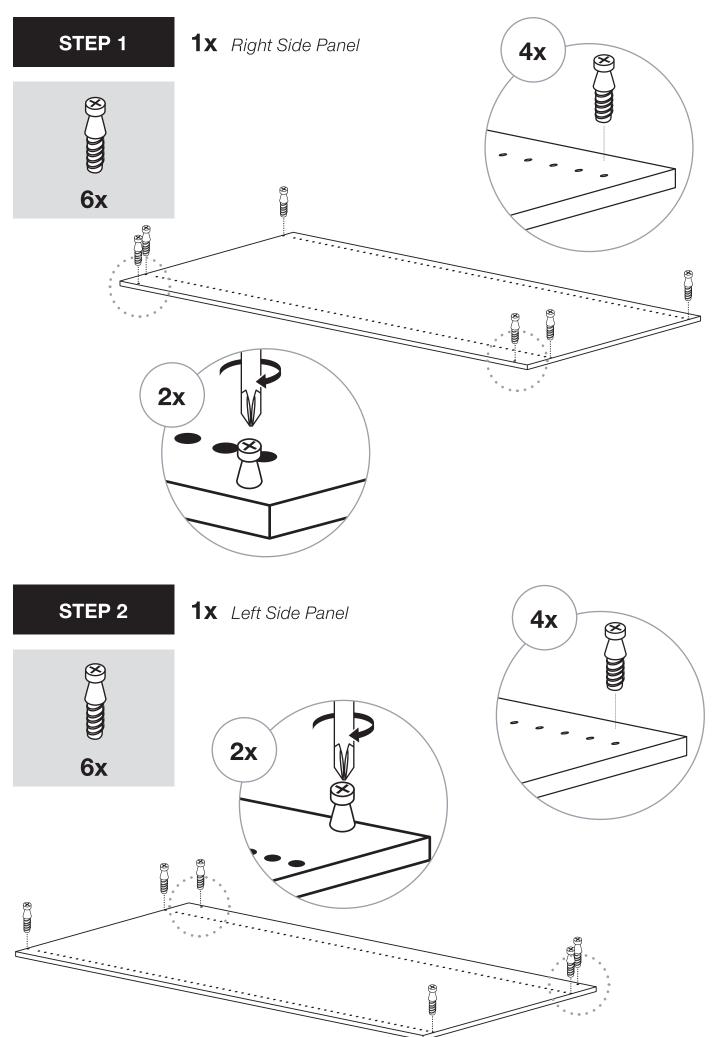




2x Top and Base



4x




8x

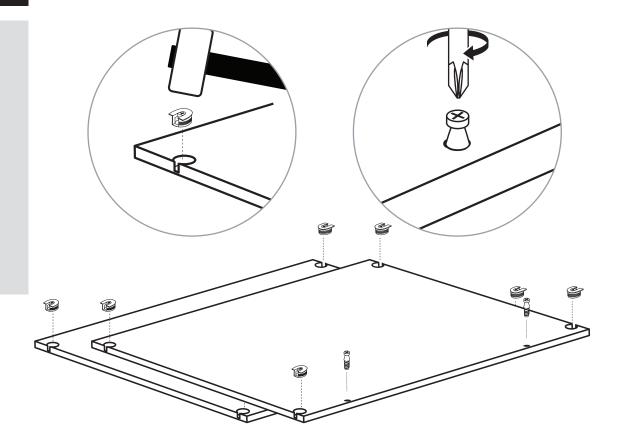


STEP 4



8x

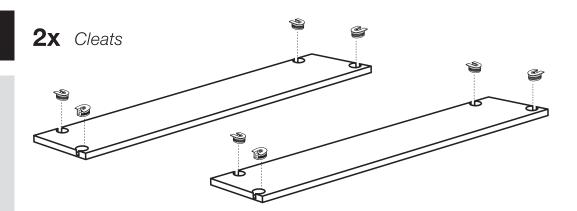


Rotate the Left Side Panel 90° – so that the two additional Cam Lock Screws are on the floor.

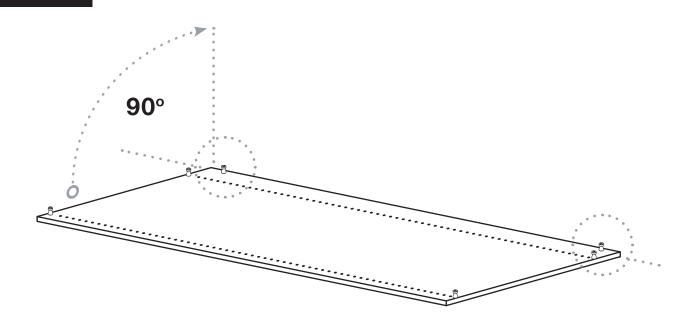


STEP 6

On the under side align the Top, Base and Fixed Shelf with the Cam Lock Screws. Tighten with a phillips head screwdriver.

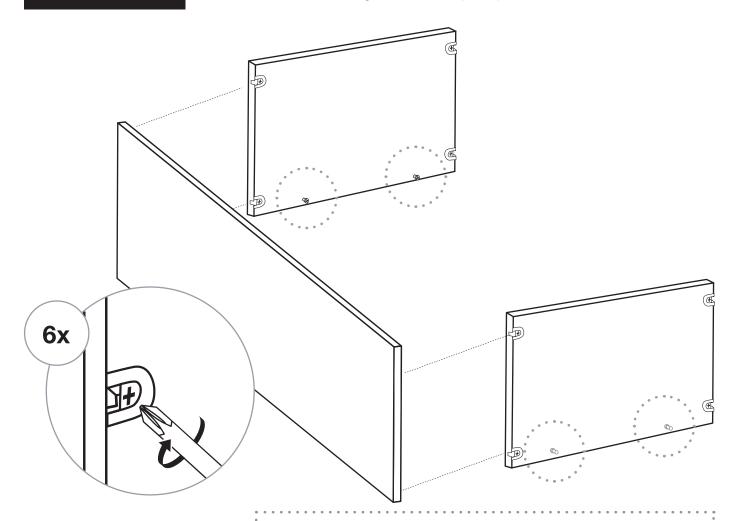


Note – The Cam Lock Screws on the Top and Base should point to the inside of the cabinet. Rotate the panels so that the Cam Lock Screws are on the floor.


Rotate the Right Side Panel 90° – so that the two additional Cam Lock Screws are on the floor.

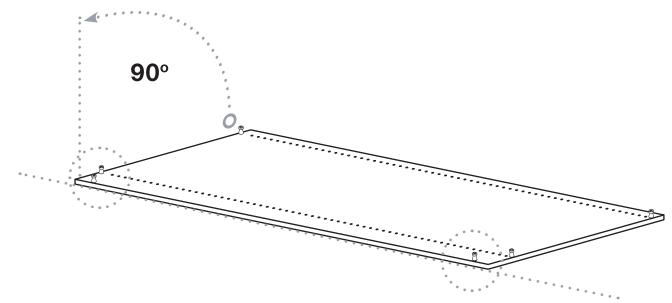


STEP 8

On the under side align the Top, Base and Fixed Shelf with the Cam Lock Screws. Tighten with a phillips head screwdriver.

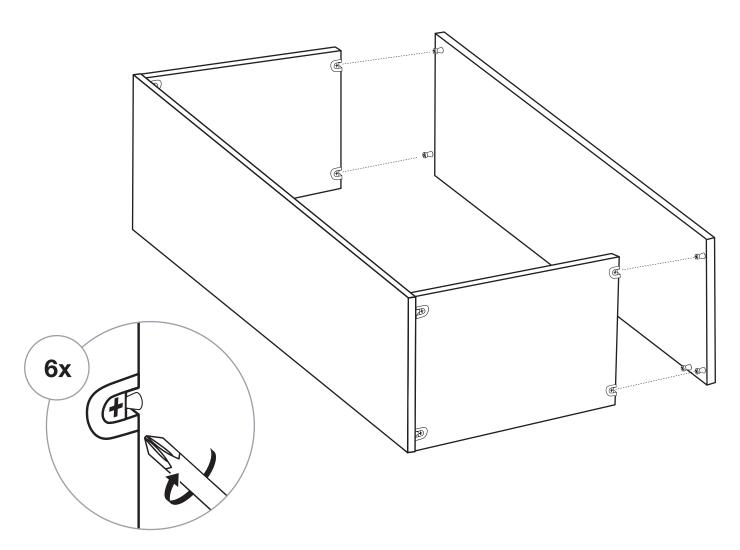


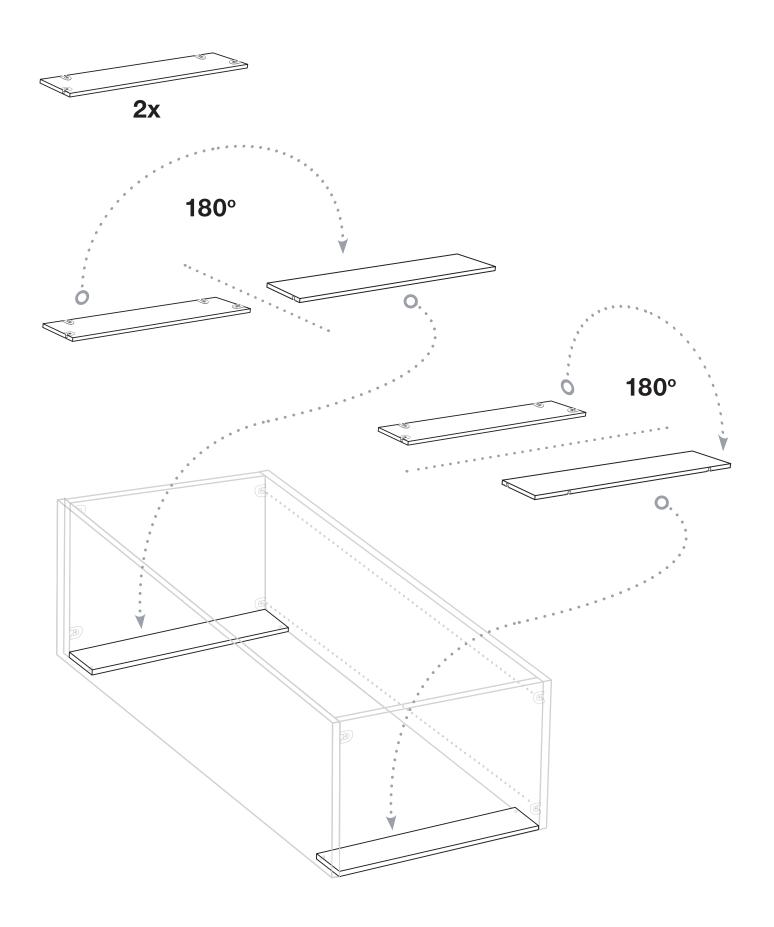

Rotate the cabinet 90 $^{\circ}$ onto a side panel - to see the back of the cabinet.

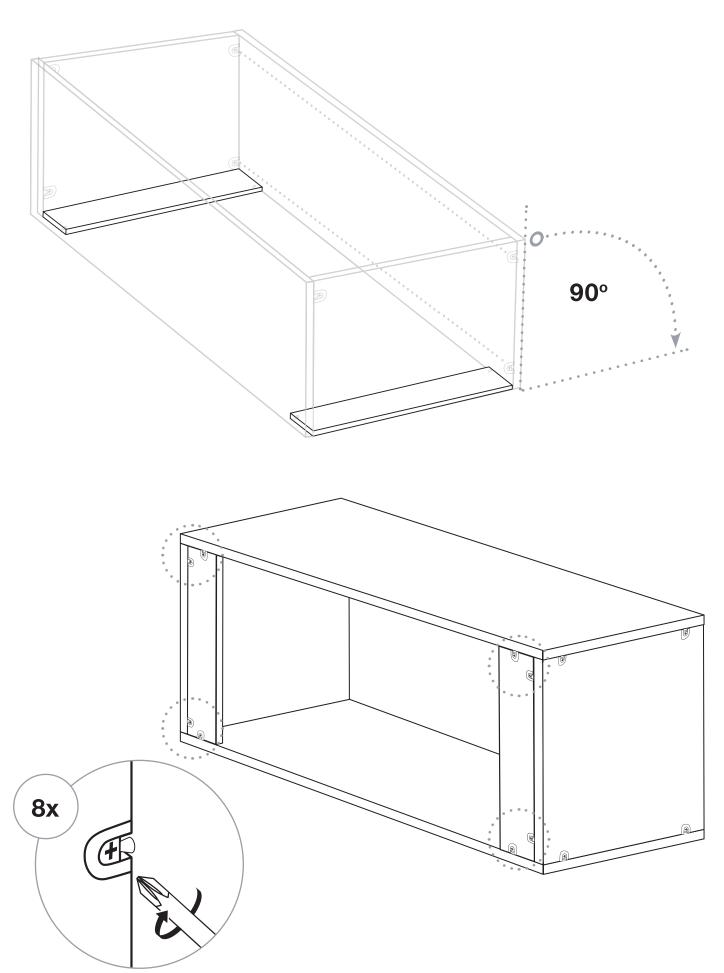



Rotate the cabinet 90° on to it's front - so that the back of the cabinet is facing up.

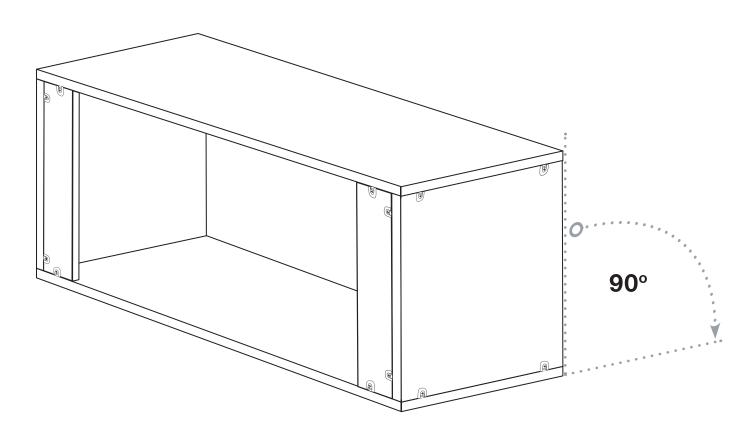

STEP 12

Place Backing Panel on to the back of the cabinet.

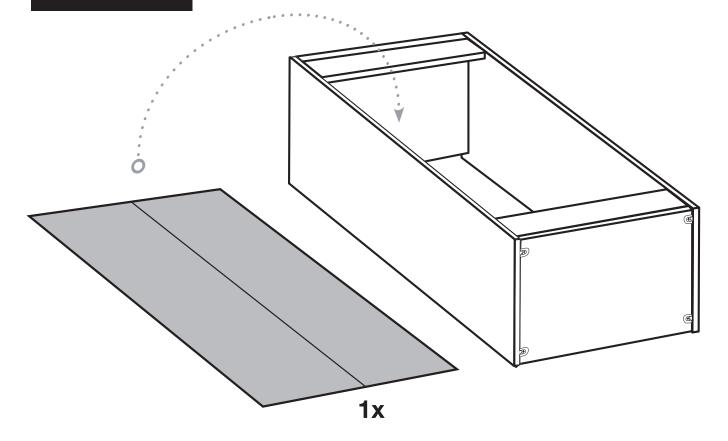

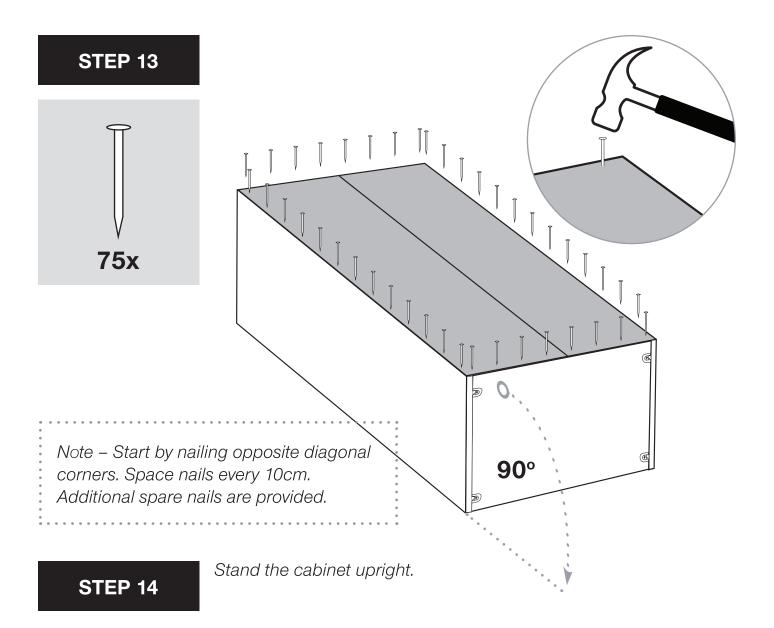



The assembled cabinet will be heavy.

For your safety, a minimum of two people is recommended to lift the cabinet upright. Bend your knees and lift with your legs - not your back!

LUGNA FORM & FUNCTION

CABINET CARE INSTRUCTIONS

Everyday care for your cabinets:

Liquid spills should be cleaned up as they occur. Liquids and other damp objects, i.e. towels, will eventually cause permanent damage should they be left unattended.

Everyday clean-up of cabinets can be done with a damp cloth and a dry cloth. Ensure you use a clean cloth every time when wiping down your cabinets, as foreign dirt, grease, and oils may inadvertently be transferred to the surface.

Cleaning melamine products:

Oils, grease, and other soils that do not respond to water can be removed with a solution of mild soap and water. The surface should be rinsed immediately with a clean, damp cloth and dried thoroughly with a soft cloth to avoid streaking or moisture seeping into the seams around the edges.

PLEASE NOTE: Never use abrasive cleaners, ammonia, bleaching agents, scouring pads or powdered cleaners on any type of cabinetry.

Cleaning cabinet hardware:

Brass and Silver cleaners are not recommended for cleaning handles. Some of these cleaning solutions contain harsh chemicals that may damage the finish on your handles.

Wash your hardware with a solution of warm water and a small amount of mild dish detergent. Dry your hardware and areas around the cleaned area immediately.

Hinges can be cleaned with a dry cloth or cottontipped swab.