



3.00mW x 1.52mD x 1.80mH, 2.08mH





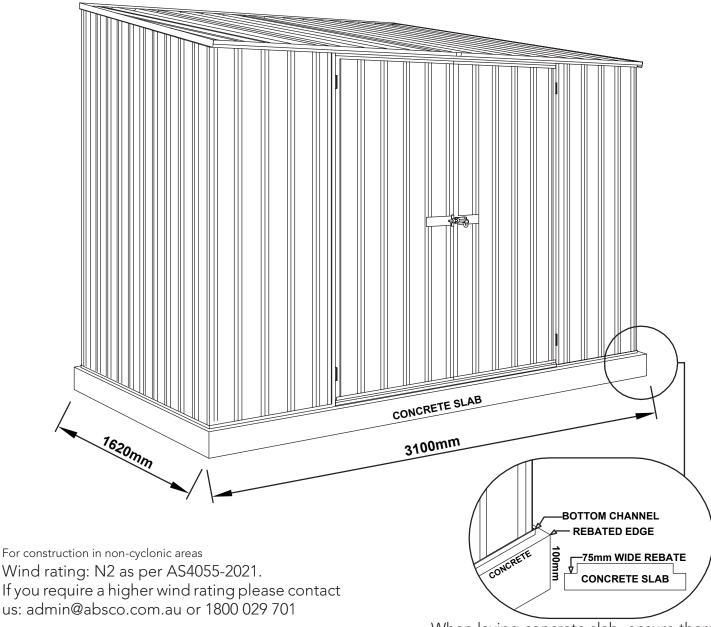

NOTE: This shed can be upgraded to wind rating: C1 as per AS4055-2021 with the additional purchase of a Cyclone Kit.



DOWNLOAD OUR APP FOR ASSEMBLY VIDEOS



When laying concrete slab, ensure there is a rebated edge 25mm deep around the perimeter. This will help water egress from the base of the shed.

PLEASE LEAVE A REVIEW

Tell us about your experience! Visit www.abscosheds.com.au/review

1.5



3.00mW x 1.52mD x 1.80mH, 2.08mH

GENERAL INSTRUCTIONS

- Before commencing any assembly, read through these instructions in detail to gain a thorough understanding of assembly methods and associated details.
- Unpack the carton and carefully identify and check off all the parts against the parts described and illustrated on "COMPONENTS PACKING LIST" pages.

SITE PREPARATION

- The site for the shed must be level. An uneven surface may result in misalignment of parts.
- The shed shall be erected on top of a reinforced concrete slab and anchored down appropriately illustrated on "FINAL CONSTRUCTION" page.

TOOLS REQUIRED



SAFETY NOTES

- Some parts may have sharp edges. It is advisable to wear gloves when handling these items and safety glasses if drilling holes. Sensible shoes are highly recommended.
- Do not erect your shed in windy conditions.
- Ensure that the shed is securely anchored to a solid foundation immediately after construction is completed.
- It is highly recommended to erect the shed with two or more people.

RECOMMENDED











Absco Industries



3.00mW x 1.52mD x 1.80mH, 2.08mH

COMPONENT PACKING LIST

Check off all components.

QTY	COMPONENT DESCRIPTION	PART No.	CHECK	QTY	COMPONENT DESCRIPTION	PART No.	CHECK
2	STEEL SHEET 2045 X 773mm	262		1	STEEL SHEET 1852mm TO MIDPOINT X 773mm	260L	
2	STEEL SHEET 2045 X 773mm	263		1	STEEL SHEET 1852mm TO MIDPOINT X 773mm	260R	
1	STEEL SHEET 1979mm TO MIDPOINT X 773mm	261L		4	STEEL SHEET 1610mm X 773mm	43S	
1	STEEL SHEET 1979mm TO MIDPOINT X 773mm	261R		2	STEEL SHEET 1785mm X 711mm	34A	
1	STEEL SHEET 1725mm X 773mm	Α		1	STEEL SHEET 1725mm X 773mm	В	
2	CHANNEL L = 1530mm	61D		4	CHANNEL L = 773mm	58C	
1	CHANNEL L = 1568mm	79A		2	CHANNEL WITH HINGES L = 1725mm	58A	
2	CHANNEL L = 1513mm	81E		2	JAMB L= 1785mm	89A	
1	CHANNEL L = 1725mm	58B		1	JAMB L= 1725mm	89C	

3

1.5



3.00mW x 1.52mD x 1.80mH, 2.08mH

COMPONENT PACKING LIST

Check off all components.

QTY	COMPONENT DESCRIPTION	PART No.	CHECK	QTY	COMPONENT DESCRIPTION	PART No.	CHECK
1	CHANNEL L = 1496.5mm	55AL		1	CHANNEL L = 1496.5mm	55AR	
1	CHANNEL L = 1496.5mm	55CL		1	CHANNEL L = 1496.5mm	55CR	
1	CHANNEL L = 1496.5mm	55BL		1	CHANNEL L = 1496.5mm	55BR	
1	CHANNEL L = 1496.5mm	81BL		1	CHANNEL L = 1496.5mm	81BR	
2	CHANNEL L = 1496.5mm	81AL		2	CHANNEL L = 1496.5mm	81AR	



3.00mW x 1.52mD x 1.80mH, 2.08mH

COMPONENT PACKING LIST

Check off all components.

QTY	COMPONENT DESCRIPTION	PART No.	CHECK	QTY	COMPONENT DESCRIPTION	PART No.	CHECK
1	JAMB L= 1568mm	90A		2	LIP TRIM L= 1610mm	88J	
4	JAMB L= 1120mm	91A					

CONTENTS OF FITTINGS PACKET								
220	SELF TAPPING SCREWS		3	DOOR PADBOLT	22A			
8	4mm NUT & BOLT SET SECURE TWO PADBOLTS TO DOOR SHEET		2	DOOR PADBOLT HASP				
12	4mm CSK SCREW & NUT		12	3mm POP RIVETS SECURE HINGES TO DOOR				
6	CSJ CHANNEL JOINER L = 200mm		2	DOOR STRAP L: 165mm	12A			
1	3mm DRILL BIT (///////////////////////////////////		1	PHILLIPS DRIVER BIT	FAST038			




3.00mW x 1.52mD x 1.80mH, 2.08mH

SNAPTITE ASSEMBLY GUIDE

The Snaptite Assembly System locks end channels to all roof and wall sheets without the need for tools and fasteners.

To assemble each panel, the perimeter channels are secured to the top and bottom of each panel. Gently tap the channel over the SNAPTITE lugs on the sheet, working along the sheet.

Each perimeter channel must finish flush with the edges of the sheets. Simply tap the channel along the sheets until each end is neatly flush. If you need to remove channels from the panels, slide it off from the side.

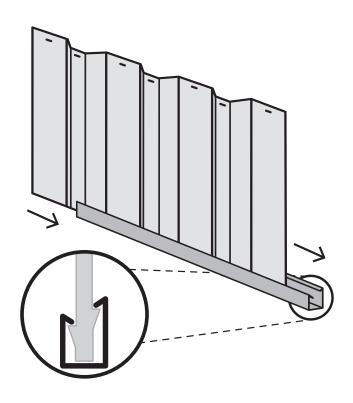



Channel locks the shed panel into position without the need for screws!

FASTENING SYMBOLS




Secure channel to sheeting by SNAPTiTE fastening method.



Join components together with one screw at this location only, as some channels have extra holes that are not required for this model of shed.



Do not join components together at this location yet, as the screws may obstruct further assembly of the other components.





4mm nut and bolt set.

Absco Industries

Assembly Instruction Manual

Model: 30152SECOK

25/11/2021

1.5

6



3.00mW x 1.52mD x 1.80mH, 2.08mH

Guide on Joining Spliced Channels

The text marked on all parts must be shown on the same side as each other




Step 1.
Position the channels and the CSJ joiner so the centre of the CSJ is in line with the end of each channel to be joiner together.



Step 2.
Join the first channel to the CSJ by inserting the centre of the CSJ, on an angle, to the end of the channel where the JOIN>> text is marked.



Push down one side of the CSJ until you hear a 'click'.

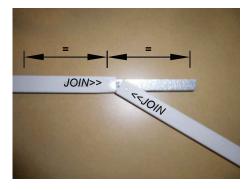



Step 3.
Join the second channel to the CSJ by positioning the <<JOIN of the channel at the centre of the CSJ, on an angle. Push the CSJ into the channel until you hear a 'click'.



Finished Channel.
The joined channels should now look like the picture with the CSJ positioned equally inside of the joined channels.

Drill out holes with 3mm drill bit in CSJ to match the holes in channel. Drilling of screws on the joined channels is being done after sheets are locked on the spliced channels.

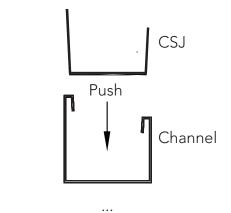

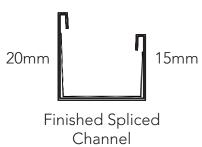


1.5



3.00mW x 1.52mD x 1.80mH, 2.08mH

PRE-ASSEMBLY OF SPLICED CHANNELS

Join together 12x channel sections using 6x channel joiners (Part CSJ)

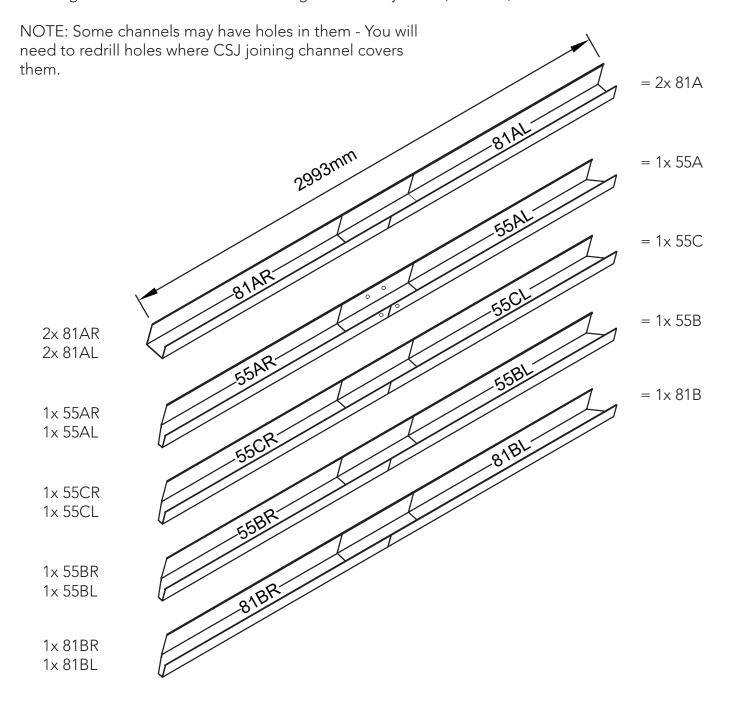


1.5






3.00mW x 1.52mD x 1.80mH, 2.08mH

OVERVIEW OF ROOF COMPONENTS

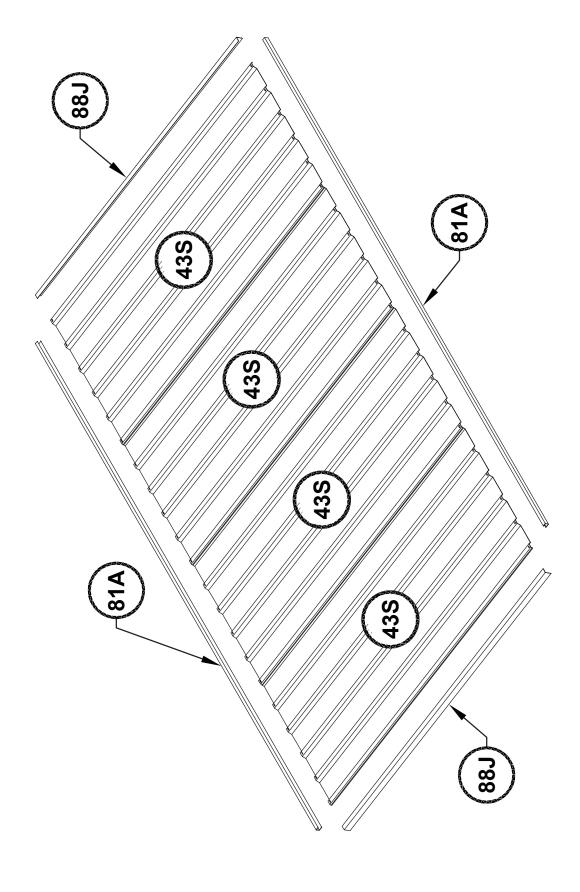




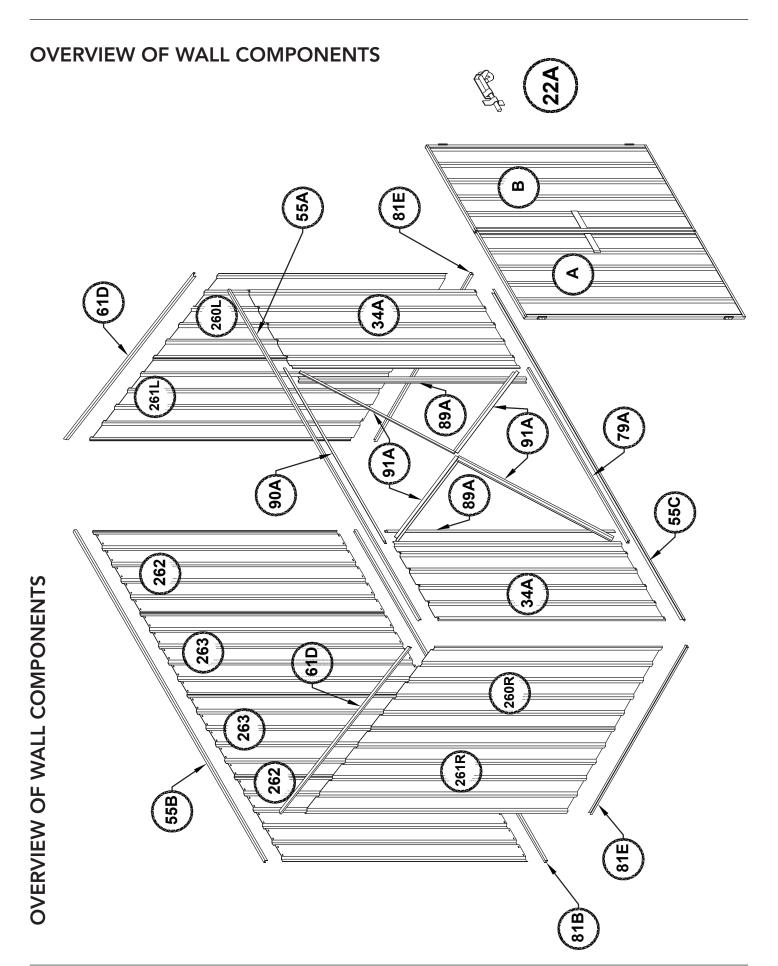




3.00mW x 1.52mD x 1.80mH, 2.08mH


REAR PANEL ASSEMBLY

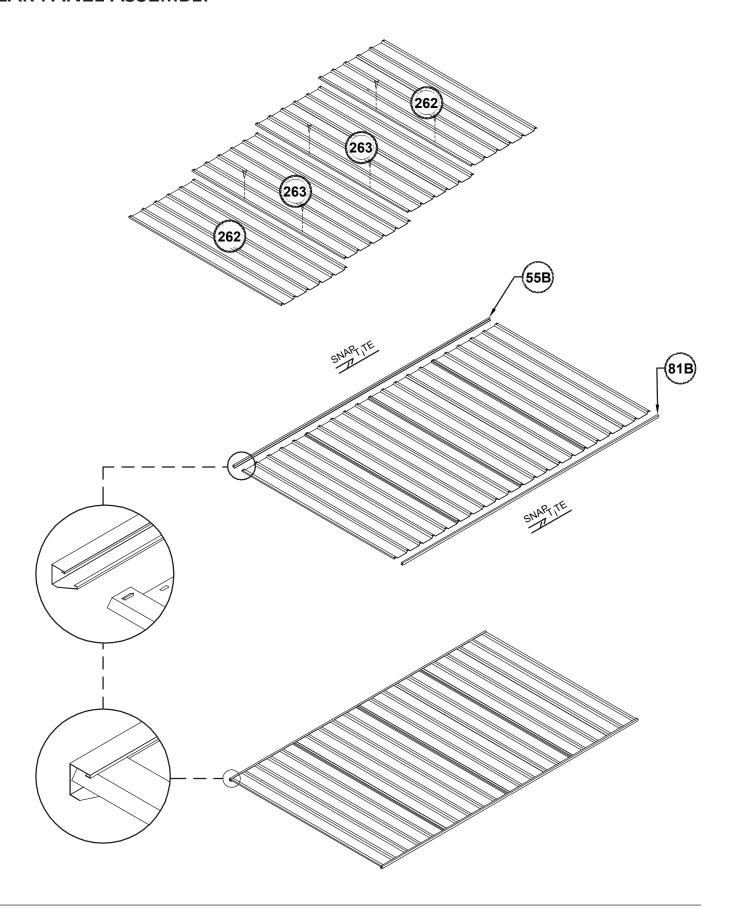




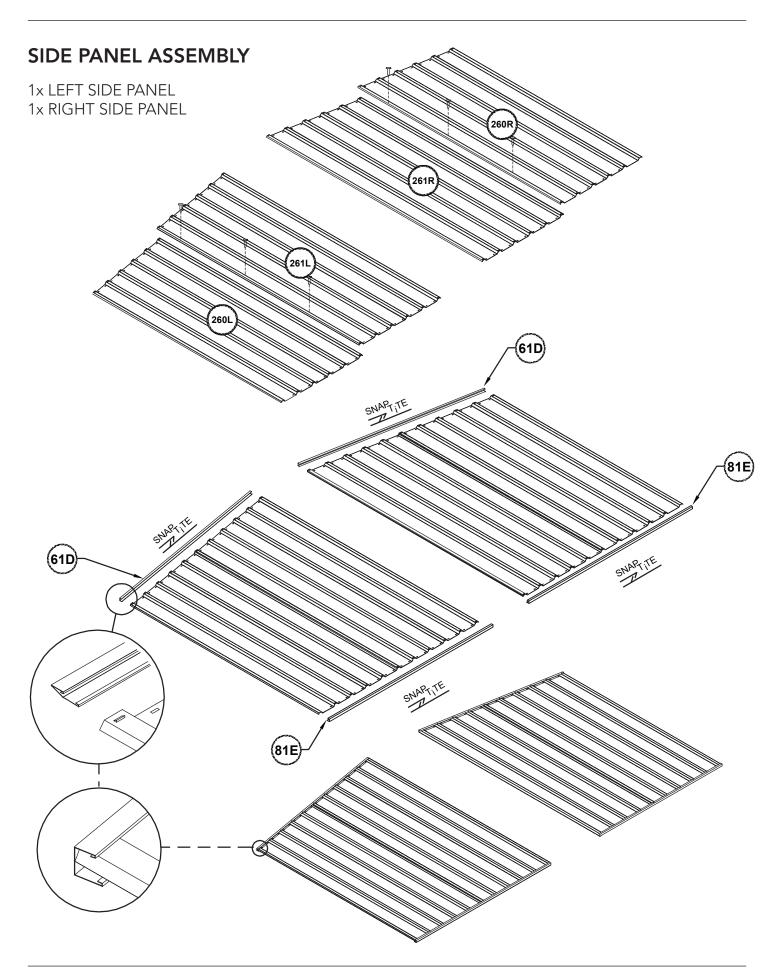




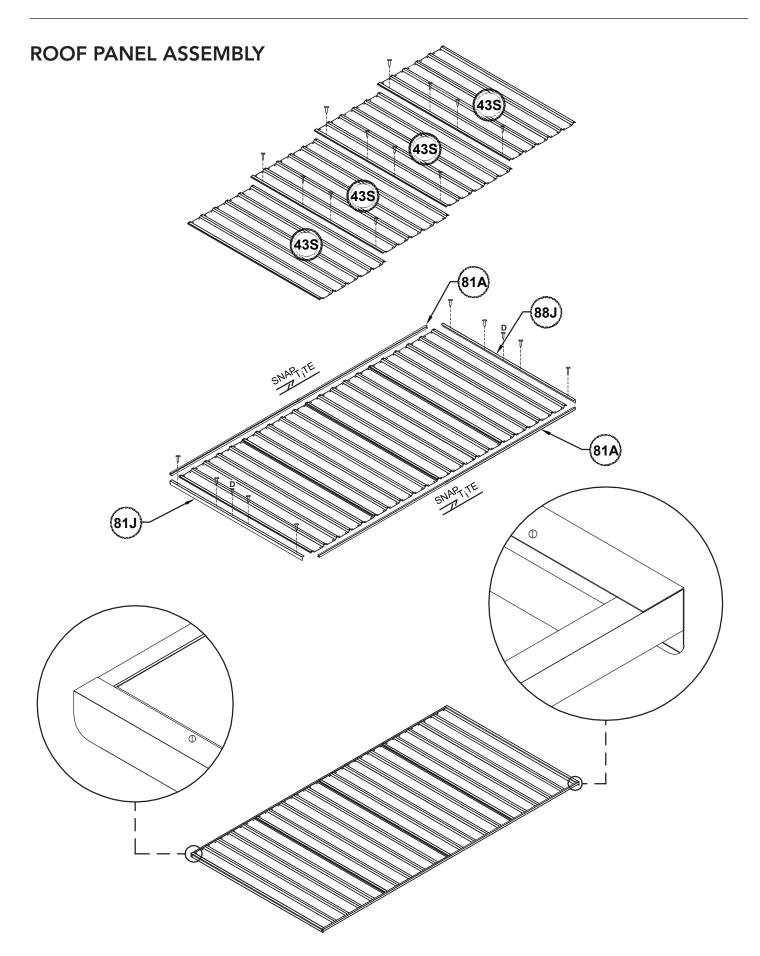



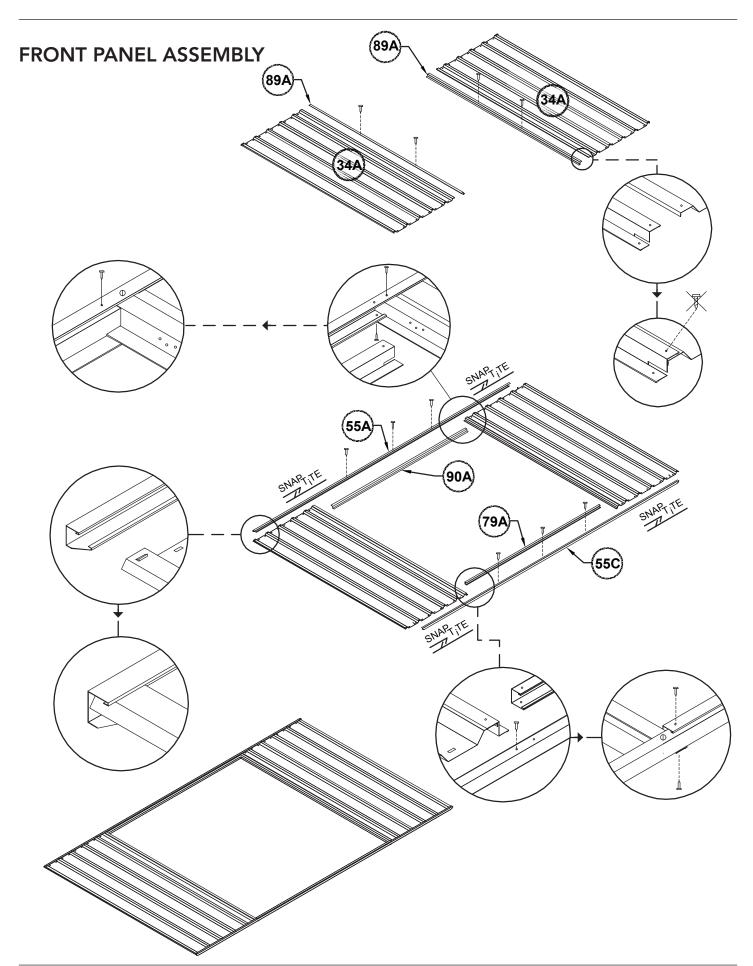




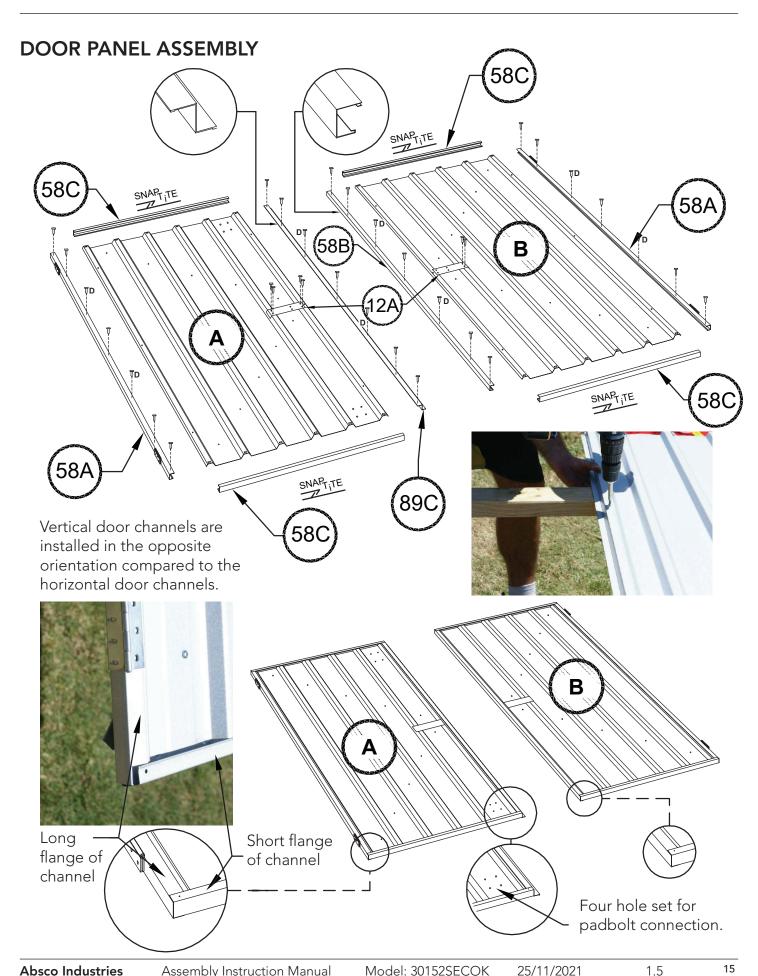



3.00mW x 1.52mD x 1.80mH, 2.08mH

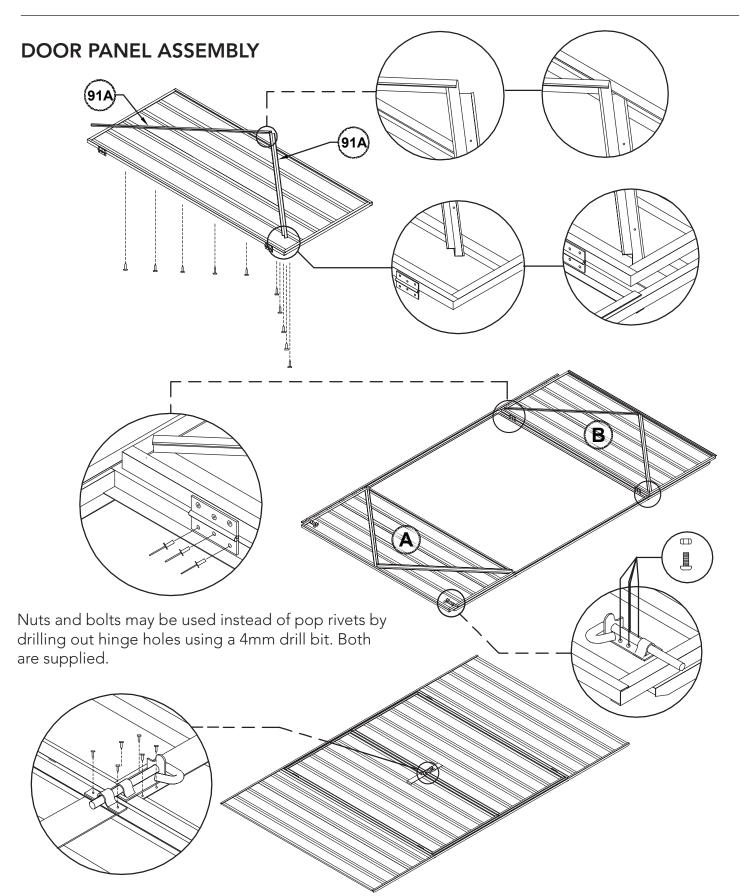

The two holes required to connect the padbolt hasp for each door have not been pre-punched, to allow for proper alignment, position each hasp centrally over the padbolt shaft and drill 3mm holes and secure with screws.


16




3.00mW x 1.52mD x 1.80mH, 2.08mH

PANEL CONSTRUCTION

NOTE: Take care to ensure that all wall panels are not upside down. The top channels of each panel are pre-punched for attaching roof sheeting. The base channels are not pre-punched.

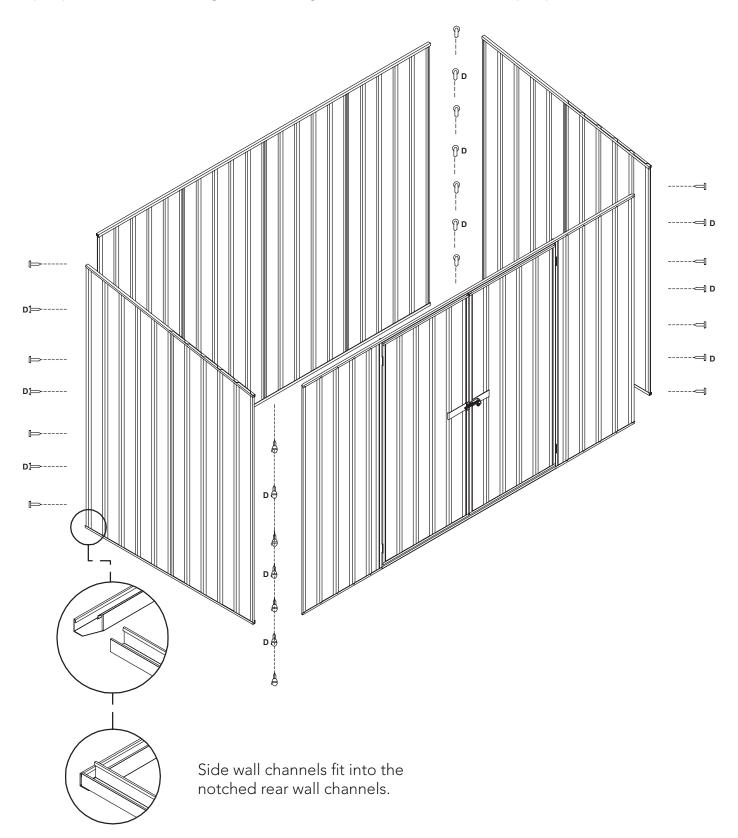



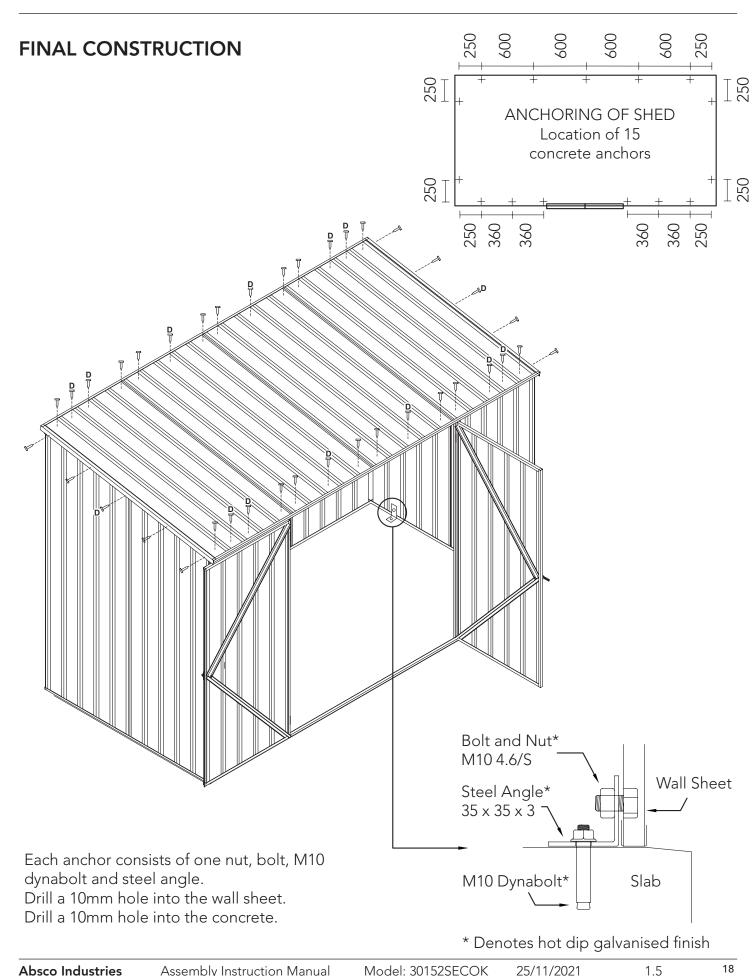



3.00mW x 1.52mD x 1.80mH, 2.08mH

Absco Skillion Roof Shed Notes

General


- 1.G This instruction manual shall be read in conjunction with other consultants drawings, specifications and written instructions provided by Absco and/or their representatives.
- 2.G The drawings provided herein are for installation and structural engineering purposes only. If discrepancies are discovered within the documentation provided, these shall be brought to the attention of Absco and written approvals obtained prior to commencing the affected section of work.
- 3.G If in doubt ask.
- 4.G Until approvals from the local authorities are obtained, commencement of construction from these drawings shall not commence.
- 5.G Unless varied by the project specification, all materials and workmanship shall be undertaken in accordance with the relevant Australian standards and the by-laws and ordinances of the relevant building authorities.
- 6.G All dimensions indicated in these drawings shall be verified on site by the installation contractor. Scaling of drawings shall not be undertaken.
- 7.G Prior to commencing works on site, the contractor shall verify the position of all services in the area to ensure that the construction does not interfere with any of those services.
- 8.G During installation on site the shed structures shall be maintained in a stable condition with no part becoming overstressed or permanently deformed.
- 9.G In circumstances where the shed has been installed in a manner which is inconsistent with the installation manual, structural certification shall be void.
- 10.G The structural components detailed within this installation manual have been designed for the following loads in accordance with AS/NZS1170 based on a Class 10a, Type 2 structure:
- Roof Live Load: 0.25 kPa uniformly distributed or 1.1 kN concentrated as per AS/NZS1170.1
- Wind Load: Classification N2, Non-Cyclonic to AS4055 where Vu = 40 m/s, Vs = 26 m/s


Windward wall Cpe = 0.7


Leeward Wall Cp, e = -0.3 to -0.5 as applicable based on shed geometry

Side Wall Cp, e = -0.5 to -0.65 as applicable based on shed geometry

Roof Cp, e = -0.5 to -1.3 depending on wind direction







1.5

19



3.00mW x 1.52mD x 1.80mH, 2.08mH


Absco Skillion Roof Shed Notes

Steelwork

- 1.S All structural steelwork shall have a corrosion protection system applied consistent with AS/NZS 2312-
- 2.S All structural steelwork detailed within this installation manual shall be minimum Grade 550 for roll formed sections (including roof and wall sheeting) and Grade 250 for angle sections.
- 3.S All roof, and wall sheeting shall be minimum base metal thickness of 0.3mm
- 4.S All snaptite channels and jambs shall be minimum base metal thickness of 0.42mm
- 5.S All top hats shall be minimum base metal thickness of 1.0mm
- 6.S All screw fasteners shall be Phil Pan Head Zinc Plated #8 x 3/4" (STP0820)
- 7.S All bolt fasteners for anchoring shall be M10 minimum grade 4.6/S
- 8.S Installation of screw fasteners shall generally be undertaken in accordance with the relevant provisions of AS1562.

Supporting Slab and Foundations

- 1.F The supporting slab foundation for the garden shed shall be of a minimum size indicated on the installation manual. The top surface of the formed slab shall be level and free of any irregularities which would inhibit the installation of the shed.
- 2.F The structural engineering design for the supporting slab foundation shall be undertaken by a suitably qualified structural engineer. The design shall consider all relevent provision of AS3600 and AS2870.
- 3.F Between adjacent footings or excavations, the contractor installing the slab foundation shall not exceed a rise of 1 in a run of 2 in line of slope.
- 4.F Unless approved in writing by the slab foundation engineer, the limits of excavations near existing footings shall be in accordance with that indicated below.

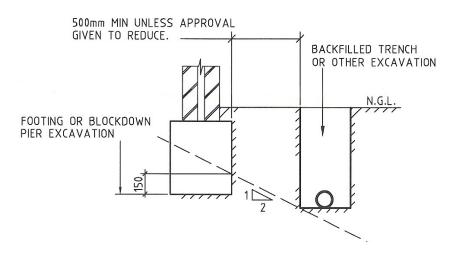

The contactor shall undertake investigatory localised excavations near footings to ascertain their depth prior to excavating adjacent to them. It is noted that excavating to a depth below that indicated above shall not be undertaken without the written approval from the engineer.

20 Assembly Instruction Manual Model: 30152SECOK 25/11/2021 1.5




3.00mW x 1.52mD x 1.80mH, 2.08mH

Absco Sheds Storage Guidelines


- Absco Sheds are designed to be weatherproof for normal weather conditions. In the event of extreme weather conditions such as heavy rain, combined with high wind gusts, the ridge capping, sheeting joins, screw fixings etc., may exhibit minor deformations which may allow some water entry. These areas should be checked regularly to ensure that maximum strength and protection is maintained.
- Other weather conditions such as extreme heat and extreme cold, moist or dry air can influence the effects of concrete floor moisture and/or condensation on the underside of the roof sheets.
- Absco Sheds and storage units are primarily used for storage of garden equipment such as lawnmowers, wheelbarrows, garden tools etc. Storage items that might be adversely affected by any of the above conditions may require additional protection such as being sealed or covered by plastic sheets and/or stacked above the concrete floor on timber slats.
- Waterproof sealants may be used to offer further protection where required around joins and screw fixings, as can rubber door seals and other products which are available from most hardware outlets.
- Placement of waterproof sealants (silicone) between the base of the shed and concrete slab is not recommended, as this process can have a reverse effect, preventing excess water from escaping, resulting with water accumulating and being trapped inside the shed.
- Absco accepts no responsibility for water entry, floor moisture, condensation or the condition of the Contents inside your Absco steel building arising from any of the pre-mentioned weather conditions.







Model: 30152SECOK



1.5

21



3.00mW x 1.52mD x 1.80mH, 2.08mH

Australia Product Warranty Against Defects

- Absco Sheds, including garden sheds, garden beds, aviaries, storage units, garages, awnings and carports are made using high quality Australian made steel.
- We are pleased to advise we warrant that the steel coating will not rust, crack, flake peel or blister for 20 years from date of purchase, when installed within Australia.
- This warranty does not apply to surface deterioration of panels caused by 'Swarf" (Tiny particles of steel debris left from cutting, grinding or drilling operations) that has not been removed after building construction, or as a result of contact with damp soil, chemicals, fertilisers or other corrosive substances.
- This warranty covers any Absco product used for normal domestic use and installed in accordance with the installation instructions.
- The warranty does NOT cover Damage caused by storms, wind, rain snow or poor foundations.
- This warranty does NOT cover ABSCO products installed in severe coastal, industrial or other highly corrosive environments. The warranty does not cover fasteners (screws, nuts, bolts, rivets, hasps or sliding padbolts).
- The warranty is limited to replacement and delivery of components and does not include any labour or installation costs. The benefits given by the warranty are in addition to your other rights and remedies under a law in relation to the goods or services to which the warranty relates.
- The warranty applies to the exclusion of all other representations, guarantees or warranties express or implied, our goods come with guarantees that cannot be excluded under the Australian consumer law and is not transferable. You are entitled to a replacement or refund for a major failure and for compensation for any other foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of an acceptable quality and the failure does not amount to a major failure. For further information go to http://www.consumerlaw.gov.au
- Please retain a proof of purchase (sales docket or invoice) or register your warranty within 30 days of purchase here: http://abscosheds.com.au/warranty-details/
- In the unlikely event a warranty claim is made, it must be supported by photographic evidence and details of the defect, including component part numbers, together with proof of purchase documentation (or on-line registration of purchase) and forwarded to the address below. Upon receipt of the warranty claim, the Customer Service Manager will contact you within three business days to advise you of the assessment outcome of the claim, which may include your expenses incurred in making the claim.

THE CUSTOMER SERVICE MANAGER, ABSCO INDUSTRIES, PO BOX 119 ACACIA RIDGE QLD AUSTRALIA 4110

PHONE: 1800 029 701 FAX: 07 3344 1191 EMAIL: warranty@absco.com.au

Issued 01 January 2018

Absco Industries Assembly Instruction Manual Model: 30152SECOK 25/11/2021 1.5 22