

# OWNER'S MANUAL



## FLAT IRON

# PREMIUM GAS GRIDDLE

**Model #8536**



**Keep your receipt with  
this manual for Warranty.**

**CUSTOMER SERVICE**  
**Service@CharGriller.com**



**LEARN HOW TO SEASON  
YOUR NEW GRIDDLE!**

Contents of this manual are Trademarked and Copyrighted by Char-Griller® | A&J Manufacturing  
Using the information contained in this manual without consent of Char-Griller® and/or A&J Manufacturing is strictly prohibited.



# TABLE OF CONTENTS

Safety Warnings & Warranty .....	A-1
Assembly Instructions .....	B-1
Product Usage .....	C-1
Recipes .....	D-1
Accessories .....	E-1



## ATTENTION!

Please Review ALL of the Lighting Instructions Prior to Operating Grill



### DANGER

- DO NOT Operate this appliance before reading the owner's manual.
- DO NOT Place articles on or against this appliance.
- DO NOT Operate this appliance in an enclosed area.
- DO NOT Operate this appliance before leak checking hoses and gas cylinder connection.
- If you smell gas:
  - Shut off gas to the appliance.
  - Extinguish any open flame.
- If odor continues, keep away from the appliance and immediately call your gas supplier or your fire department.



### WARNING

- Do not store or use gasoline or other flammable liquids or vapors in the vicinity of this or any other appliance.
- An LP cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.
- If this warning is not followed, a fire causing injury or damage may occur.
- For storage and cylinder exchange, disconnect hose at the cylinder only, do not disconnect hose from the appliance.
- For Outdoor Use Only.
- All surfaces are HOT.
- Open Lid before lighting.
- DO NOT exceed 200°C when the lid is closed.
- Test the operation of the appliance after installation.

Model	SAI No.	Main Burner Injector (mm)	Pressure (kPa)	Main Burner (MJ/h)	Total (MJ/h)
8536	400317	1.07	2.75	14.23 (4)	56.92



# IMPORTANT SAFETY WARNINGS

A propane gas cylinder is required for operation. This gas grill is not intended for commercial use.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE. IF YOU ARE ASSEMBLING THIS UNIT FOR SOMEONE ELSE, GIVE THIS MANUAL TO HIM OR HER TO SAVE FOR FUTURE REFERENCE.

## **WARNING:**

Improper installation, adjustment, alteration, service, or maintenance could cause injury or property damage. Read the installation, operation, and maintenance instructions thoroughly before assembling or servicing this equipment. Failure to follow these instructions could result in fire or explosion that could cause property damage, personal injury, or death.

## **DANGER:**

DO NOT use gas grill for indoor cooking or heating. TOXIC fumes can accumulate and cause asphyxiation. Do not install in or connect to the consumer piping or gas supply system of a boat or caravan.

## **WARNING:**

Accessible parts may be very hot. Keep young children away. Read the instruction literature before using the appliance. The use of unauthorized parts can create unsafe conditions and environment.

**NOTE:** The use and installation of this product must conform to local codes or, in absence of local codes, the National Fuel Gas Code, ANSI Z223.1/NFPA54, or the Australian/New Zealand Standard™, AS/NZS 5263.1.7-2020.

**IMPORTANT NOTICE:** Read all instructions prior to assembly and use. Read and understand all warnings and precautions prior to operating your grill.

READ ALL SAFETY WARNINGS AND INSTRUCTIONS CAREFULLY BEFORE  
ASSEMBLING AND OPERATING YOUR GRILL

Read the following instructions carefully and be sure your barbecue is properly assembled, installed and maintained. Failure to follow these instructions may result in serious bodily injury and/or property damage. If you have any questions concerning assembly or operation, consult your dealer or LP gas company.

- When used, always place the appliance and gas bottle on flat level ground. Grill can be used with 20lb gas cylinder. This grill is designed to operate at an inlet pressure of: 11 inches water column.
- Purchase LP cylinders only with these required measurements: 12" (30.5 cm) (diameter) x 18" (45.7 cm) (tall) with 20lb (9kg) capacity.
- DO NOT move the appliance during use.
- DO NOT attempt to disconnect any gas fittings while barbecue is in use.
- DO NOT use gas bottle if the bottle and/or valve are damaged, rusty, or dented as this may be hazardous. Contact your supplier to have it checked.
- DO NOT lean over an open grill and be mindful of hands/fingers near the edge of the cooking area.
- Should a fire occur, turn off all gas burners, close the lid, and stand back from grill until fire is out.
- Should flames go out while in operation, turn off all gas valves and leave lid open. Return to grill after five minutes and try to relight the burners – following lighting instructions.
- Keep children and pets away from grill when in use. Some parts of the grill will become very hot.
- When cleaning the valves and burners, be careful not to stretch the valve orifices or burner ports.
- Move gas hoses as far away as possible from hot surfaces and dripping hot grease.
- Gas may still be present in a cylinder that appears to be empty. Adhere to proper transportation/ storage of the cylinder at all times.
- If gas is leaking from cylinder, move away from cylinder immediately and call your gas supplier or fire department. DO NOT try to address problem yourself.
- DO NOT use a flame to check for gas leaks.
- DO check for gas leaks and any obstructions to burners before use. This is especially important after a period of storage or non-use.
- The flexible tube should be changed whenever it is damaged or cracked or by expiration date printed on the tubing. Or, change tube every five (5) years.
- Always connect or replace cylinder in a well-ventilated area, and never in the presence of a flame, spark or heat source.
- Grill must be kept away from flammable materials.
- Turn off gas supply at gas container after use.
- Do not alter this grill in any manner.
- Do not touch metal parts of grill until it has completely cooled (about 45 minutes) to avoid burns, unless you are wearing protective gear (BBQ mittens, pot holders, etc.).





- Note that parts sealed by manufacturer or its agent must not be altered.
- When assembling the grill, position the connection flexible tube so that it is protected against twisting.
- Stay away from any source of ignition when changing gas container.
- When assembling the grill, do not obstruct ventilation openings of grill's container compartment. We reserve the right to make minor technical adjustments to the device.
- When cooking with oil/grease, do not allow the oil/grease to exceed 350°F (177°C). Do not store or use extra cooking oil in the vicinity of this or any other appliance.

## **CAUTION**


1. Never fill the LP cylinder beyond 80% full, as this may result in a fire and cause serious injury or death.
2. DO NOT store a spare LP cylinder under or near this grill, and: If the instructions in 1 and 2 are not followed exactly, a fire causing death or serious injury may occur. This grill is for use with propane gas only (propane gas cylinder not included).
3. Place dust cap on LP cylinder valve outlet whenever the LP cylinder is not in use. Only install the type of dust cap on the LP cylinder valve outlet that is provided with the LP cylinder valve. Other types of caps or plugs may result in leakage of propane.
4. Never attempt to attach this grill to the self-contained propane system of a camper trailer, motor home or house.
5. Do not use gasoline, kerosene or alcohol for lighting. The LP gas supply cylinder must be constructed and marked in accordance with the specifications for propane gas cylinders of the U.S. Department of Transportation (DOT) CFR 49.
6. The gas supply cylinder must be provided with a listed overfilling prevention device.
7. The gas supply cylinder must be provided with a cylinder connection device compatible with the connection for outdoor cooking appliances.
8. This grill is not intended for use on recreation vehicles and/or boats.
9. Do not use grill unless it is completely assembled and all parts are securely fastened and tightened.
10. Keep all combustible items and surfaces at least 10 ft (3.05 M) away from grill at all times.
11. DO NOT use this grill or any gas product near unprotected combustible constructions.
12. Do not use in an explosive atmosphere. Keep grill area clear and free from combustible materials, gasoline and other flammable vapors and liquids.
13. Never keep a filled container in a hot car or car trunk. Heat will cause gas pressure to increase, which may open relief valve and allow gas to escape.

14. Keep grill's valve compartment, burners and circulating air passages clean. Inspect grill before each use.

## **WARNING**

- This grill is for outside use only, and should not be used in a building, garage, or any other enclosed area.
- The use of alcohol, prescription or non-prescription drugs may impair the operator's ability to properly assemble or safely operate the grill.
- Always open grill lid slowly and carefully as heat and steam trapped within the grill can burn you severely.
- Always place grill on a hard, level surface far away from combustibles. An asphalt or blacktop surface may not be acceptable for this purpose.
- Do not leave a lit grill unattended. Keep children and pets away from grill at all times.
- Do not place grill on any type of tabletop surface.
- Do not use grill in high winds.
- Disconnect the propane tank (LP tank) by first turning off valve on top of propane tank, turn off burner valves, then disconnect regulator from valve on propane tank by turning plastic connector counter clockwise. Unscrew wing-bolt in bottom shelf to release the tank for removal.
- This appliance shall only be used in an above ground open-air situation with natural ventilation, without stagnant areas, where gas leakage and products of combustion are rapidly dispersed by wind and natural convection.


ANY ENCLOSURE IN WHICH THE APPLIANCE IS USED SHALL COMPLY WITH ONE OF THE FOLLOWING:

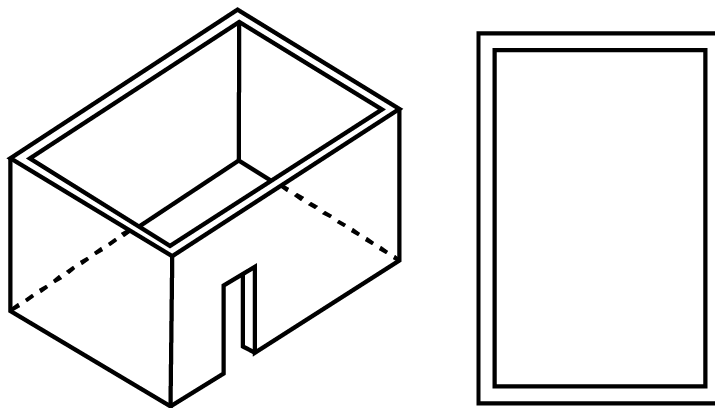


- An enclosure with walls on all sides, but at least one permanent opening at ground level and no



overhead cover.

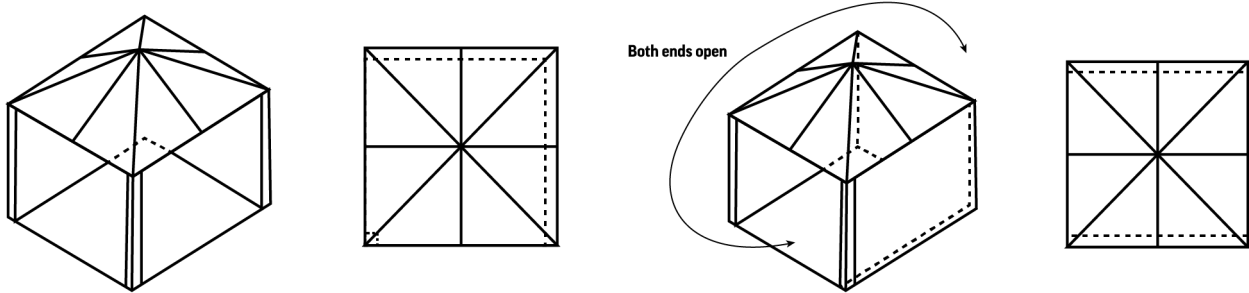

- Within a partial enclosure that includes an overhead cover and no more than two walls.
- Within a partial enclosure that includes an overhead cover and more than two walls, the following shall apply—
  - (i) at least 25% of the total wall area is completely open; and
  - (ii) at least 30% of the remaining wall area is open and unrestricted.
- In the case of balconies, at least 20% of the total of the side, back and front wall areas shall be and

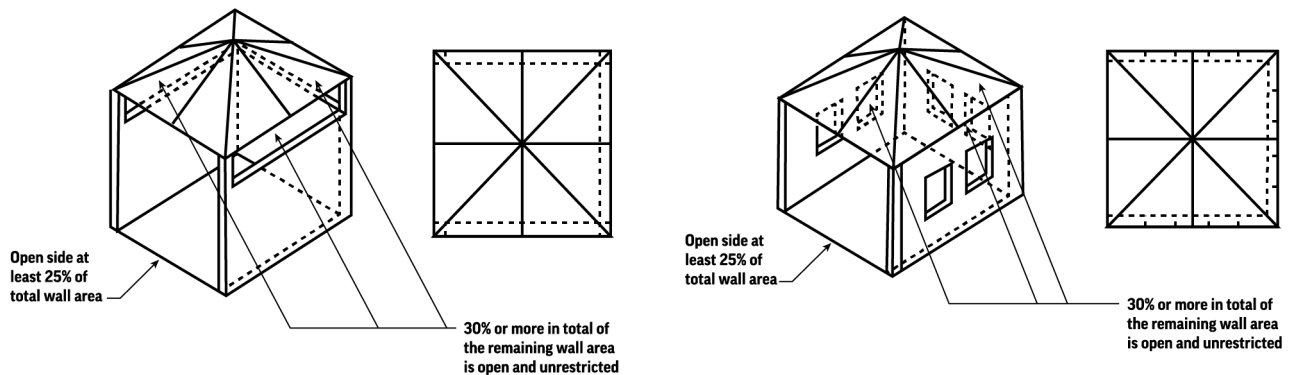

remain open and unrestricted.

## **DANGER**

- Liquid propane (LP) gas is flammable and hazardous if handled improperly. Know its characteristics before using any propane product.
- Propane Characteristics: flammable, explosive under pressure, heavier than air and settles in pools and low areas.
- In its natural state, propane has no odor. For your safety, an odorant has been added.
- Contact with propane can cause freeze burns to skin.

- Never use a propane cylinder with a damaged body, valve, collar or footing.
- Dented or rusted propane cylinders may be hazardous and should be checked by your propane gas supplier.
- Remove all plastic bags and other overlays from grill before assembly.
- Do not spray aerosols in the vicinity of this appliance while it is in operation.
- Do not use or store flammable materials in or near this appliance.
- Do not place articles on or against this appliance.
- Do not modify this appliance.
- Use caution when assembling and operating your grill to avoid scrapes or cuts from sharp edges.
- Use caution when moving grill to prevent strains.
- Never move grill when it is in use or hot.
- Make sure to empty grease tray after every use once completely cooled.
- To protect against bacteria that could cause illness, keep all meats refrigerated and thaw in refrigerator or microwave. Keep raw meats separate from other foods, and wash everything that comes in contact with raw meat.
- Cook meat thoroughly, and refrigerate leftovers immediately.
- Use a calibrated food thermometer and the USDA guidelines to ensure that meat, poultry, seafood, and other cooked foods reach a safe minimum internal temperature.
- Always have a fire extinguisher near at all times. Maintain and check your fire extinguisher regularly.
- Non-rechargeable batteries are not to be recharged.
- Do not mix different types of batteries such as alkaline, carbon-zinc, or rechargeable batteries.
- Do not mix old and new batteries.
- Exhausted batteries are to be removed from the product.
- Batteries included.
- **DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.**



**STOP! CALL THE RETAILER FIRST!**

## **Return to Store For Any Issues**

This grill has been made according to the highest of quality standards, however there are no implied manufacturer warranties. If you have any questions that are not addressed in this manual, or if you need parts, please go back to the retailer and/or distributor where you purchased this product.

**Your retailer may require Model #, Serial #, and proof of purchase.**

### **Document Your Grill Model and Serial Numbers HERE:**


(Model and Serial number are located on the back of the grill body or on the leg.)

---

**(MODEL #)**

---

**(SERIAL #)**

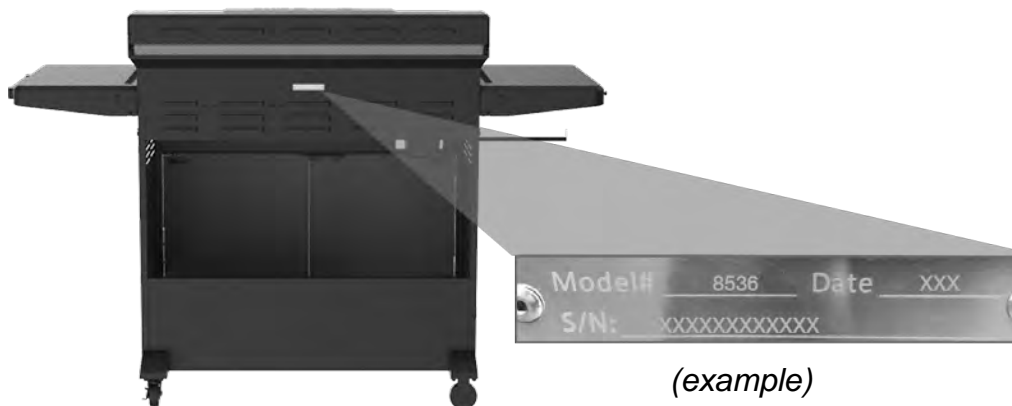


# **WARRANTY INFORMATION**

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

**Save your receipt for all warranty claims.**

# ASSEMBLY INSTRUCTIONS

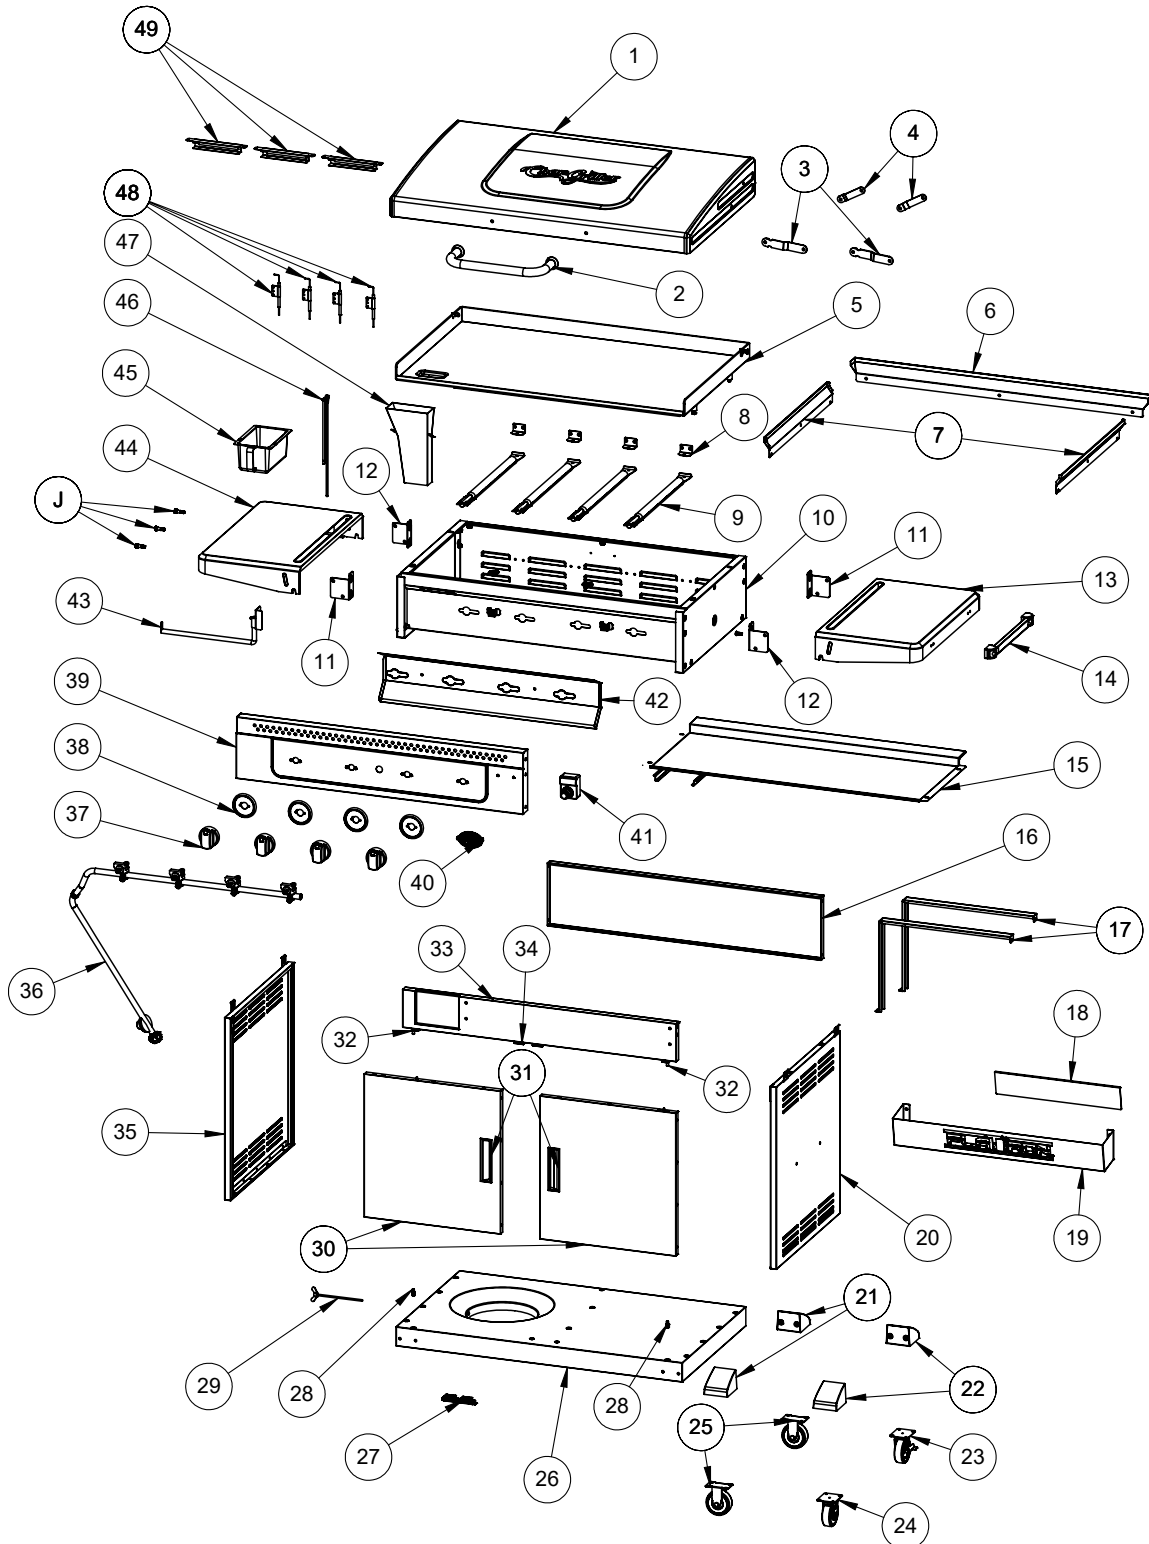



# PARTS LIST

Item	QTY	Part Name
1	1	HINGED LID
2	1	LID HANDLE
3	2	LOWER LID HINGE
4	2	UPPER LID HINGE
5	1	GRIDDLE
6	1	REAR WIND SHIELDS
7	2	SIDE WIND SHIELDS
8	4	BURNER SUPPORT BRACKET
9	4	BURNER
10	1	MAIN GRIDDLE BODY
11	2	SIDE SHELF BRACKET (FRONT LEFT, REAR RIGHT)
12	2	SIDE SHELF BRACKET (FRONT RIGHT, REAR LEFT)
13	1	RIGHT FOLDING SIDE SHELF
14	1	MAGNETIC TOOL HOLDER
15	1	PARTICLE SHIELD
16	1	CART BACK PANEL
17	2	TANK EXCLUSION WIRE
18	1	CONDIMENT BASKET LOGO BACKPLATE
19	1	CONDIMENT BASKET
20	1	CART RIGHT PANEL
21	2	LEFT CASTER BRACKETS
22	2	RIGHT CASTER BRACKETS
23	1	LOCKING CASTER WHEEL
24	1	SWIVEL CASTER WHEEL
25	2	FIXED CASTER WHEEL
26	1	BOTTOM SHELF
27	1	BOTTOM SHELF DOOR MAGNET
28	2	DOOR SUPPORT PIN
29	1	TANK HOLDER
30	2	FRONT DOOR
31	2	DOOR HANDLE
32	2	UPPER DOOR SOCKET
33	1	UPPER FRONT BRACE
34	1	DOOR MAGNET
35	1	CART LEFT PANEL
36	1	HOSE / VALVE / REGULATOR ASSEMBLY
37	4	KNOBS WITH RED INDICATOR
38	4	KNOB BEZELS
39	1	CONTROL PANEL
40	1	CHAR-GRILLER® LOGO PLATE
41	1	IGNITER
42	1	HEAT SHIELD
43	1	PAPER TOWEL HOLDER
44	1	LEFT SIDE SHELF
45	1	GREASE CUP
46	1	MATCH HOLDER
47	1	GREASE FUNNEL
48	4	SPARK TIPS WITH WIRE
49	3	CROSS OVER TUBE


















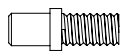

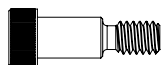
# HARDWARE NEEDED

**Assembly:** Requires 2 people. Tools Needed: Hammer, Phillips Head Screwdriver, Pliers, and a 7/16" Nut Driver.

**NOTE: DO NOT** fully tighten any bolts until instructed to do so. Tightening too soon may prohibit parts from fitting together. All hex nuts should be on the inside of the griddle unless stated otherwise. Unpack all contents in a well cleared and padded area.





**Estimated Time:** 45 minutes


**Hardware Pack #551180**

Part No.	Description	Photo		QTY
<b>A</b>	1/4 - 20 X 1/2" HEX BOLT			28
<b>B</b>	1/4 - 20 SHOULDER BOLT			8
<b>C</b>	1/4 - 20 HEX FLANGE NUT			12
<b>D</b>	1/4 - 20 LOCK WASHER			16
<b>E</b>	1/4 - 20 X 3/4" COUNTERSUNK SCREW			6
<b>G</b>	SCREW #10 - 24			20
<b>H</b>	1/4" FLAT WASHER			8
<b>I</b>	DOOR STUDS			2
<b>J</b>	UTENSIL HOOKS			3





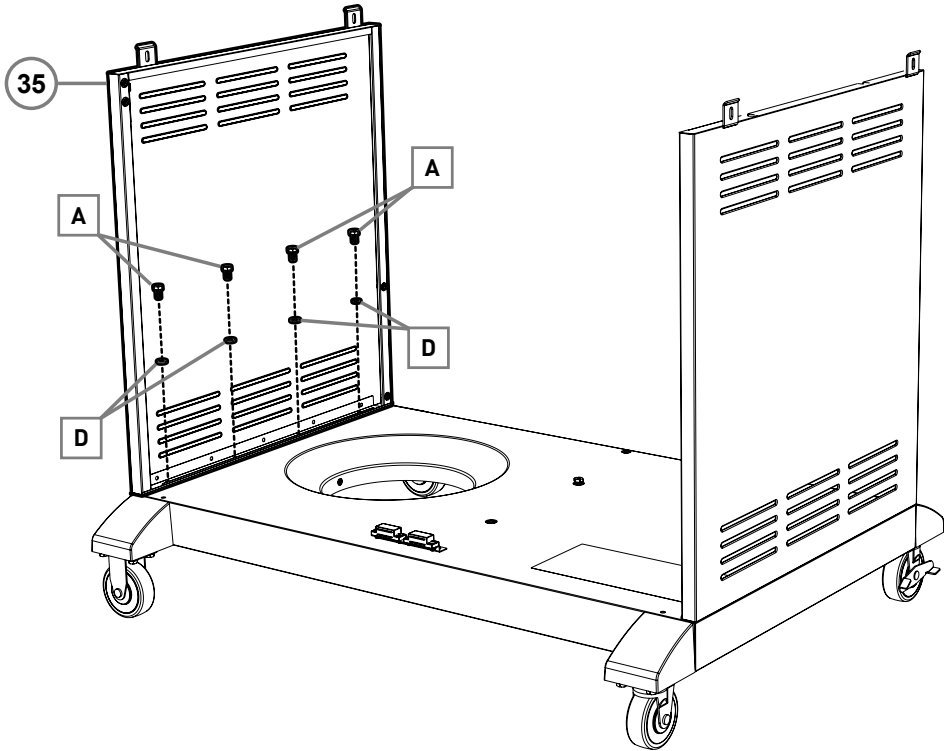
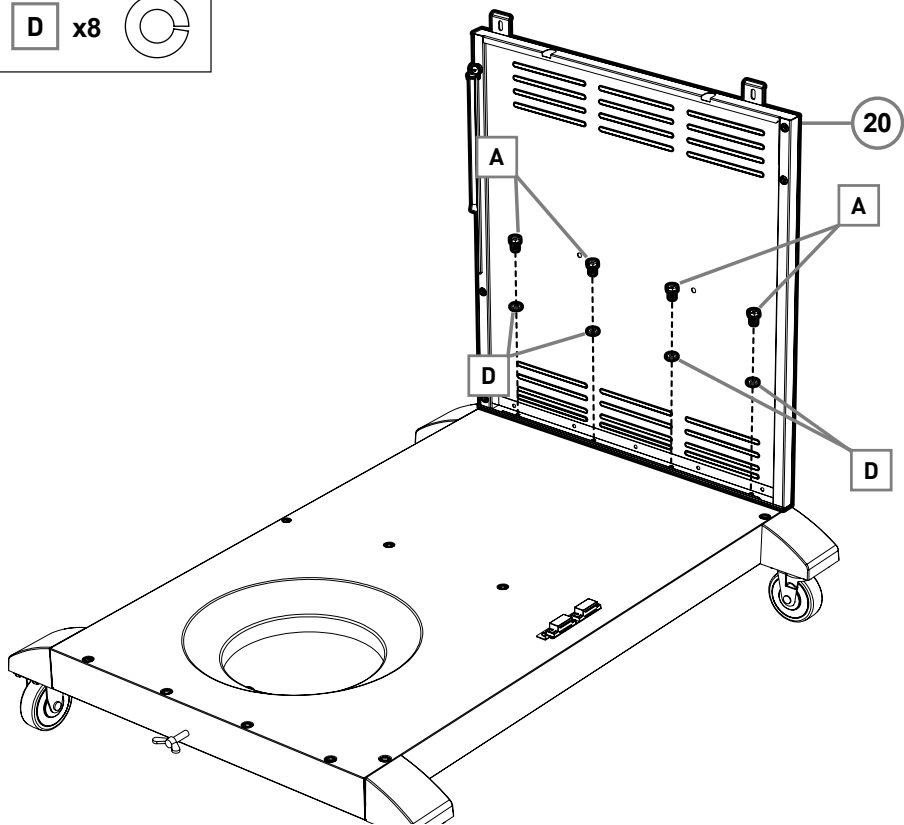
**STEP 1**

<b>A</b> x8 	<b>D</b> x8 	<b>G</b> x2 	<b>H</b> x8 
---	---	---	--

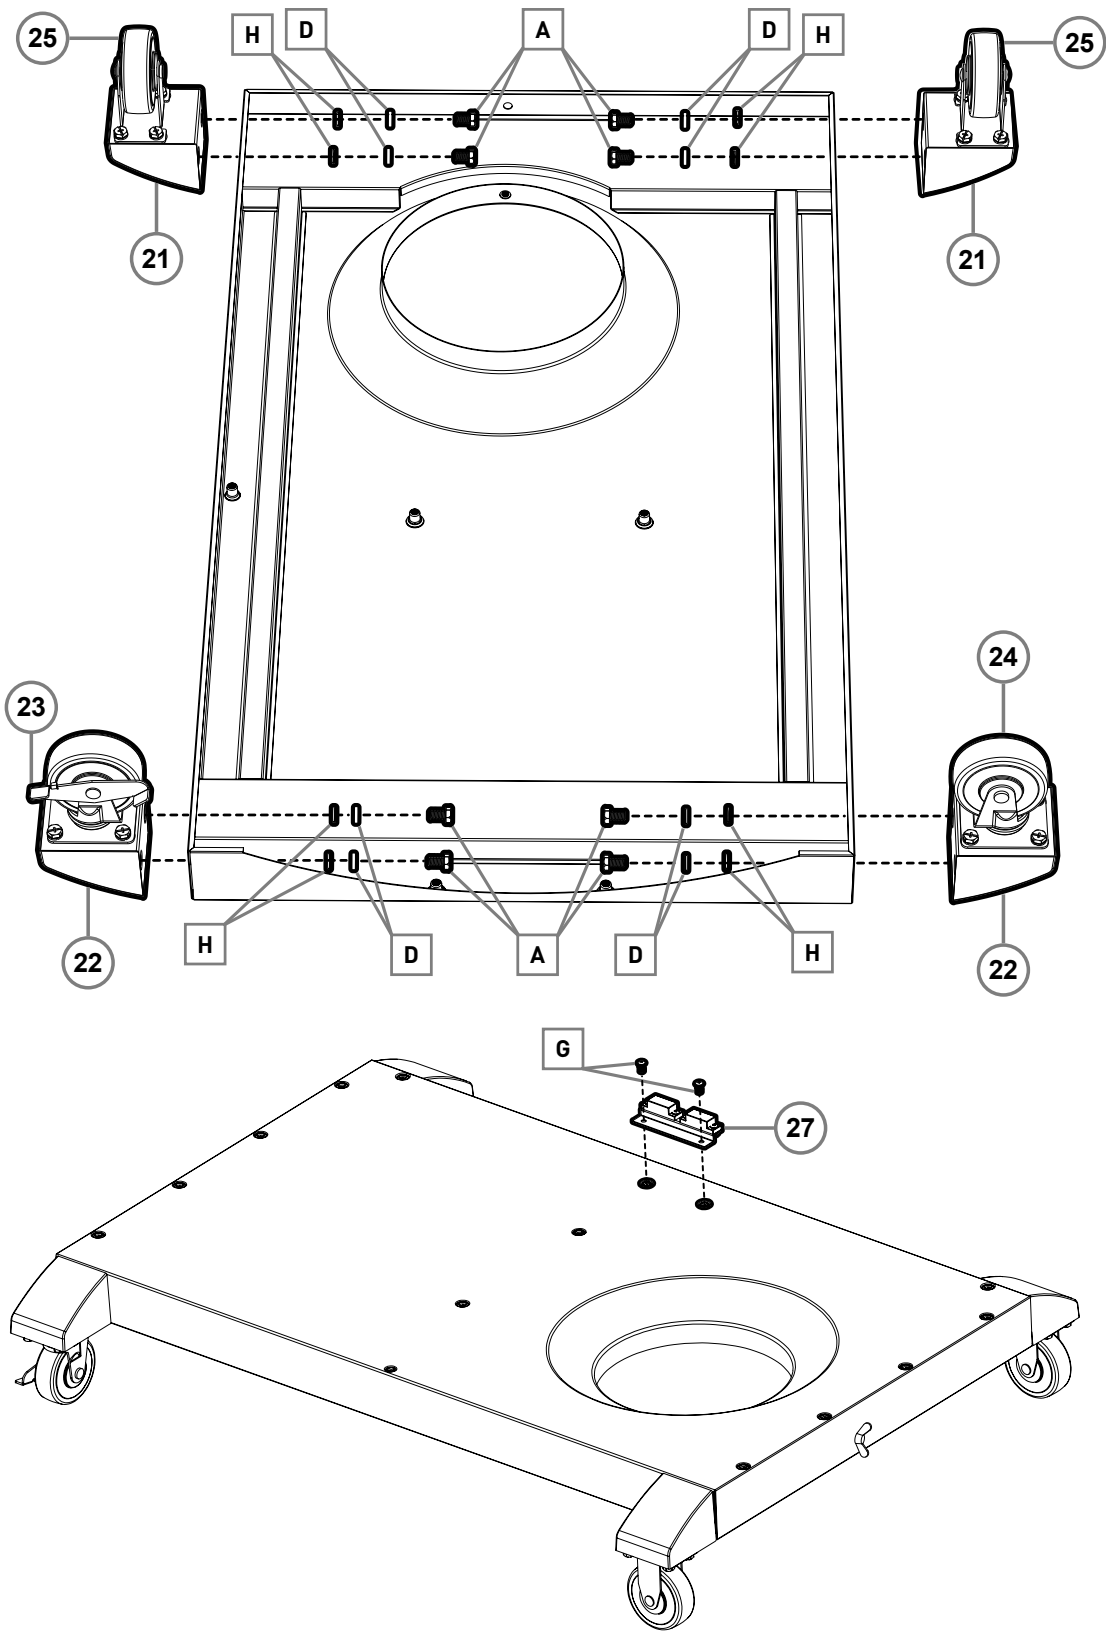

**STEP 2**

<b>A</b> x8 	<b>D</b> x8 
---	---






**STEP 3**

G


x4

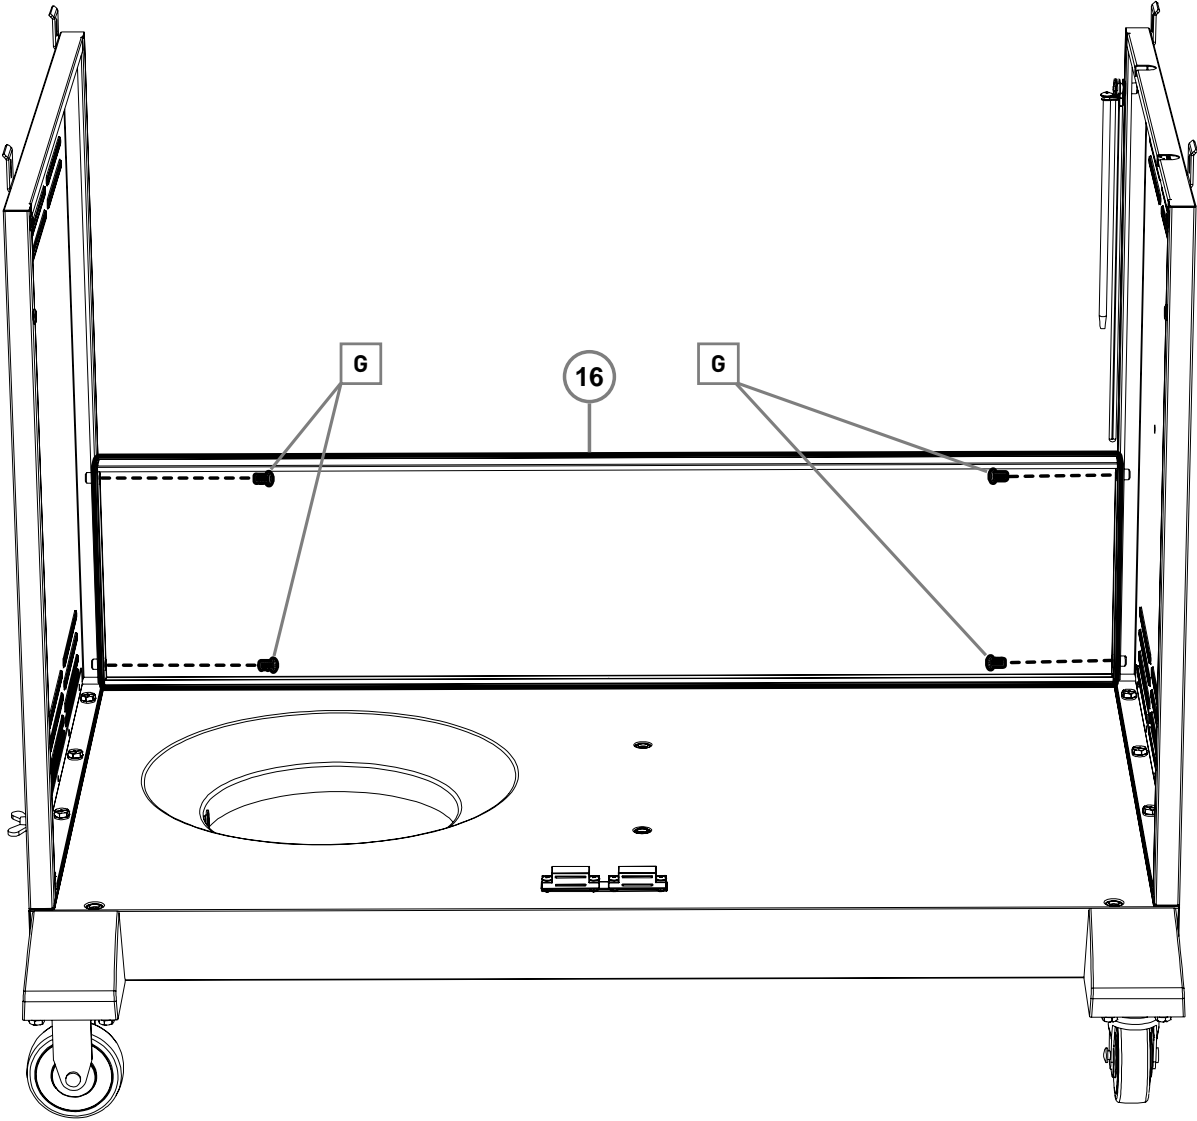


**STEP 4**

G




x8




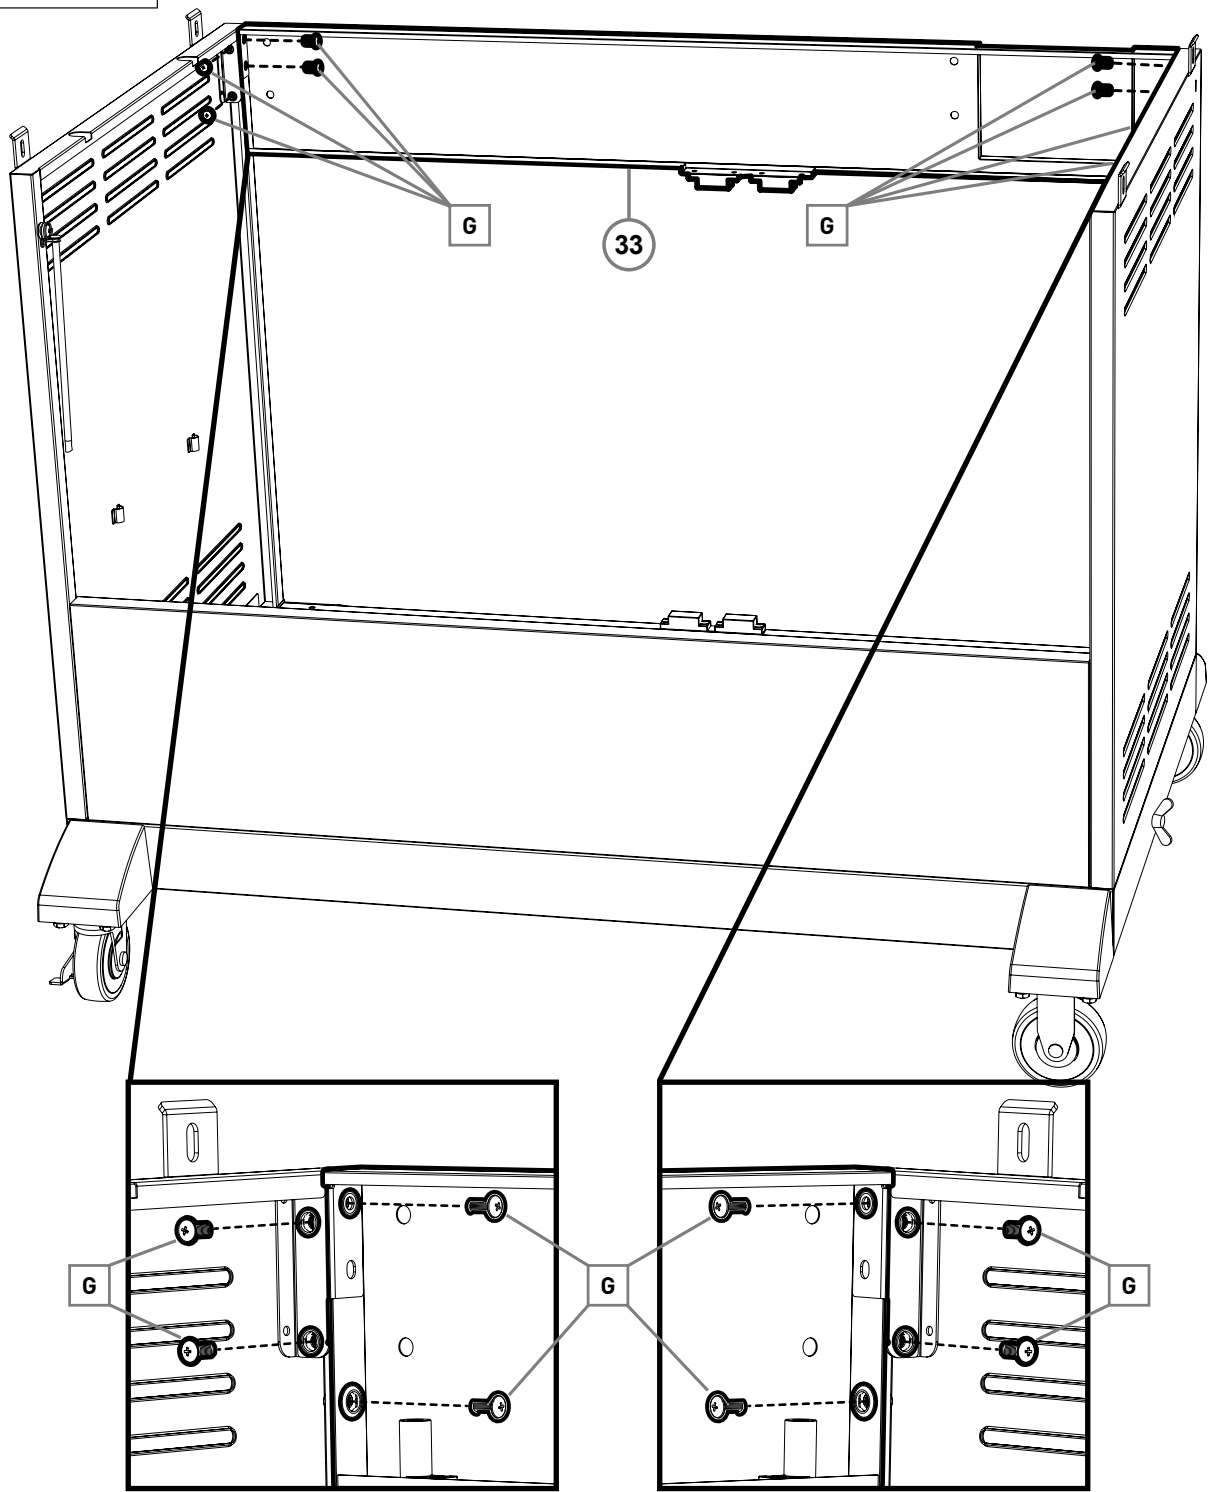




**STEP 5**



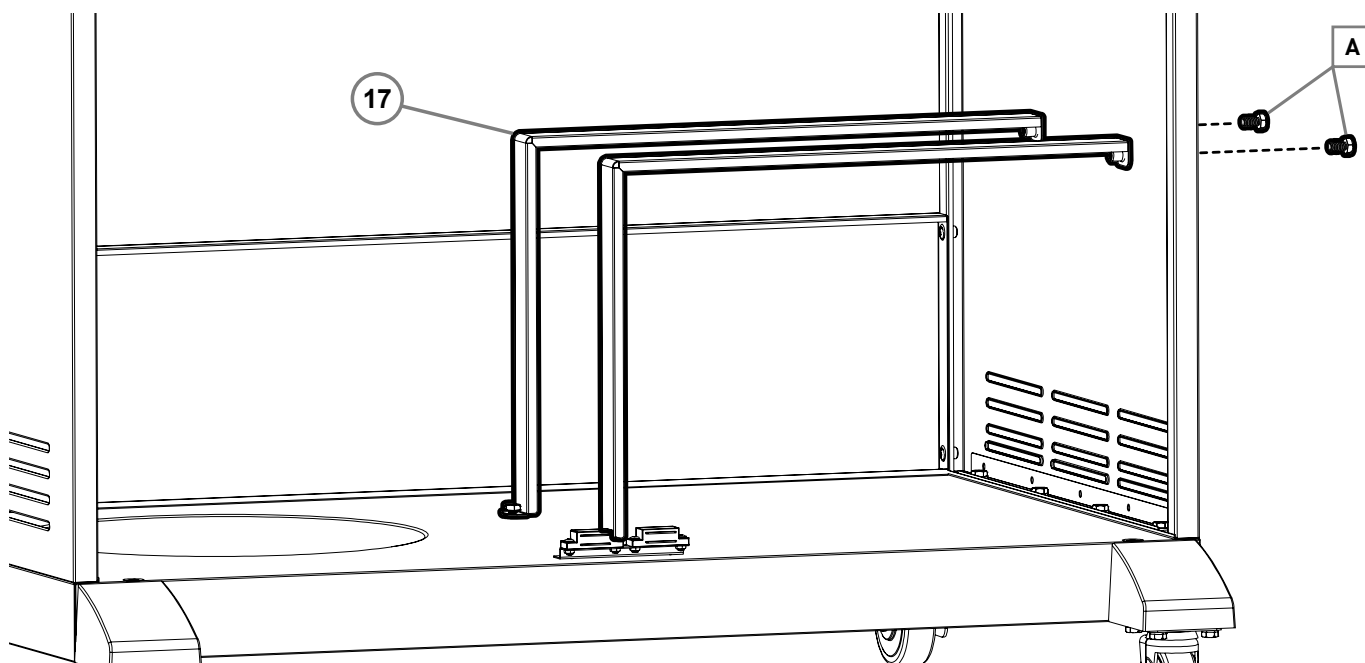
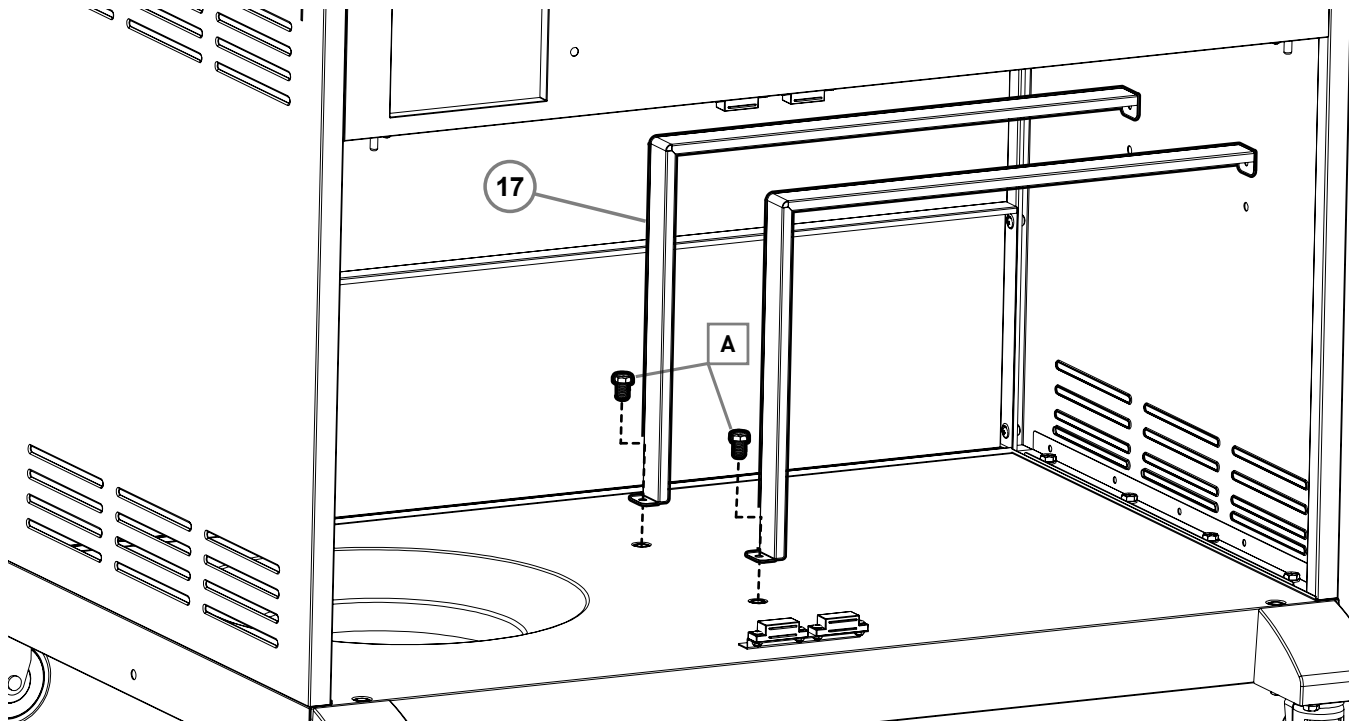



## STEP 6

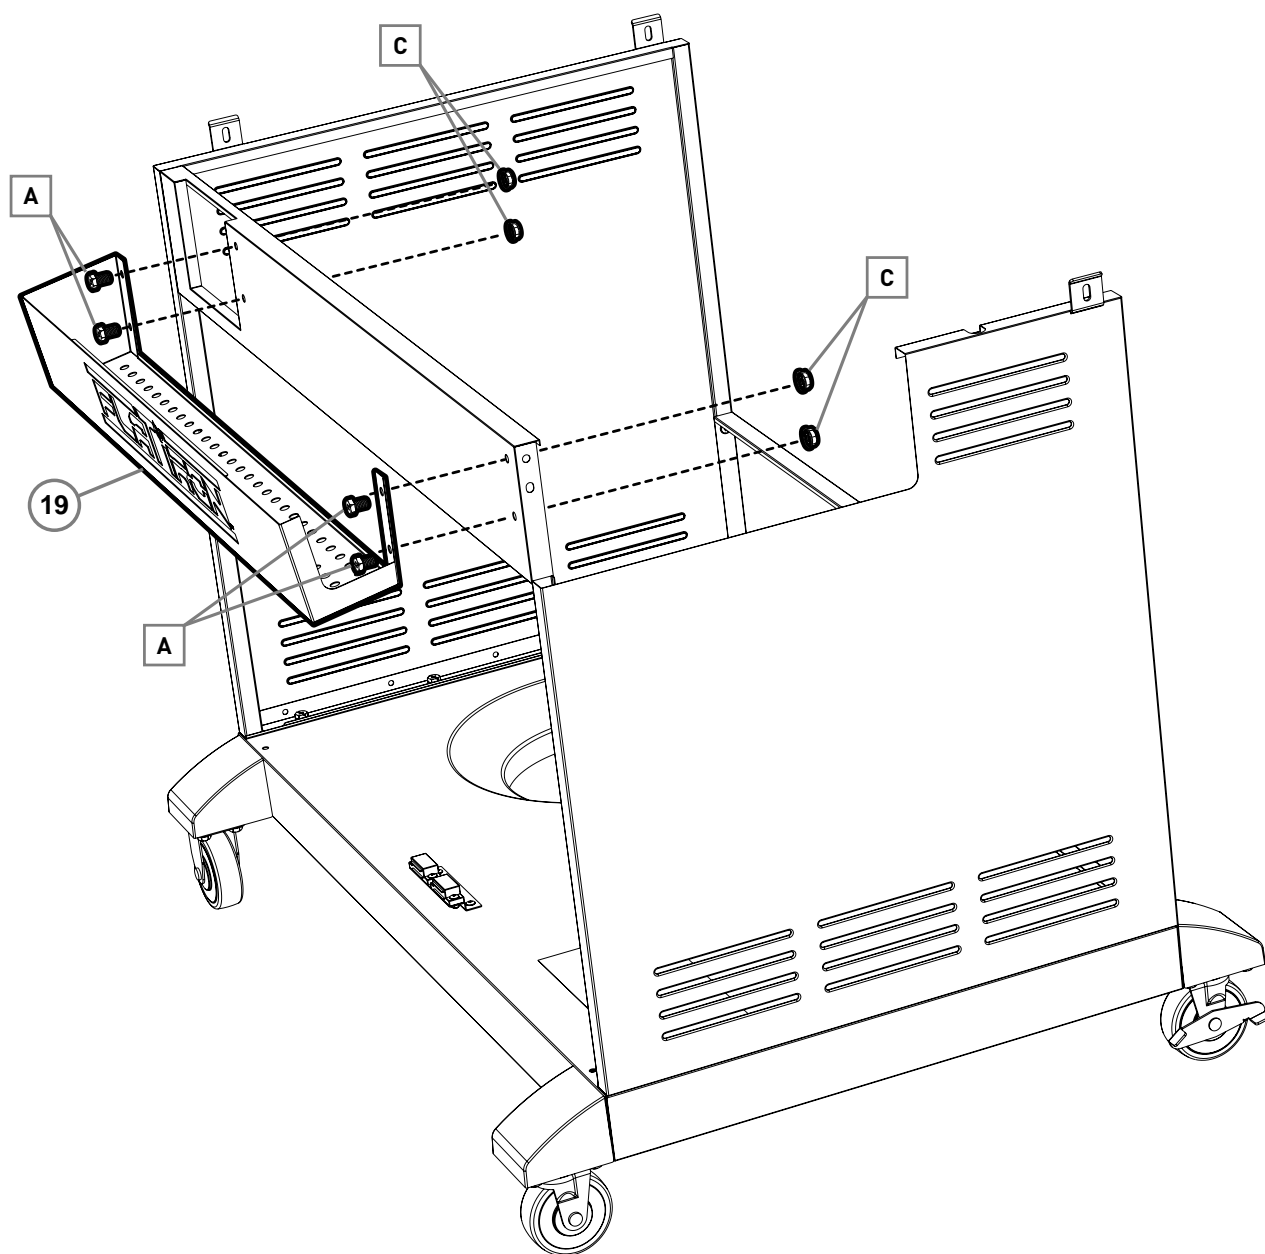








## STEP 7

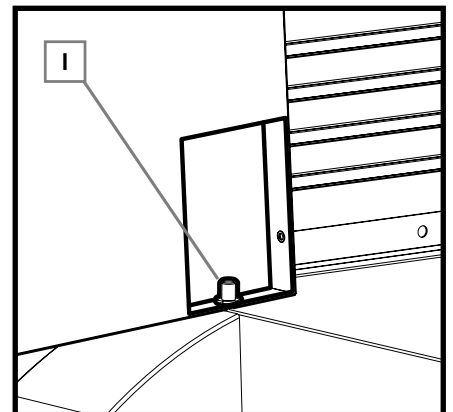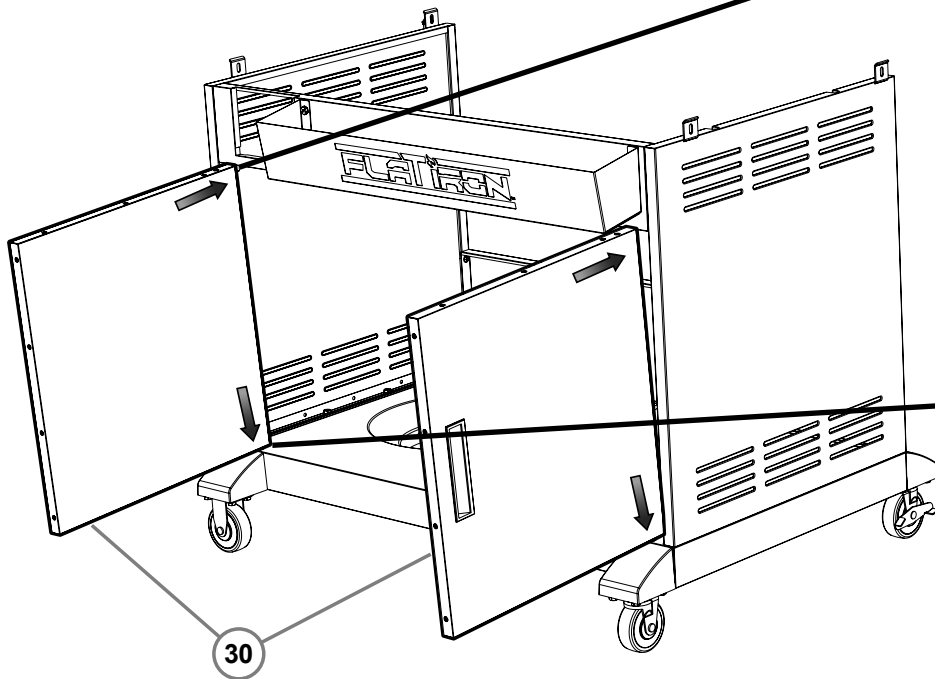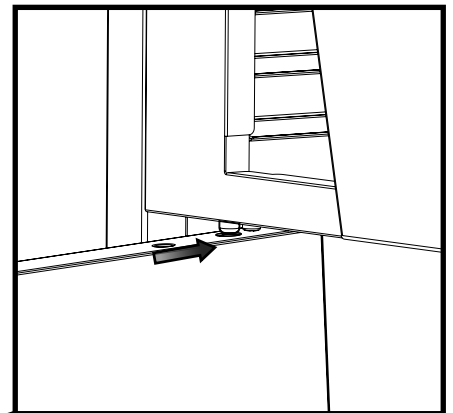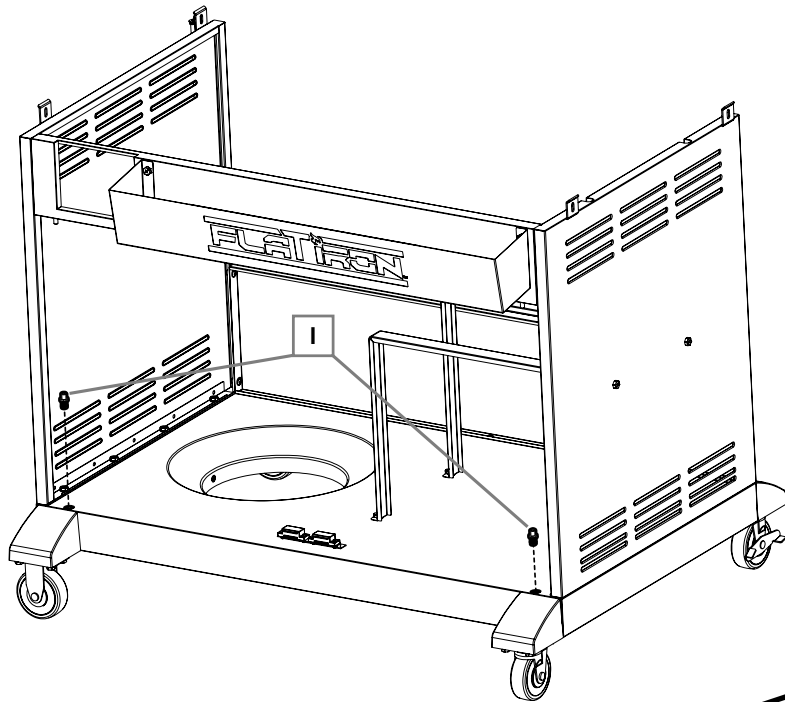




## STEP 8

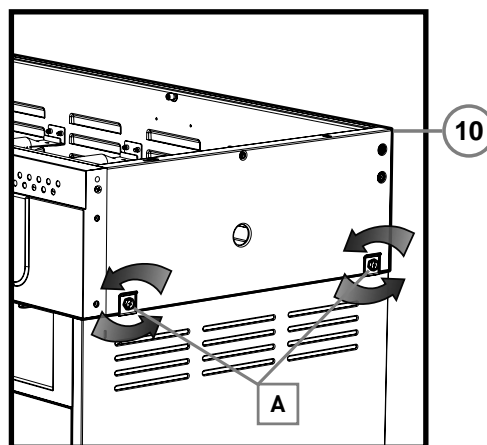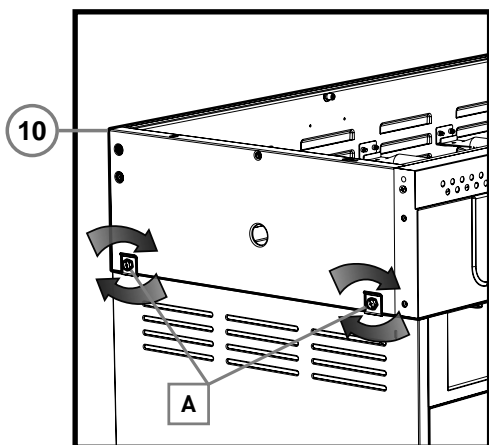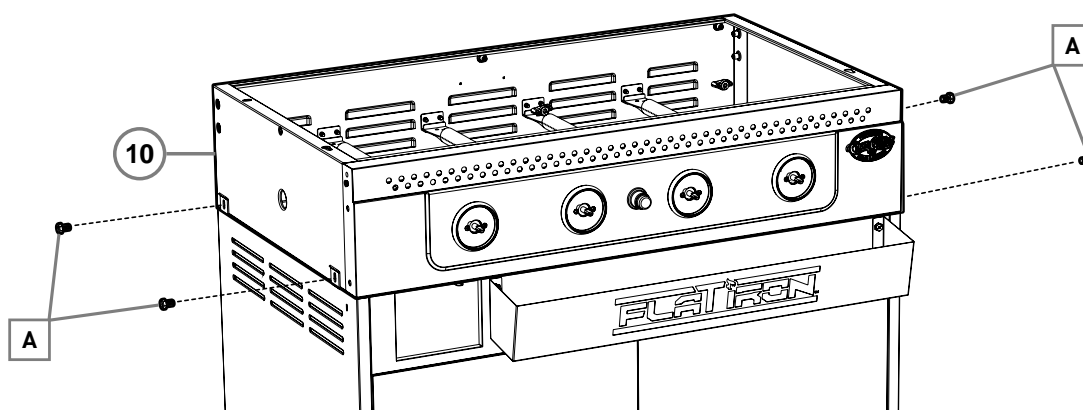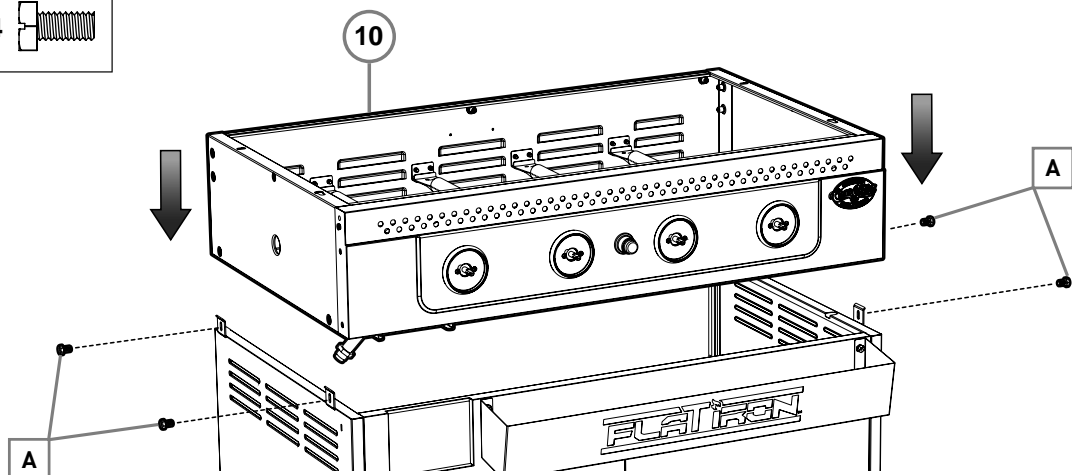




## STEP 9

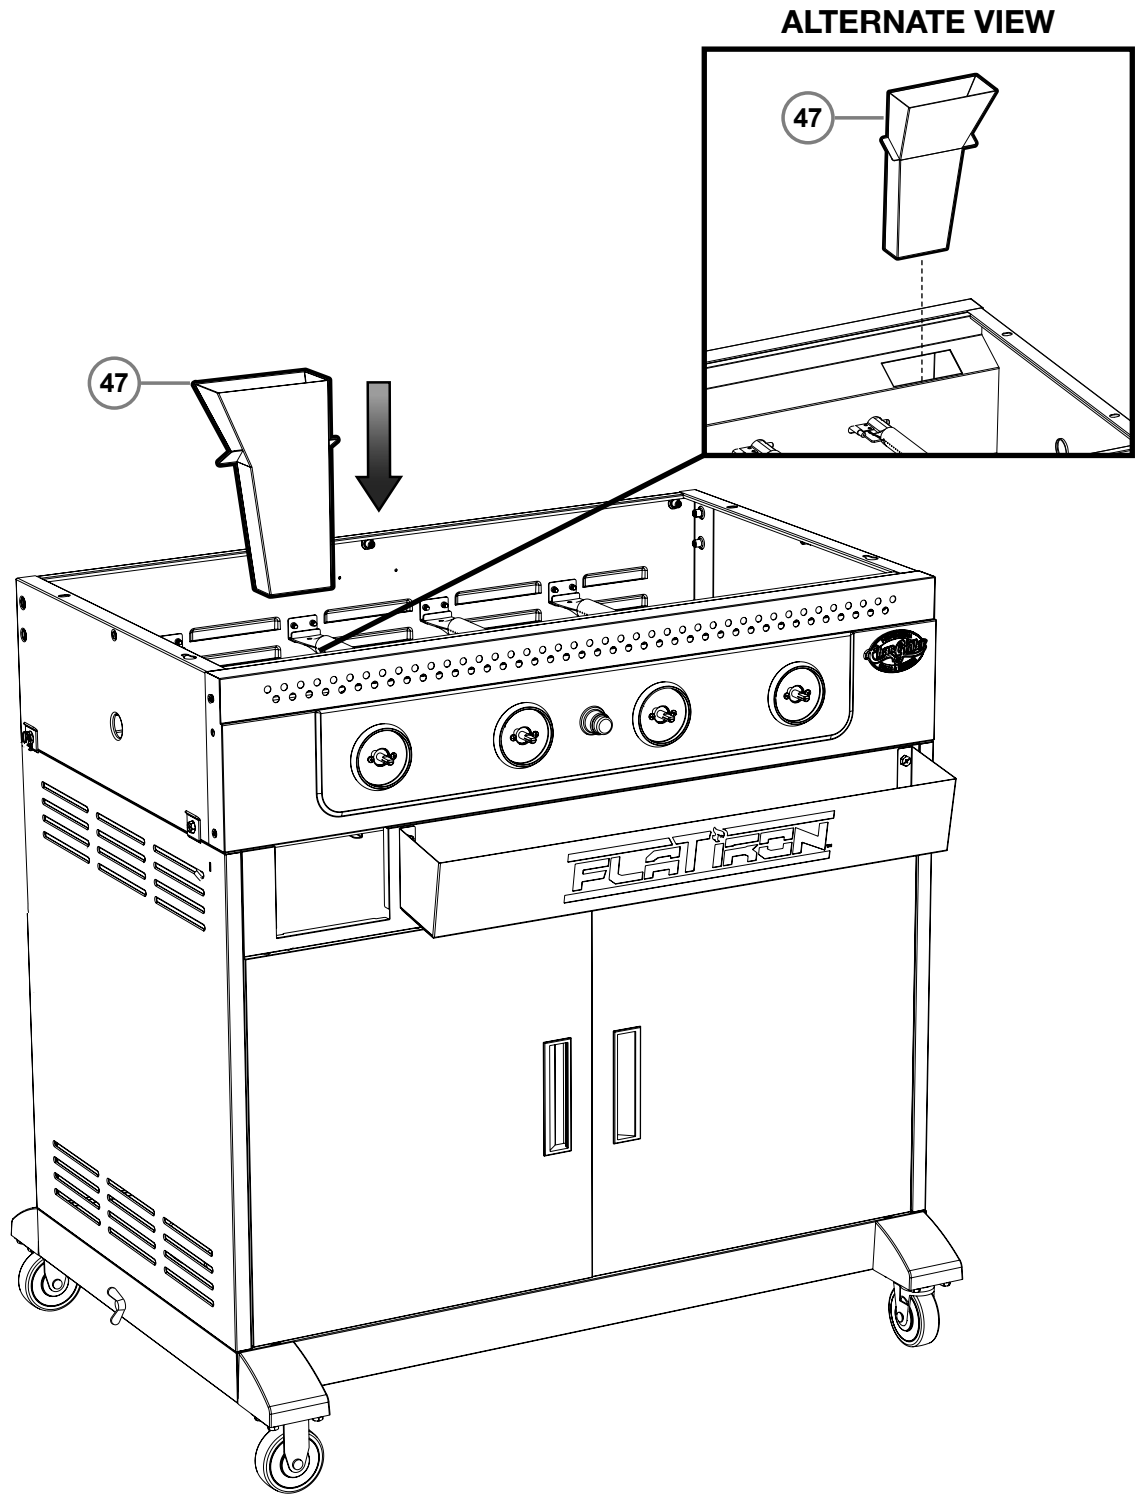


## STEP 10A

---

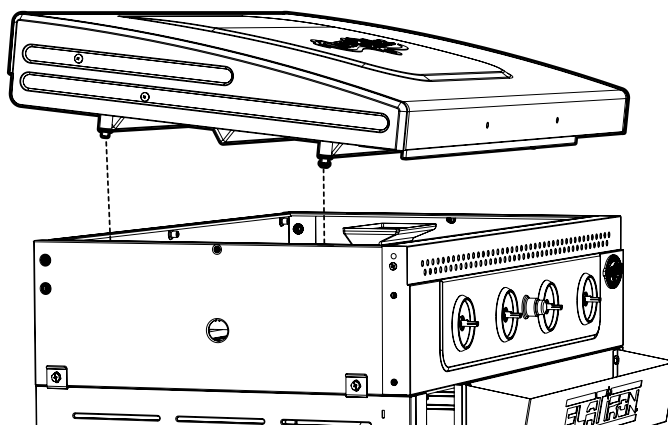


## STEP 10B

---

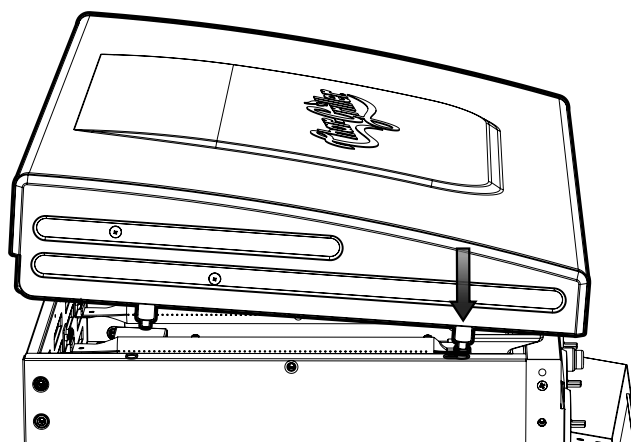

## STEP 10C


---

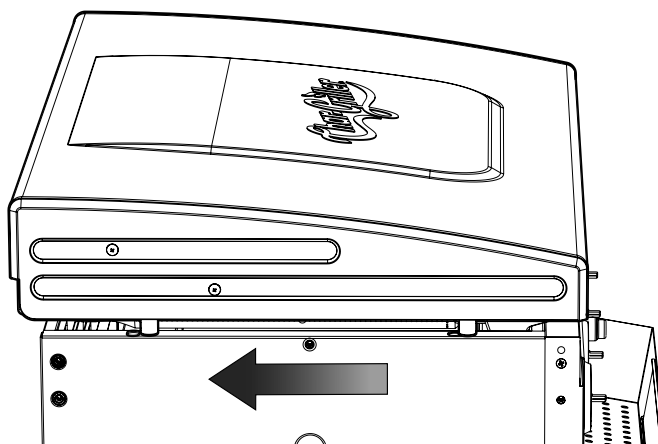




## STEP 11

---




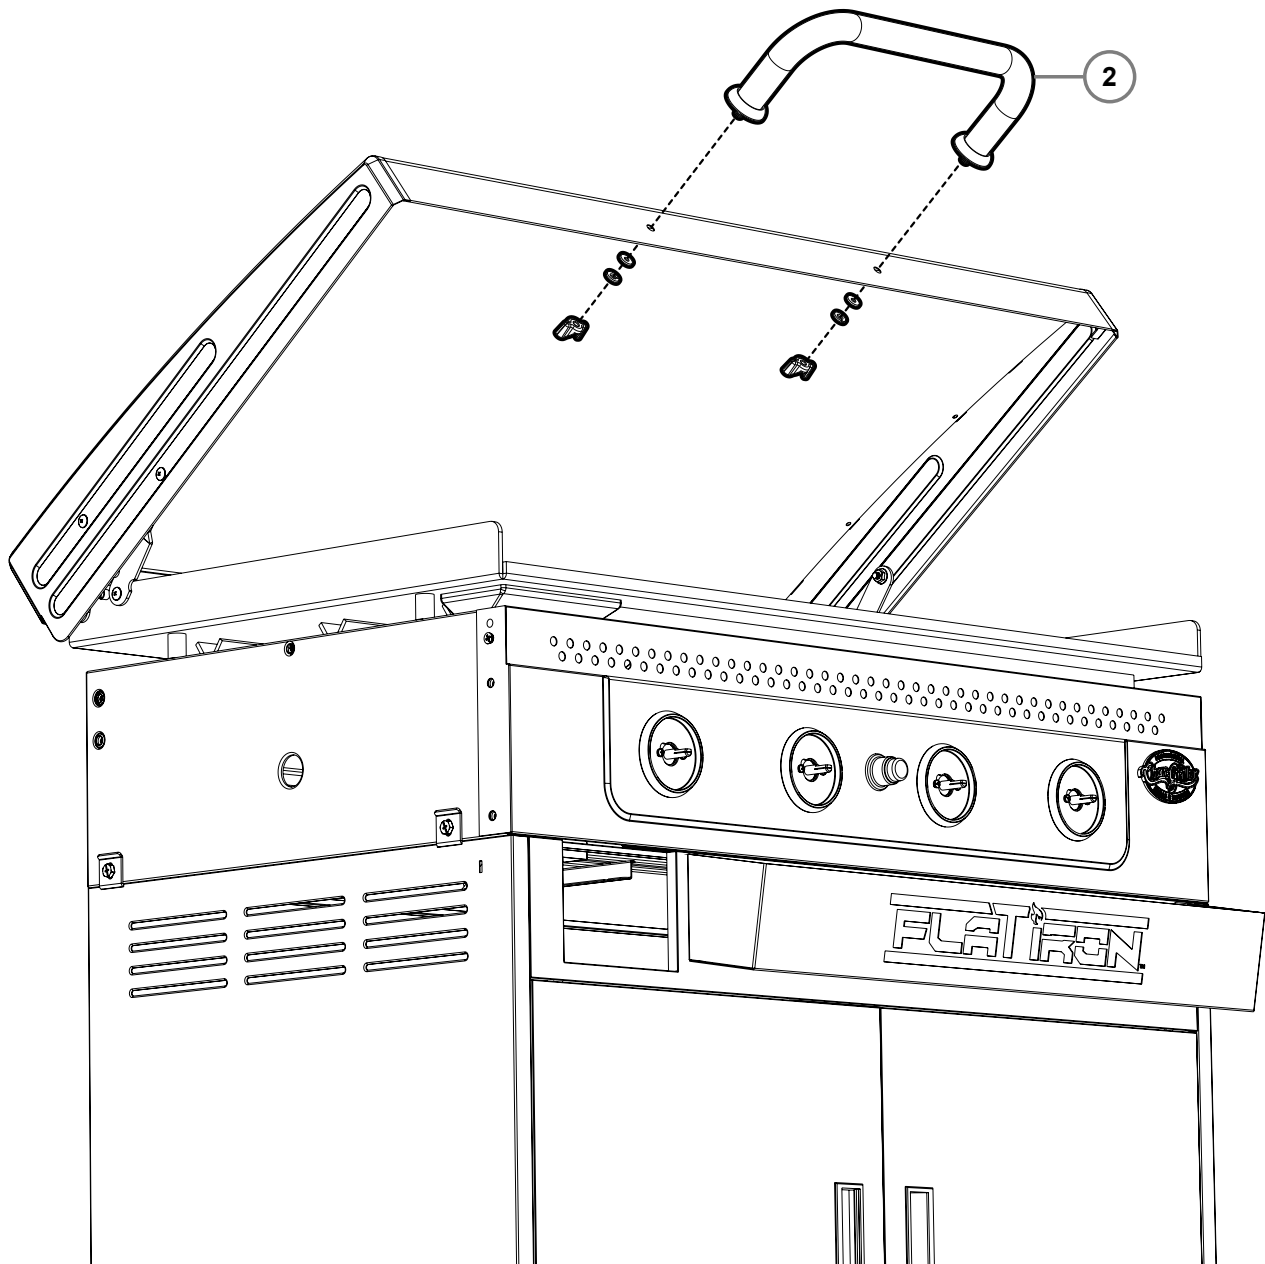


## STEP 12A

G x5

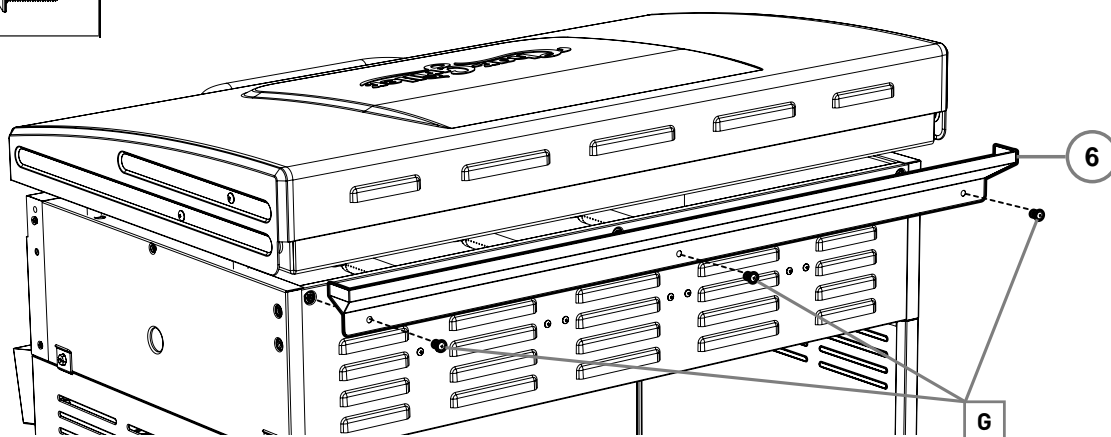


## STEP 12B

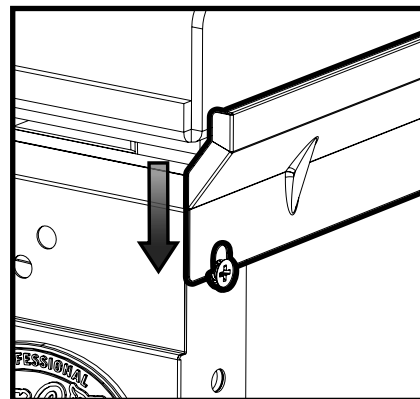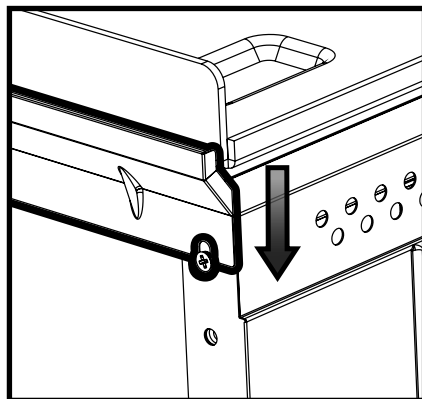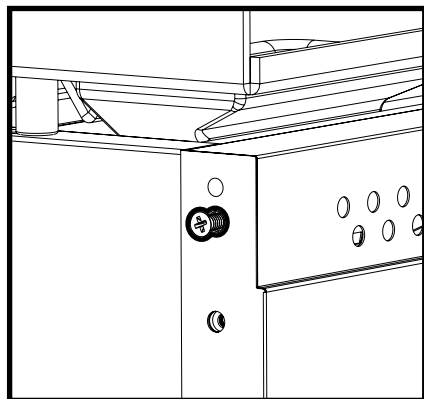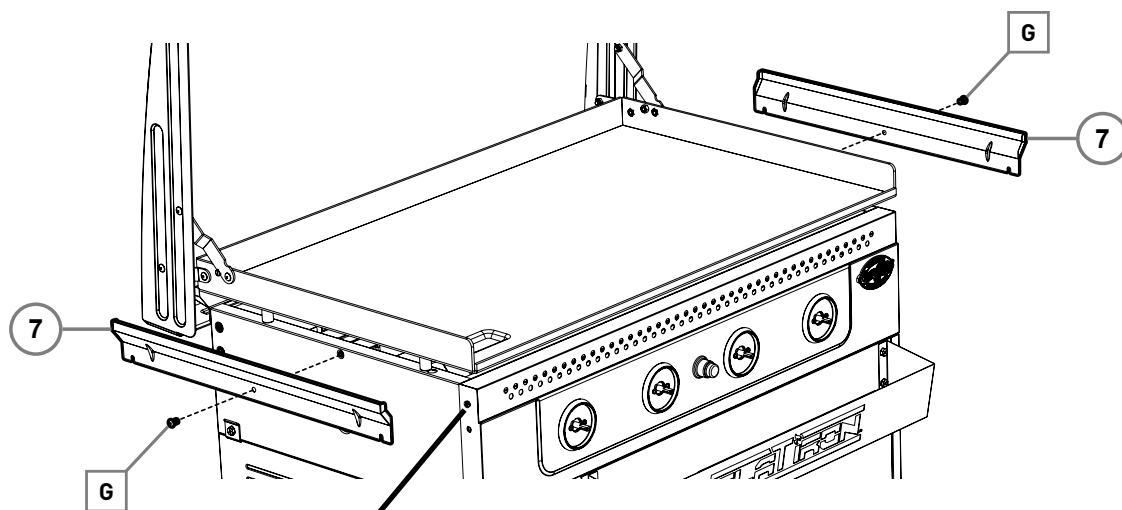









### STEP 13

**E** x6 

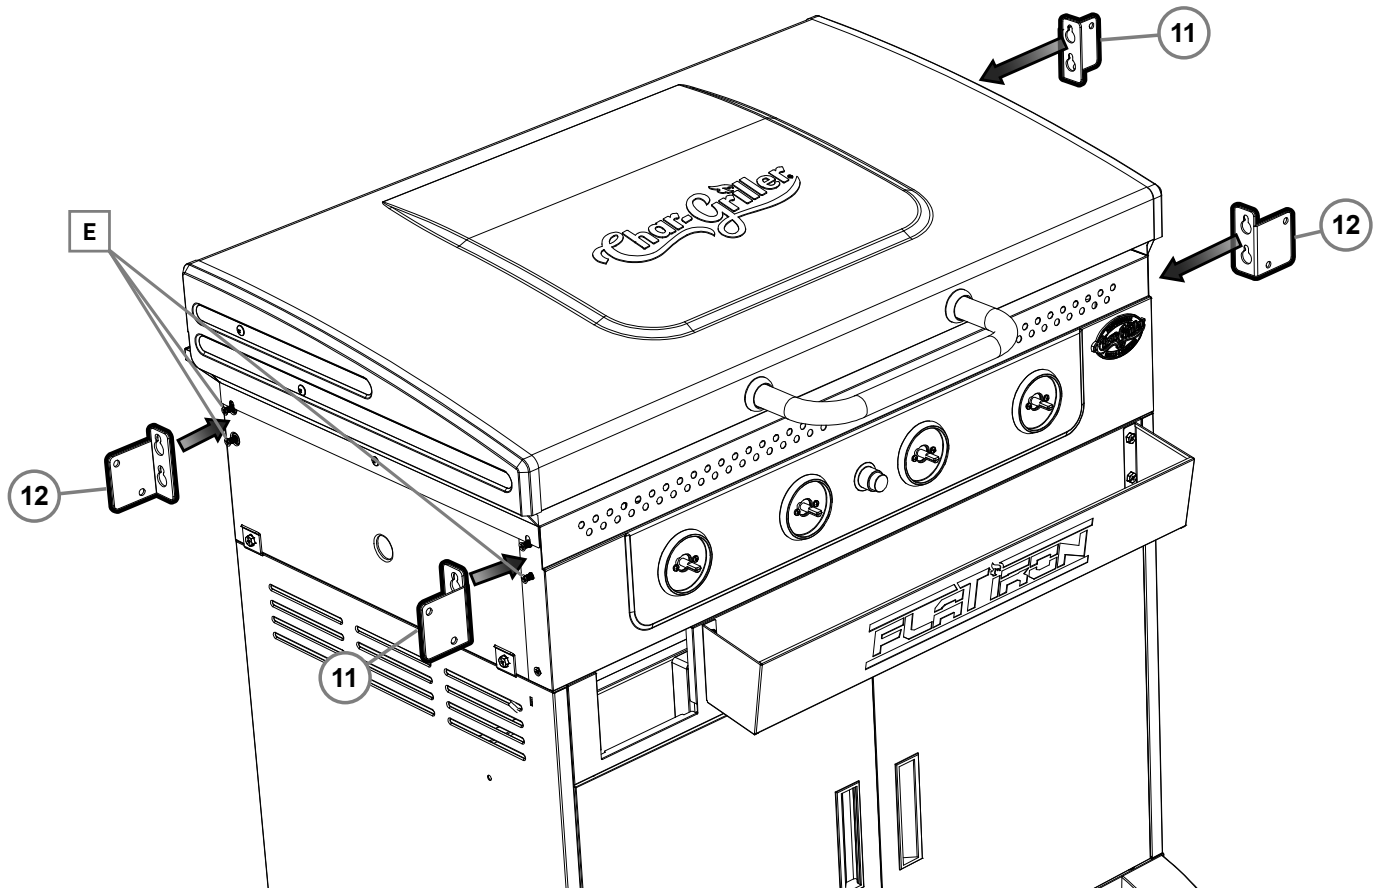




## STEP 13 (Continued)

---

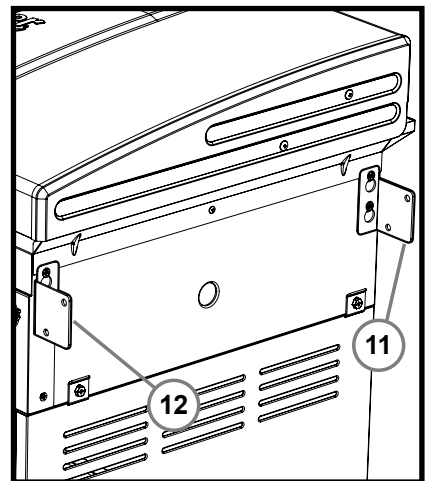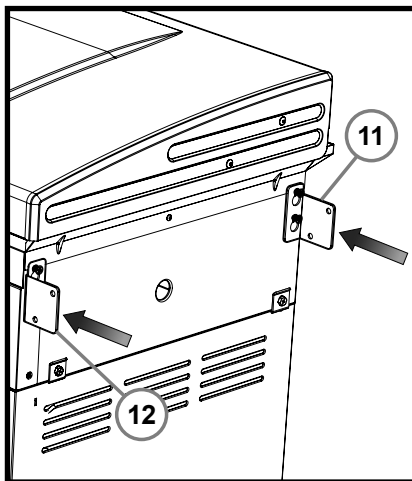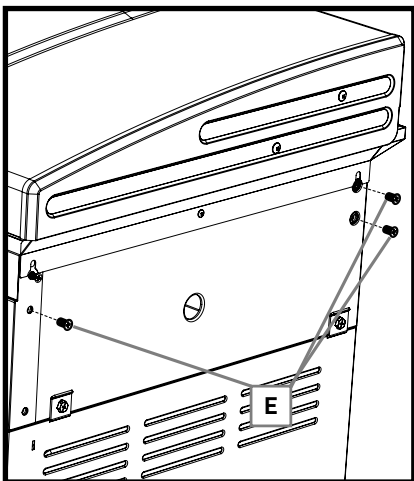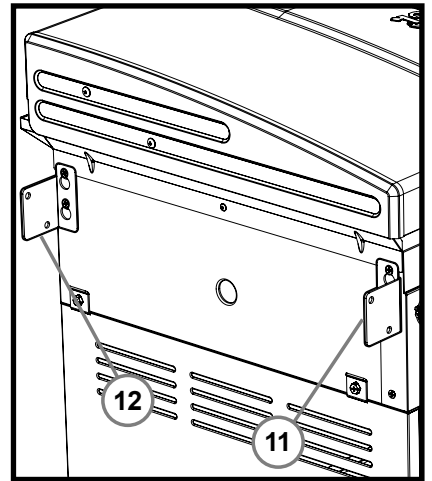
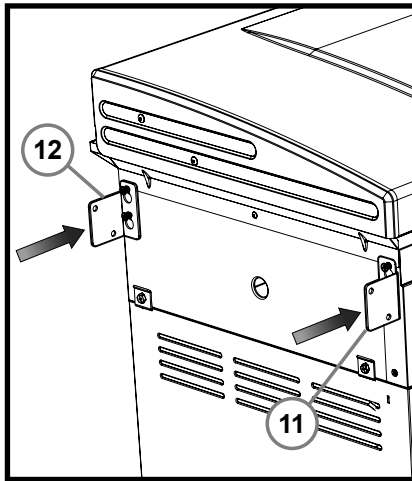
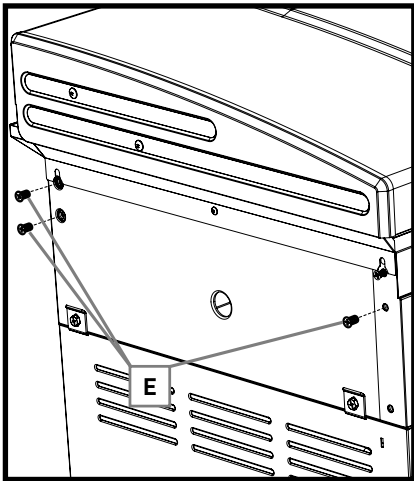




### STEP 14A

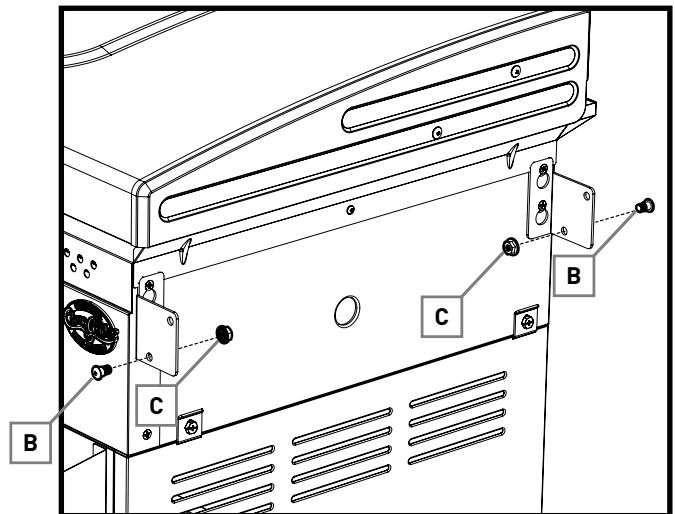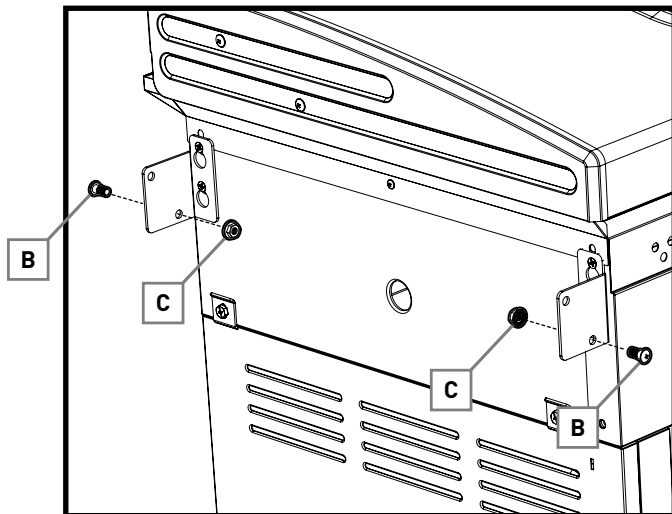


### STEP 14B

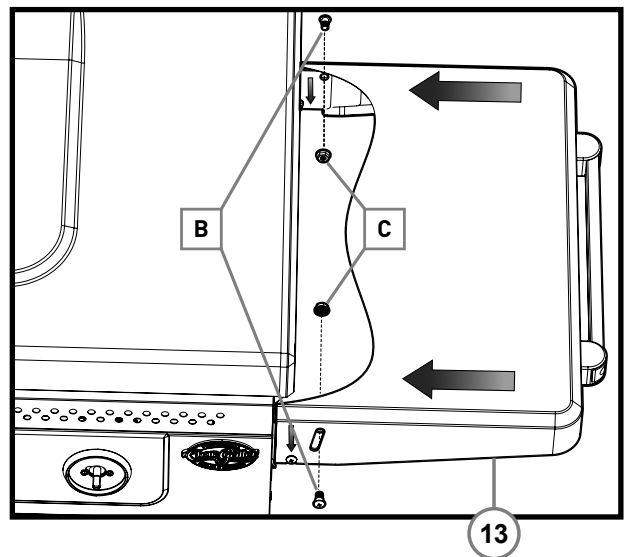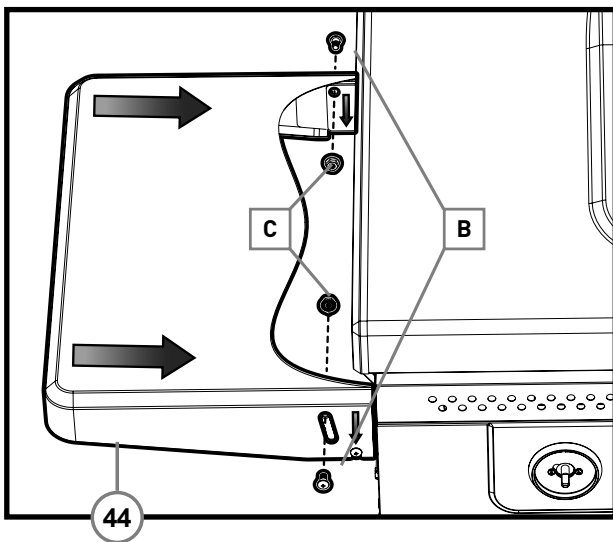






## STEP 14C

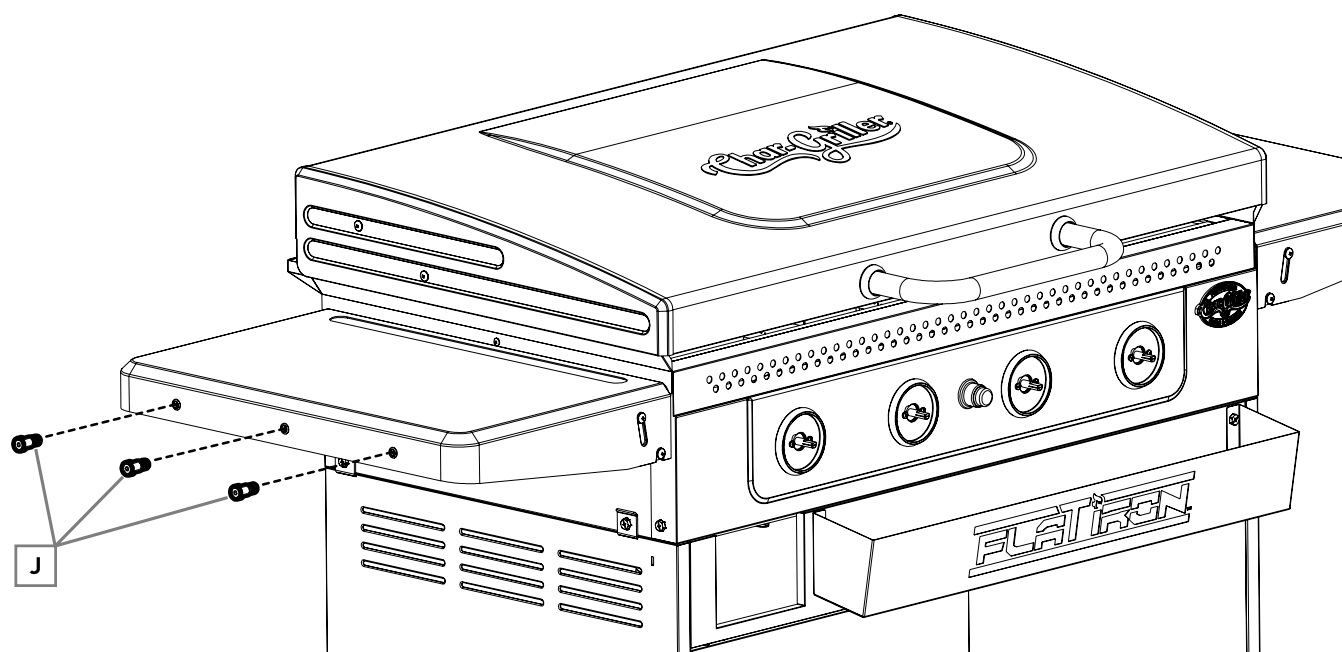


## STEP 15

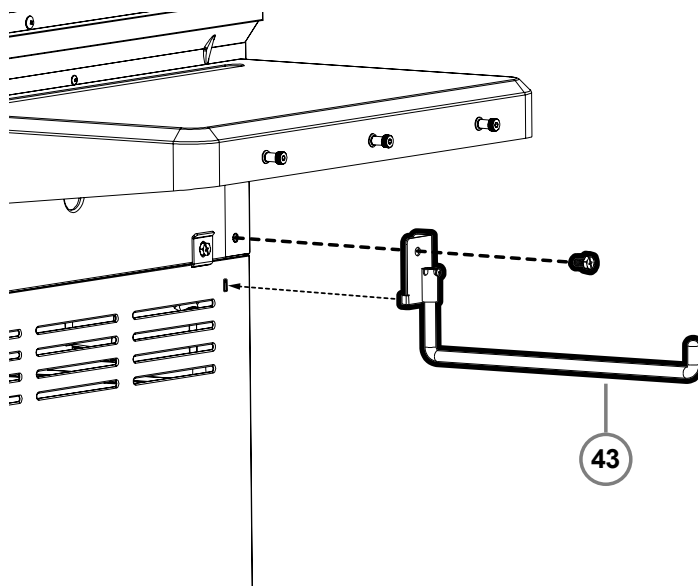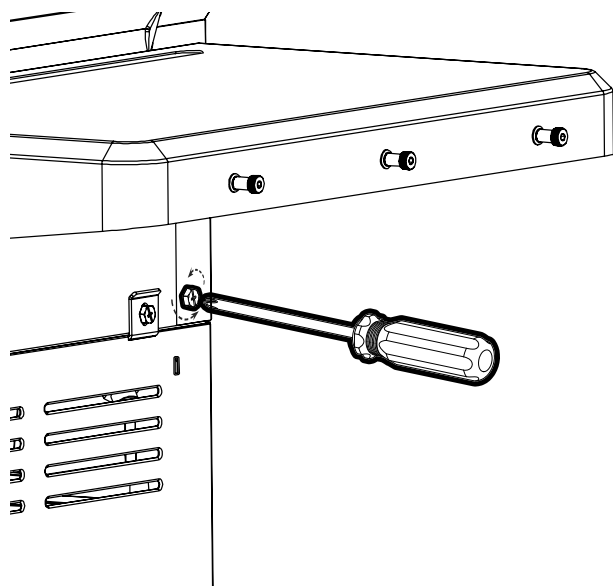

**STEP 16A**


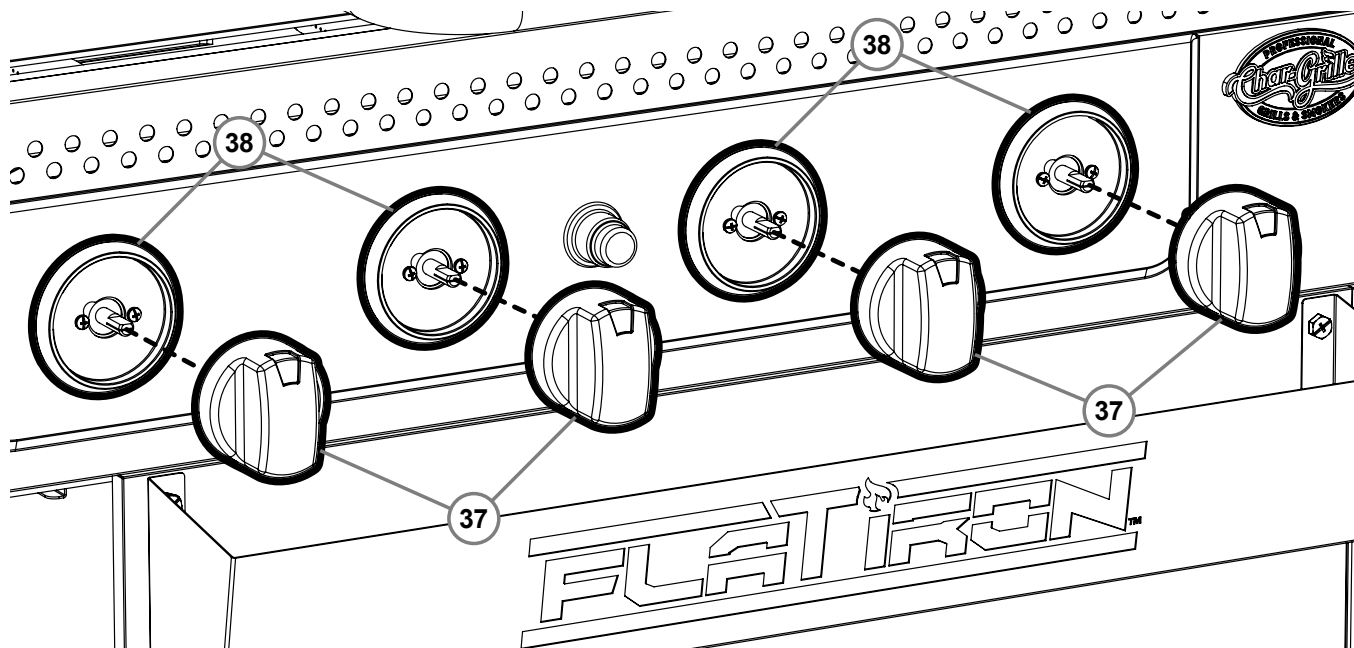


**STEP 16B**

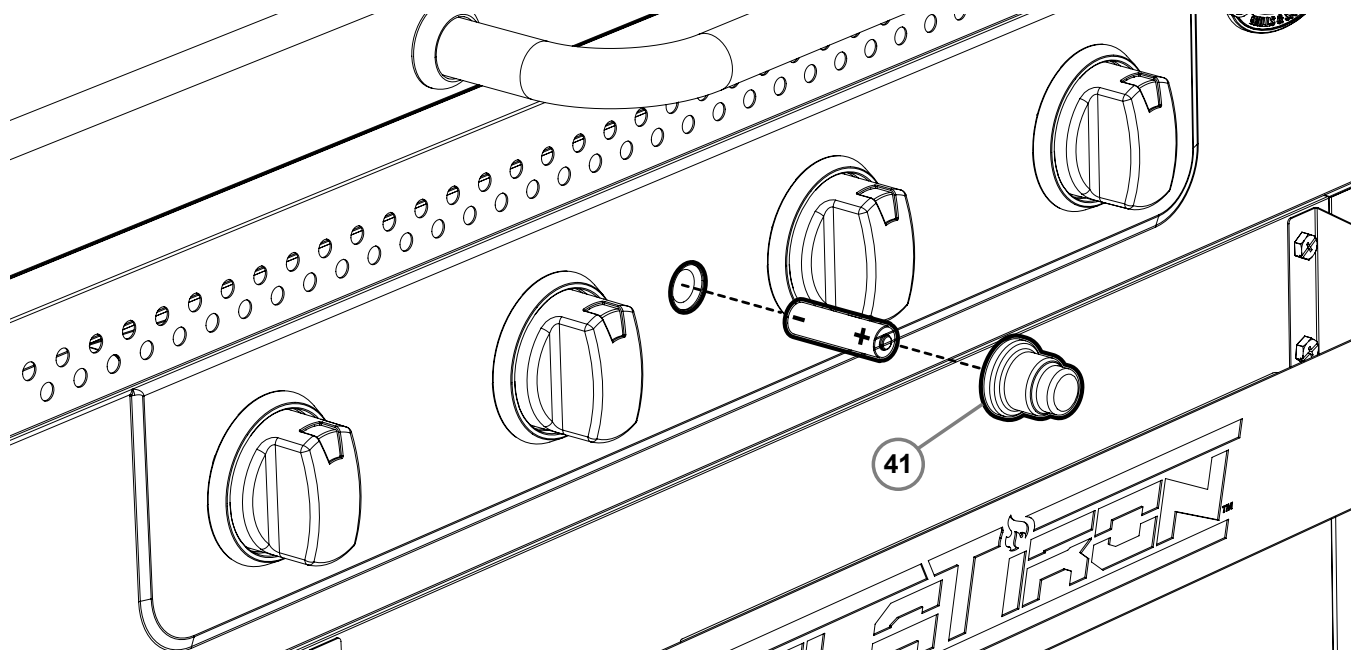

## STEP 17

---

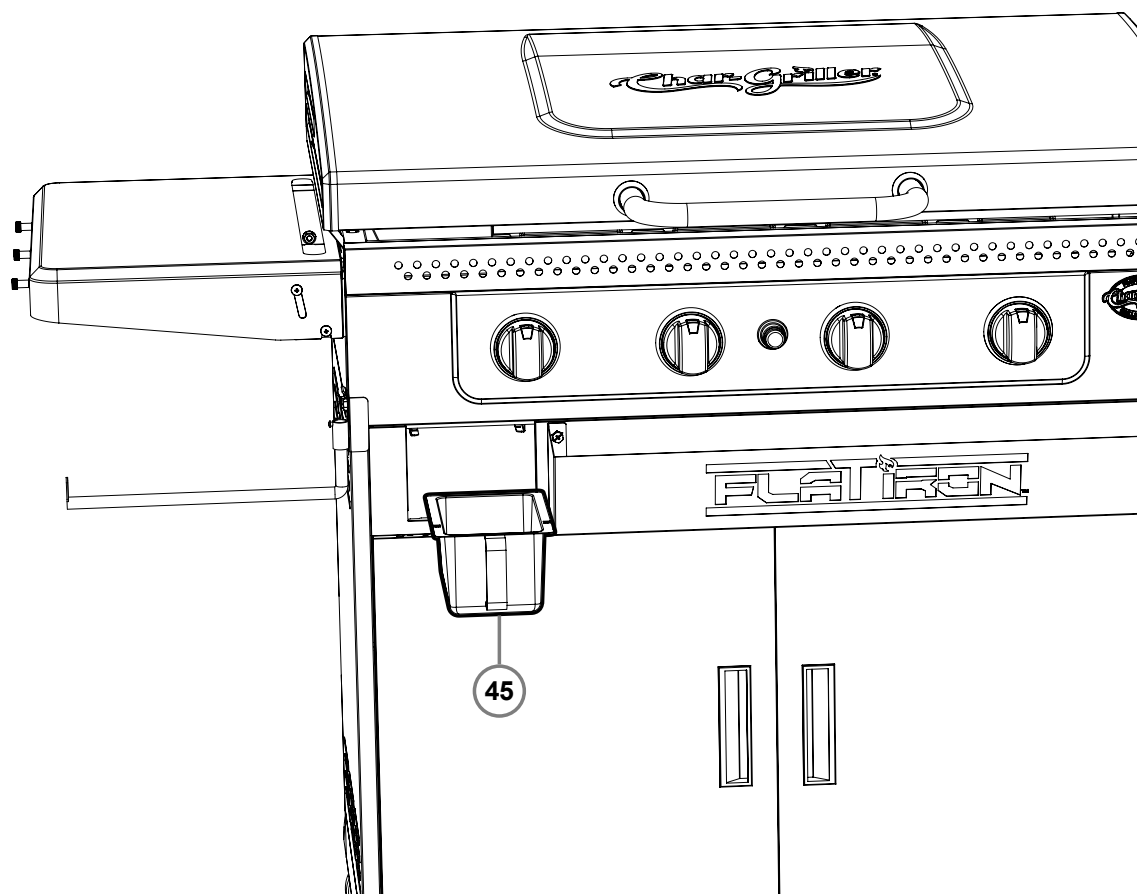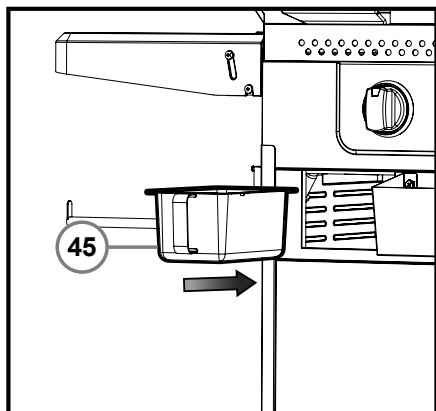



# FULLY ASSEMBLED



**PRODUCT DIMENSIONS:**  
1638mm x 738mm x 1067mm



**LEARN HOW TO SEA-  
SON YOUR NEW GRID-**

# OPERATING INSTRUCTIONS

## Setting Up

This appliance is designed for use outdoors, away from any flammable materials. It is important that there are no overhead obstructions and that there is a minimum distance of 12 feet (~4 m) from the side or rear of the appliance. Maintain 10 ft. (3.05 m) clearance to objects that can catch fire or sources of ignition such as pilot lights on water heaters, live electrical appliances, etc. It is important that the ventilation openings of the appliance are not obstructed.

The griddle must be used on a level, stable surface. The appliance should be protected from direct drafts and positioned or protected against direct penetration by any trickling water (e.g. rain). Do not move griddle while hot, and do not leave unattended during operation.

Protect LP cylinder from direct sunlight and keep away from heat sources max. 122°F (50° C). Do not move griddle while hot, and do not leave unattended during operation. Position gas cylinder such that hose is not bent, twisted, subject to tension, or touching any hot parts of appliance.

NEVER EXCEED 650°F BECAUSE THIS WILL DAMAGE THE FINISH AND  
CONTRIBUTE TO RUST. PAINT IS NOT WARRANTED AND WILL REQUIRE TOUCH-UP.  
THIS UNIT IS NOT WARRANTED AGAINST RUST.

### CAUTION:

1. All cleaning and maintenance should be done when the griddle is cool and the fuel supply is DISCONNECTED.
2. Do NOT clean any griddle part in a self-cleaning oven as the extreme heat will damage the finish.
3. Do NOT enlarge valve orifices or burner ports when cleaning the valve or the burners.

### NOTICES:

1. This griddle should be thoroughly cleaned, inspected and seasoned on a regular basis.
2. Abrasive cleaners will damage this product.
3. NEVER use oven cleaner on any part of this griddle.

### BEFORE EACH USE:

1. Ensure griddle area is clean and free of any combustible materials like gasoline, lighter fluid or any other flammable vapors or liquids.
2. Do NOT obstruct the flow of the combustion of LP gas and the ventilation of air.
3. Keep the ventilation opening(s) of the LP gas tank area free and clear of debris.
4. Visually check the burner flames to make sure griddle is working properly.
5. See sections below for proper cleaning and maintenance instructions.
6. Check for obstructions of airflow to the burners. Spiders, insects, and webs can clog the burner tubes. A clogged burner can lead to a fire.



# **GAS OPERATION**

## **Regulator and Hose**

Regulator and Hose are supplied with the grill. If a replacement is necessary, please visit [CharGriller.com](http://CharGriller.com) or contact our Customer Service department at [Service@CharGriller.com](mailto:Service@CharGriller.com). DO NOT use replacement parts that are not intended for this grill. It is recommended that the regulator is changed within 10 years of the date of manufacture.

The use of the wrong regulator or hose is unsafe. Always check that you have the correct items before operating the grill.

The hose used must conform to the relevant standard for the country of use. A worn or damaged hose must be replaced immediately. Ensure the hose is properly connected to the gas grill and free of any obstructions, kinks, and/or entanglements.

## **Connecting the Hose to the Grill**

Before connection, ensure that there is no debris caught in the head of the gas cylinder, regulator, burner, and burner ports. Spiders and insects can nest within and clog the burner/venturi tube at the orifice. A clogged burner can lead to a fire beneath the grill.

Clean burner holes with a heavy-duty pipe cleaner.

Hose assembly comes pre-installed. If it is found that the hose is damaged, follow the manufacturer's instructions that came with the assembly for replacing the hose. Disconnect the regulator from the cylinder (according to the directions supplied with the regulator) when the grill is not in use.

The grill must be used in a well-ventilated area. Do not obstruct the flow of combustion air to the burner when in use. ONLY USE THIS GRILL OUTDOORS.

## **Gas Cylinder**

The propane gas supply cylinder to be used must be constructed and marked in accordance with the Specifications for propane gas Cylinders of the U.S. Department of Transportation (DOT), or the National Standard of Canada, CAN/CSA B339, Cylinders, Spheres, and Tubes for Transportation of Dangerous Goods; and Commission, as applicable. Only use 20-pound cylinders equipped with a Type 1 cylinder connection device for outdoor cooking appliances. The cylinder must include a collar to protect the cylinder valve. If the appliance is not in use, the gas cylinder must be disconnected.

The gas cylinder should not be dropped or handled roughly! If the appliance is not in use, the cylinder must be disconnected. Replace the protective cap on the cylinder after disconnecting the cylinder from the appliance.

Cylinders must be stored outdoors in an upright position and out of the reach of children. Cylinders must not be stored in a building, garage, or any other enclosed area. The cylinder must never be stored where temperatures can reach over 122°F (50°C). Do not store the cylinder near flames, pilot lights or other sources of ignition. DO NOT SMOKE NEAR A GAS CYLINDER.


Again, this appliance is designed for use outdoors only and away from any flammable materials. It is important that there are no overhead obstructions and that there is a minimum distance of 12 feet (~4 m) from the side or rear of the appliance. It is important that the ventilation openings of the appliance are not obstructed. The grill must be used on a level, stable surface. The appliance should be protected from direct drafts and positioned or protected against direct penetration by any trickling water (e.g. rain).

**Parts sealed by the manufacturer or its agent must not be altered by the user. No modifications should be made to any part of this appliance and repairs and maintenance should only be carried out by a registered service engineer or technician.**

**Purchase LP cylinders only with these required measurements: 12" (30.5cm) (diameter) x 18" (45.7cm) (tall) with 20lb (9kg) capacity.**

## Proper Orientation of the Gas Cylinder


Please use the proper LP cylinder orientation to provide vapor withdrawal. NOTE: The LP cylinder must be fully upright with the valve on top to have proper vapor withdrawal. See figure for correct orientation.

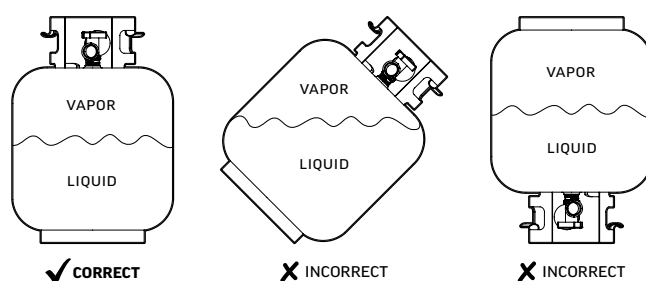

## Installing the Gas Cylinder on the Grill

This grill is only suitable for use with low-pressure propane gas fitted with the appropriate low-pressure regulator via a flexible hose. The hose should be secured to the regulator and the grill with hose clips.


1. Ensure all control knobs are in the OFF position and verify that the gas cylinder valve is closed by turning the handle on the gas cylinder valve clockwise until it stops.
2. Remove the protective cap from the gas cylinder valve nozzle.
3. Ensure cylinder nozzle is facing out towards you.
4. Place bottom tank collar in the slot on the tank support bracket then slide the tank secure wire over the top tank collar.
5. Hold the regulator in a straight line with the gas cylinder valve nozzle so the connection does not cross thread.
6. Perform a Leak Test. (See Leak Testing section of this manual).

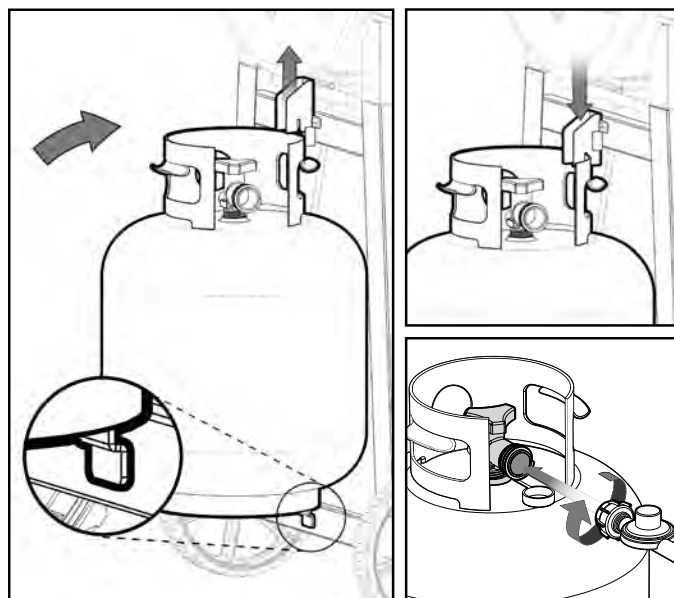



## Disconnecting the Gas Cylinder

1. Turn all control knobs to the OFF position and turn the handle on the gas cylinder clockwise until it stops.
2. Turn coupling nut on regulator in a counter-clockwise direction until regulator is released from threaded gas cylinder valve nozzle.
3. Place the protective cap over gas cylinder gas nozzle.

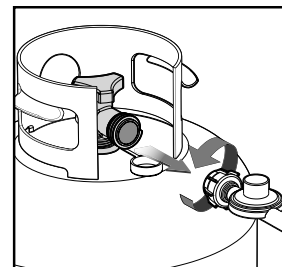

## **\*\* BEFORE USE CHECK FOR LEAKS \*\***

*Never check for leaks with a naked eye. Always use a soapy water solution.*

**NOTE:** Before starting the grill, check for leaks. Make sure the regulator valve is securely fastened to the burner and the cylinder to prevent fire or explosion hazard when testing for a leak.


Always perform the “Leak Test” as described below before lighting the grill or each time the cylinder is connected for use.

- Do not smoke or allow other sources of ignition in the area while conducting a leak test.
- Conduct leak test outdoors in a well-ventilated area.
- Do not use matches, lighters or a flame to check for leaks.
- Do not use grill until any and all leaks are corrected. If you are unable to stop a leak, disconnect the propane supply. Call a gas appliance serviceman or your local propane gas supplier.

## Leak Test

1. In a spray bottle mix 6-9ml. solution, 1 part dish washing soap, 3 parts water.
2. Ensure control valves/burner knobs are in the off position and that regulator is securely connected.
3. Open LP cylinder valve completely by turning wheel counterclockwise.
4. Apply the solution to the hose, gas valve, and regulator, and cylinder.
5. If bubbles form and grow on any of the tested components, there is a leak in the component. No bubbles means no leak.
6. If a leak has been identified please retest starting with steps 2-5. If leak persists, contact Customer Service at [Service@CharGriller.com](mailto:Service@CharGriller.com) or consult your Owner’s Manual for how to replace or repair grill components.

When performing cleaning and maintenance of the burners, always ensure burner ports are properly aligned with valve openings after reinstalling on the grill. See diagram below for correct alignment.

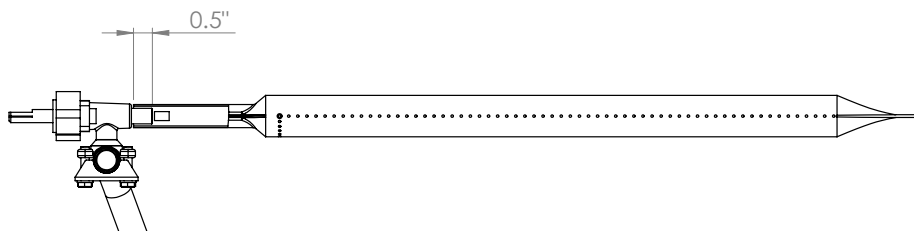



## Lighting Instructions


When lighting, keep your face and body as far away from burners as possible and never lean over grill surface. If grill does not light in 3-5 seconds, turn off the grill and wait 5 minutes for gas to clear before attempting to relight. Failure to do so may result in an explosive flare-up, which can cause serious bodily injury or death. Once lit, but before cooking on grill for first time, let grill sit for 15 minutes. This heat cleans grill's internal parts from anything they may have come into contact with during manufacturing and shipping.

**NOTE:** Before first use, it is important to properly season your grill to ensure the optimal performance and long life of your Char-Griller® grill (see the seasoning/care instruction provided in this manual).

## Main Burners

Make sure there are no obstructions of airflow to gas unit. Spiders and insects can nest within and clog the burner tube. A clogged burner tube can lead to a fire beneath grill.

1. Make sure all burner knobs are in OFF position and the grill hood is open.
2. Open valve on LP gas cylinder.
3. To ignite a burner, push in and rotate knob counterclockwise to "HI," then push and hold Electronic Ignition Button until burner lights. If burner does not light in 5 seconds, turn burner OFF, wait 5 minutes for gas to clear and repeat procedure.
4. Repeat for all desired burners. Light only burners intended for use.
5. Adjust knobs to desired cooking setting.

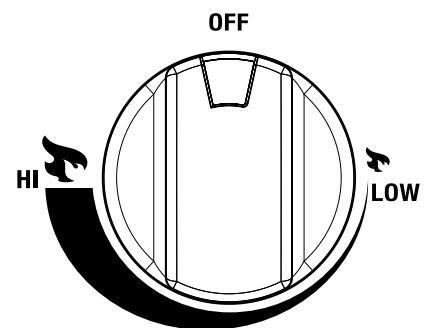

**After lighting**, observe burner flame and make sure all burner ports are lit.

**PRE-HEATING NOTE:** NEVER PRE-HEAT YOUR GRILL ON HIGH HEAT AS IT CAN CAUSE DAMAGE TO THE GRILL'S FINISH AND NEVER LEAVE YOUR GRILL UNATTENDED.

Proper pre-heating will ensure the best cooking performance for your grill. Always pre-heat your grill on the medium or medium-low setting for five minutes and then turn to high heat or desired temperature level.

**If burner flame goes out during operation**, immediately turn gas OFF on control panel and gas cylinder valve. Let gas clear for 5 minutes before relighting. **Clean grill after each use.** DO NOT use abrasive or flammable cleaners, as they can damage parts and may start a fire.

## Shutting Off Burners

1. Turn knob(s) clockwise to HI position, then push in and turn to OFF. Never force knob without pushing in, as this can damage valve and knob.
2. Promptly close gas cylinder valve.





## Lighting Burner with a Match

1. Make sure all burner knobs are in OFF position.
2. Open valve on LP gas cylinder.
3. Push in and rotate knob counterclockwise to "HI" position.
4. Place match in match holder installed on the side of the grill housing. Once match is lit, place flame through hole on left side of the body near burner ports. Burner should light immediately.
5. Adjust knobs to desired cooking settings.

## Observe Flame Height When Lit

Flame should be blue and yellow in color and approximately 1/2 in. - 3/4 in. (1.2 cm - 1.9 cm) tall on HI setting.

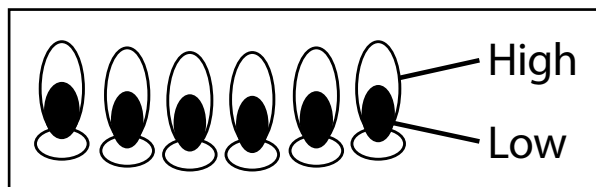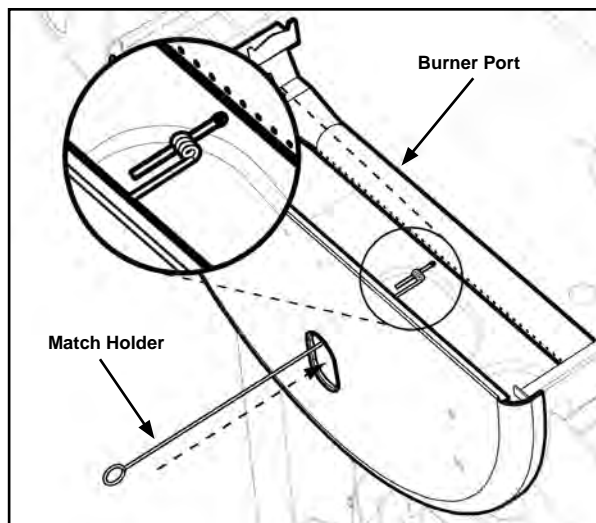

## Temperature Management

Manage heat by adjusting burner knobs from high to low to maintain desired heat for cooking conditions. Weather conditions will impact your grill's heat fluctuations. More heat will be required for cold and windy conditions. Different types and amounts of food will also impact your temperature management and distribution. Make sure to consider these elements when cooking for the optimal grilling experience.

# GRIDDLE CARE & SEASONING

Follow these simple cleaning and seasoning steps for optimal performance and long life of your Char-Griller® Griddle. The griddle surface should be cleaned and seasoned regularly, preferably before and after each use. This regular maintenance will improve your cooking experience as well as help extend the longevity of your griddle. We strongly recommend that the unit be covered when left outside for any length of time, especially during the winter months.

Char-Griller® products are packaged with a thin coating of vegetable oil to protect against rust and damage during shipping. This coat may leave some discoloration on your griddle. This is normal and will even out during the seasoning process.

## What is Seasoning?

Seasoning is the process of treating a metal cooking surface with a non-stick coating formed from bonding fat or oil to the surface with high heat. This step is essential to prepare raw steel or cast-iron cookware for use. There are two main reasons for seasoning:

- To coat the cookware to prevent rust
- To create a natural, permanent non-stick cooking surface

Seasoning is an easy, but very important step when using and maintaining your Char-Griller® Griddle. Your griddle can and should be seasoned repeatedly to constantly restore the cooking surface and to continuously improve its cooking performance over time.

*Remember: Seasoning is an ongoing process that takes time and repeated use before a griddle or pan develops a shiny, black surface like your grandmother's cast iron cookware. The more often you cook on and season your griddle, the more non-stick the surface will become.*

## Seasoning Instructions

1. Ensure griddle surface is clean and completely dry.
2. Light the gas burners and allow the surface of the griddle to heat up (MED-HI).
3. After griddle has heated up, carefully apply a generous, even coating of food-grade cooking oil (vegetable, olive, flaxseed, etc.) to the griddle surface.
4. Use a paper towel and tongs to spread the oil evenly across and thinly coat the entire cooking surface of the griddle.
5. When coated surface begins to lightly smoke, turn off the burners and allow griddle to cool down naturally.
6. Your griddle is now ready for use!

For optimal results, season the griddle surface after each use for the first 10 to 12 uses.



**LEARN HOW TO  
SEASON YOUR  
NEW GRIDDLE!**



## **Cleaning the Griddle**

### **BEFORE FIRST USE:**

Char-Griller® Griddles are coated with vegetable oil to prevent rust and damage during shipping. Before first time use, wash the griddle surface with hot, soapy water. **THIS IS THE ONLY TIME YOU SHOULD USE SOAP OR DETERGENT ON THE GRIDDLE.** Rinse and dry completely with paper towels.

Proceed with seasoning instructions.

### **AFTER EACH USE:**

To clean the griddle after each use, gently scrape away any food residue or build up with a spatula and wipe down the griddle surface with a paper towel. If necessary, pour hot water onto the griddle surface and let it boil off tough residue. Wipe again with a paper towel and dry completely. ¼ cup of table salt can also be used to buff off stuck on food.

For optimal performance, coat the still warm griddle with a thin layer of vegetable oil after each cook to help maintain the seasoned surface.

## **General Griddle Cleaning**

- Do not mistake brown or black accumulation of grease and smoke for paint.
- Do NOT apply a caustic griddle/oven cleaner to painted surfaces.
- To clean plastic parts: Wash them with warm soapy water and wipe dry. Do not use Citrisol, abrasive cleaners, degreasers or a concentrated oven cleaner on plastic parts. Damage to and failure of parts can result.
- To clean painted surfaces: Wash with mild detergent or nonabrasive cleaner and warm soapy water. Wipe dry with a soft nonabrasive cloth.
- If rust or scaling develop on the cooking surface, scrub it off using steel wool, a steel brush or high grit sandpaper and re-season surface.

Baked-on grease deposits may require the use of an abrasive plastic cleaning pad. Use only in direction of brushed finish to avoid damage. Do not use abrasive pad on areas with graphics.

## **Storage of Appliance**

Ensure griddle surface is completely dry before storing. When the appliance is not in use, it should be covered and stored in a dry, dust-free environment. Storage of an appliance indoors is only permissible if the cylinder is disconnected and removed from the appliance. To maximize life of the grill, use a custom-fit Char-Griller® Cover (Model #8075).

# **FREQUENTLY ASKED QUESTIONS**

## **Q. What if my griddle starts to rust?**

**A.** If rust appears on the griddle surface, carefully rub the rust off with steel wool or low grain sandpaper and re-season the surface. Take care to always completely dry your griddle before storing and keep away from rain and sprinklers.

**\*CUSTOMERS IN HUMID OR COASTAL CLIMATES MAY REQUIRE MORE FREQUENT SEASONINGS AND THE USE OF HEAVIER COOKING OILS TO AVOID RUSTING AND CORROSION.\***

## **Q. What types of cooking oils can I use to season my griddle?**

**A.** We recommend the following oils for seasoning purposes: vegetable oil, canola oil, coconut oil, flaxseed oil, olive oil and sesame oil. Lard can also be used to season the griddle top.

## **Q. Can I use dish detergent to clean my griddle?**

**A.** Grease cutting dish detergents will erase the seasoning on the griddle, so we do not recommend ever using soap on your griddle after it has been seasoned. For tough food caked on to the griddle, use table salt and hot water and scrub. Make sure to fully dry off the griddle and coat with oil after scrubbing.

## **Q. Why does my griddle surface look dull and dry instead of shiny and black?**

**A.** Season is a continuous process. Over time and the more often you season your griddle top, the more shiny, black and non-stick it will become.

## **Q. What do I do if I need to store my griddle for an extended period of time?**

**A.** We recommend coating your griddle top in a light layer of vegetable oil before storing for a long period of time. This will prevent rust and any residue from collecting on the grill. Make sure to cover and store in a dry place. When taking the griddle out of storage, wipe oil off with a paper towel.



# GRIDDLE RECIPES

## **Breakfast**

### SUNDRIED TOMATO OMELET

Ingredients (per omelet):

2 to 3 eggs  
2 tbsp Milk  
1 Tbsp Sundried tomatoes  
1 to 2 slices diced ham  
1/8 Cup Mozzarella Cheese  
Fresh Basil, chopped  
Salt and Pepper to Taste

Instructions:

1. Whisk together eggs, milk, and salt and pepper.
2. Preheat griddle to medium high and add desired oil.
3. Pour egg mixture on griddle using the spatulas to make sure it doesn't spread too much.
4. Allow to cook for 2 to 3 minutes and add in tomatoes, cheese, ham and basil to one side of the omelet and use the spatula to fold over the other side to make the omelet.
5. Turn down the burner to medium low and allow to cook until cheese is melted, flipping once.

### PANCAKES

Ingredients:

3 Cups of Flour  
2.5 Tbsp Baking Powder  
2 tsp Salt  
2 Tbsp Sugar  
2.5 Cups Milk  
Eggs  
6 Tbsp Melted Butter

Instructions:

1. Combine all ingredients and mix until smooth.
2. Heat a lightly oiled griddle to medium high heat.
3. Pour scoops of batter onto griddle using approximately ¼ cup for each pancake.
4. Brown on both sides and serve hot.

## FRENCH TOAST

### Ingredients:

12 slices of thick bread  
4 eggs  
1.5 Cups Milk  
½ tsp Ground Cinnamon  
½ tsp Ground Nutmeg  
2 tsp Vanilla Extract  
Salt to taste

### Instructions:

1. Beat together egg, milk, salt, spices and vanilla.
2. Heat lightly oiled griddle to medium high heat.
3. Dunk slices of bread in egg mixture, ensuring both sides are soaked.
4. Place soaked slices on griddle, cook on both sides until golden brown.

## BACON

### Ingredients:

Package of favorite bacon

### Instructions:

1. Heat griddle to medium high.
2. Place strips of bacon on griddle.
3. Flip to brown both sides.
4. Remove when desired level of crispiness is reached.



## **Lunch**

### PHILLY CHEESESTEAK

#### Ingredients:

2 Lbs thinly sliced beef  
1 Onion, Sliced  
2 Green Peppers, Sliced  
1 tsp garlic powder  
2 Tbsp butter  
Salt and Pepper to Taste  
3 Tbsp Apple Cider Vinegar  
12 to 16 slices of Provolone Cheese  
1 Jar of Cheese Whiz  
6 Hoagie Rolls

#### Instructions:

1. Preheat grill to medium high heat.
2. Add tablespoon of butter and some oil to griddle.
3. Add onions and peppers to griddle.
4. Season with salt, pepper, vinegar and ½ tsp garlic powder. Toss to combine.
5. Add another tablespoon of butter and some oil to the griddle.
6. Add beef to the griddle and chop it up more with your metal spatulas to ensure it cooks evenly.
7. Season beef with salt, pepper and ½ tsp of garlic powder.
8. When meat is cooked, divide it up on the griddle top into 6 piles.
9. Turn griddle heat to medium and add a few tablespoons of Cheese Whiz to each pile of meat.
10. Divide veggies up evenly among the six piles of meat.
11. Add 2 to 3 slices of provolone cheese to each pile.
12. Split the hoagie rolls and toast them on the griddle.
13. Once the cheese is melted, put each pile of meat on hoagie roll and serve hot.



## SMASH BURGER

### Ingredients:

2 Lbs of ground beef  
American Cheese  
Salt and Pepper  
Char-Griller® Steak Rub  
Hamburger Buns – 12

### Instructions:

1. Season beef and portion out into 1 inch round balls.
2. Preheat griddle to medium high heat.
3. Place beef on griddle and place spatula on them, press down on the spatula to smash the burger until its super thin.  
*A rolling pin or wooden spoon helps with leverage.*
4. Cook burgers for 1 minute and then flip immediately placing cheese on top of the burger.
5. Allow to cook for one more minute.
6. Toast buns on griddle.
7. Stack two burgers on top of each other on bun and add burgers toppings if desired.

## FLAT IRON® TOMATO SOUP GRILLED CHEESE

### Ingredients:

8 Slices of Bread (Your Favorite Kind)  
4 Slices of Cheese (Your Favorite Kind)  
2 Tomatoes (Cut Into 8 Slices)  
1 Tbsp Garlic Salt  
1 Tbsp Olive Oil

### Instructions:

1. Make sure your Char-Griller® Flat Iron® griddle is seasoned and ready for use! Turn griddle on medium low heat, and preheat for 5-10 minutes.
2. Drizzle bread with olive oil, and sprinkle slices with garlic salt. Arrange on Flat Iron® griddle, and let the bread begin to toast for 2 minutes.
3. Next, layer your slice of bread with cheese, slices of tomato, and basil. Arrange the rest of the ingredients on the bread and the cheese to melt, about 5 more minutes.
4. Fold opposite half onto its match, and pull sandwiches from griddle. Cut in half, and enjoy!



## **Dinner**

### FLAT TOP STEAK

#### Ingredients:

6 Strip Steaks  
3 Tbsp Butter  
Salt and Pepper

#### Instructions:

1. Season steaks with salt and pepper on both sides.
2. Add butter to griddle and heat to medium high heat.
3. Add steaks to griddle and sear for 5 to 6 minutes on each side or until desired temperature is reached. (145 degrees is recommended).

### CHICKEN

#### Ingredients:

2 Lbs Chicken Breasts  
4 Tbsp Dijon Mustard  
2 Tbsp Honey  
2 Tbsp White Wine Vinegar  
3 Scallions, diced  
Salt and Pepper to Taste  
1 tsp Paprika

#### Instructions:

1. Add chicken, mustard, honey, vinegar, scallions, salt and pepper and paprika to plastic bag.
2. Ensure chicken is fully coated in marinade.
3. Marinate in refrigerator for at least 2 hours.
4. Add oil of choice to griddle and preheat to medium high.
5. Place marinated chicken on griddle and cook for 6 to 8 minutes on each side or until internal temperature reaches 165 degrees.
6. Serve with zucchini or asparagus. Also great chopped up on salads!


## SHRIMP STIR FRY

### Ingredients:

1 Lb. Shrimp, peeled and deveined  
1 Head of broccoli, chopped  
3 Large Carrots, peeled and chopped  
1 can of water chestnuts, drained  
1 can of baby corn, drained  
1 yellow onion, sliced  
2 Green Peppers, diced  
4 Cups of cooked rice  
1 Egg  
1 Tbsp Freshly grated ginger  
4 Tbsp Sesame Oil  
Soy Sauce to Taste  
Salt and Pepper to Taste

### Instructions:

1. Add 2 Tbsp sesame oil to griddle and preheat to medium high.
2. Add all veggies to grill and toss to coat with sesame oil.
3. Cook for 6 to 8 minutes.
4. Add 1 Tbsp sesame oil to griddle and add shrimp.
5. Toss shrimp and cook until opaque. (about 5 to 6 minutes)
6. Combine veggies and shrimp and add desired amount of soy sauce, 1 Tbsp ginger and salt and pepper to taste.
7. Turn the two left-most griddle burners to low and move veggies and shrimp to that side.
8. Add final 1 Tbsp of sesame oil to griddle and crack egg.
9. Scramble egg and add rice to the egg. Cook until slightly browned.
10. Plate with rice under veggies and shrimp and serve.

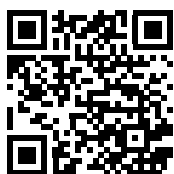

**FIND MORE RECIPES  
AT CHARGRILLER.COM**



P.O. Box 30864  
Sea Island, GA 31561  
[www.CharGriller.com](http://www.CharGriller.com)  
[Service@CharGriller.com](mailto:Service@CharGriller.com)

