





Hinge Cup (Door)

Mount Plate (Cabinet Side)


Drilling Instructions






*Mini Hinge has prefitted euro screws for 5mm ø holes, however, these can be removed and standard woodscrews in this pack that require a 2mm ø pilot hole can be used if preferred.


Mounting Instructions

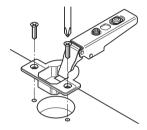





Place hinge on mounting plate. Positioning with pre-determined end stop.



Apply light pressure.



HÄFELE

Adjusting the Door

Depth adjustment of door with Häfele mounting plates.


With the Häfele mounting plates with quick fixing system, a depth adjustment of the door from -0.6 mm up to +3 mm is possible via eccentric. It is not necessary to loosen further screws.



Height adjustment of door with Häfele mounting plates with slot.

Height adjustment of door of ±2 mm is possible by loosening the two fixing screws. The slots allow the mounting plates to slide in both directions. Afterwards the screws must be re-tightened.







Lateral adjustment of door with Häfele concealed hinges.


The adjusting screw produces the lateral travel of the hinge arm from -2 mm up to +2 mm.














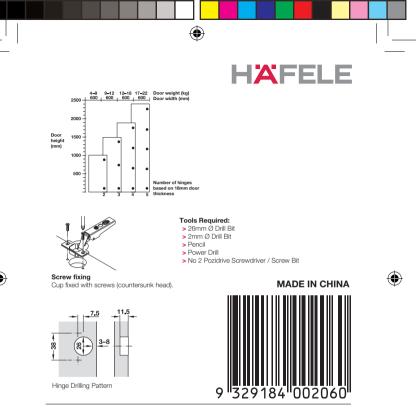

HÄFELE AUSTRALIA PTY. LTD ARTICLE # 483.02.439

8 MONTEREY RD DANDENONG VIC 3175 730.83.664