


## FITTING YOUR SOFT CLOSE TOILET SEAT

You will need to use the L key to undo the disc from the hinge, place the seat on a table or bench. Place the L key in the side of the disc where the grub screws are located and turn once or twice, just enough for the discs to be pulled away. Do not completely undo and remove grub screws, as they are small and can be easily lost.

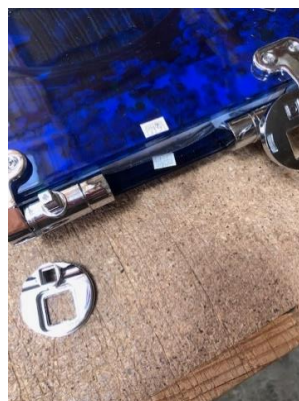

1. The (E) white plugs need to push into your toilet fixing holes. As toilet suite fixing holes vary in size, we have included 3 different sizes in your content's packs.

Contents A plug



Contents B plug



2. Place the (C & D) large clear washer and large clear ring onto the bottom of the disc, place this over the fixing holes.

**If using Plugs from Contents A-** Place (B) small silver squares into the Fixing rod, then add part E1, thread the rod into the fixing hole. You can move the discs forward/back, side to side approx. 20mm to fit. From underneath place part E3, F and G onto the Rod. Screw part G up tight. (hold the rod from the top with a screwdriver while you tighten the nuts underneath, this is to stop the rod from turning).

**If using Plugs from Contents B,** Place (B) small silver squares into the Fixing rod and screw rod down tight into the fixing hole. Use part G from Contents A to tighten Rod from underneath



3. Once all secure, tighten the grub screws with the L key, place the silver caps back over the discs.



4. Push your seat back into the fixed discs.

Your seat will now be ready for use.