

AEG

AC3060S


Original instructions

Important!

It is essential that you read the instructions in this manual before assembling, operating and maintaining the product.


Subject to technical modifications.

Fig. 1

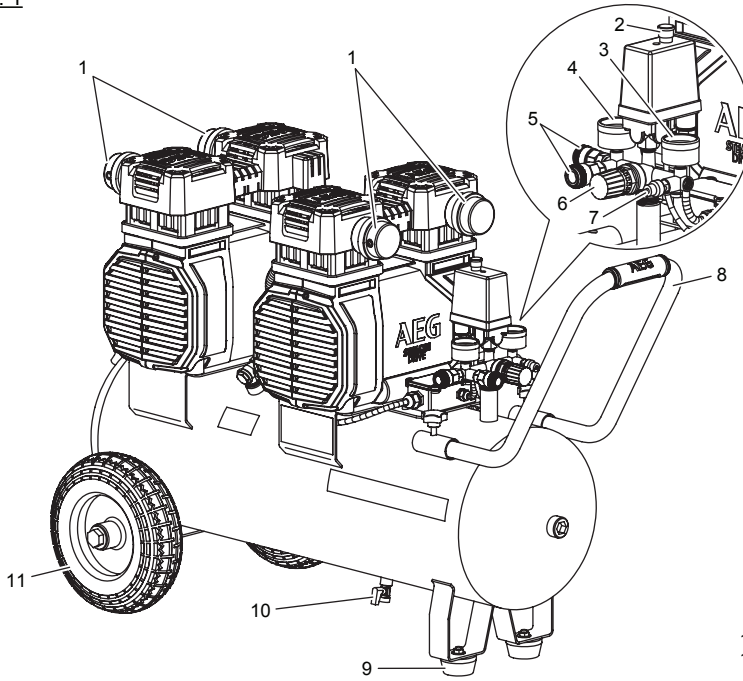


- 1 - Air filter assembly x4
- 2 - On/off switch
- 3 - Tank pressure gauge
- 4 - Regulator pressure gauge
- 5 - Quick connect coupler
- 6 - Pressure regulator knob
- 7 - Pressure relief valve
- 8 - Front handle
- 9 - Rubber foot x2
- 10 - Drain valve
- 11 - Wheel x2

Fig. 2

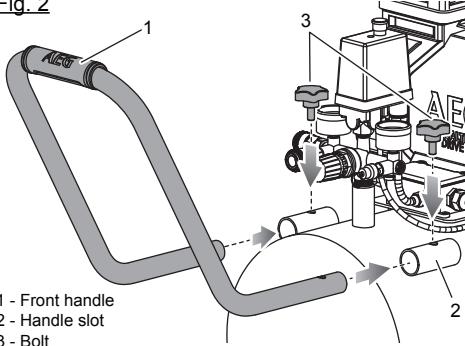


- 1 - Front handle
- 2 - Handle slot
- 3 - Bolt

Fig. 3

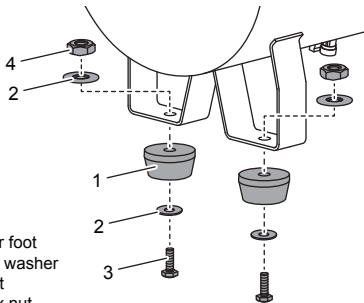


- 1 - Rubber foot
- 2 - M8 flat washer
- 3 - M8 bolt
- 4 - M8 hex nut

Fig. 4

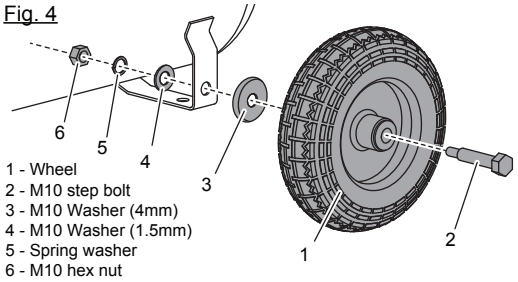

- 1 - Wheel
- 2 - M10 step bolt
- 3 - M10 Washer (4mm)
- 4 - M10 Washer (1.5mm)
- 5 - Spring washer
- 6 - M10 hex nut

Fig. 5

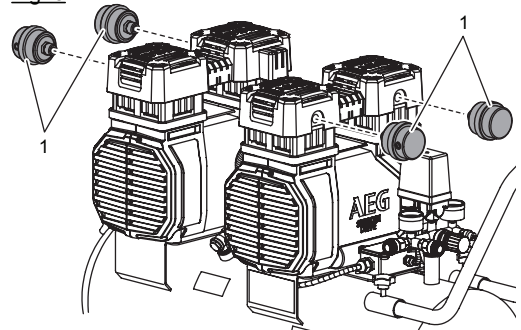

- 1 - Air filter assembly

Fig. 6a

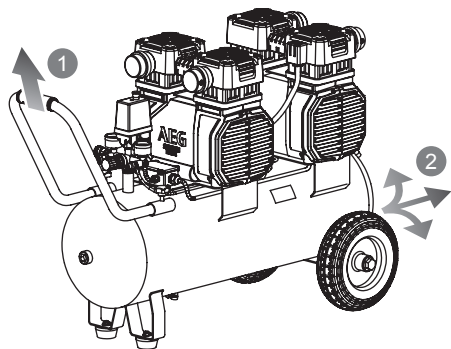


Fig. 6b



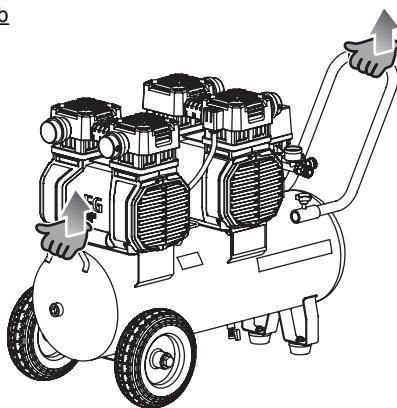


Fig. 7

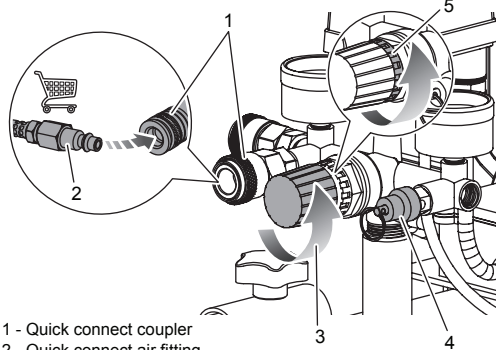


- 1 - Quick connect coupler
- 2 - Quick connect air fitting
- 3 - To close (counterclockwise)
- 4 - Pressure relief valve
- 5 - Pressure regulator locking ring

Fig. 8

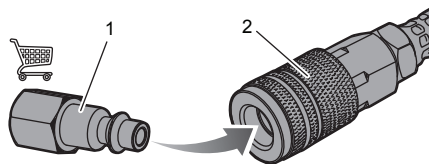


- 1 - Quick connect air fitting
- 2 - Quick coupler

Fig. 9

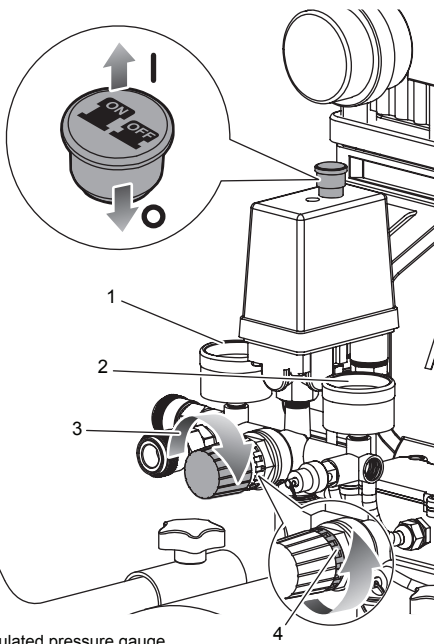


- 1 - Regulated pressure gauge
- 2 - Tank pressure gauge
- 3 - To open (clockwise)
- 4 - Pressure regulator locking ring

Fig. 10

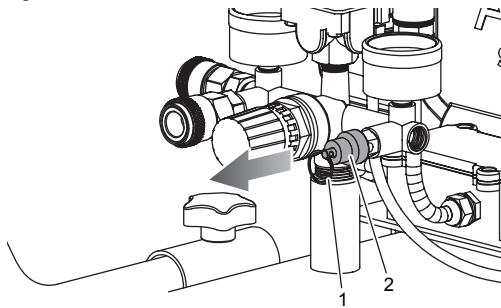

- 1 - Ring
- 2 - Pressure relief valve


Fig. 11

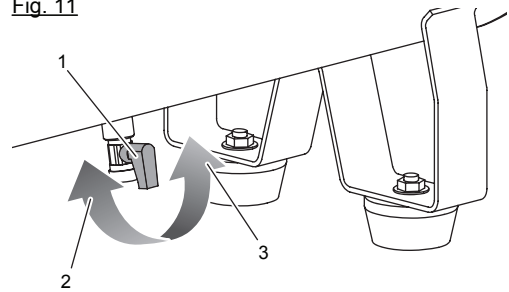

- 1 - Drain valve
- 2 - To close
- 3 - To open

Fig. 12

- 1 - Air filter housing
- 2 - Air filter
- 3 - Air filter cover

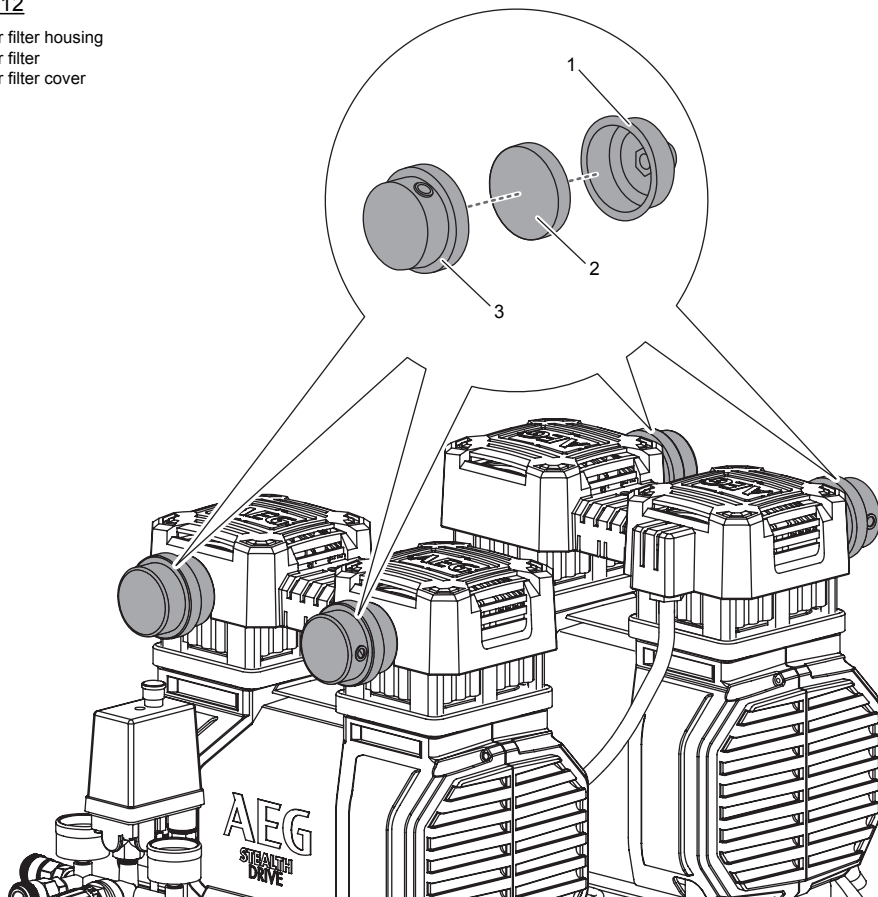

**TECHNICAL DATA****SILENT AIR COMPRESSOR****AC3060S**

Rated motor power	2200 W
Rated current	9.5 A
Air outlets	2 pcs, 6.35mm (1/4") NITTO style connector/ coupler (suitable for NITTO fittings)
Quick connector fitting size	6.35 mm (1/4") BSP thread
Weight	73 kg
Input	220 - 240 V AC, 50 Hz
Power cord length	2 m
Air tank capacity	60 L
Free air delivery	240 L/min
Maximum air delivery	369 L/min at 0 bar tank pressure
Maximum air pressure	10 bar (145 psi)
Working pressure range	7 - 10 bar (101 - 145 psi)
Pressure gauge	2 pcs, 41 mm diameter
Maximum rotational shaft speed	1450 min ⁻¹
Short-circuit rating	3 kA
Operating temperature	0 - 45°C
Hazard level	D
Plant design registration number	V1900086
Measured sound pressure level (the reference number of the noise test code: EN ISO 2151:2008)	L _{PA} = 71.89 dB(A), K _{PA} = 3 dB
Measured sound power level (the reference number of the noise test code: EN ISO 2151:2008)	L _{WA} = 85.78 dB(A), K _{WA} = 3 dB

REPLACEMENT PARTS

Air filter	039871001022
------------------	--------------

⚠ WARNING!

Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

GENERAL SAFETY WARNINGS**⚠ WARNING**

When using electric tools, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury. Read all these instructions before attempting to operate this product and save these instructions.

Read all instructions.

Know your power tool. Read the operator's manual carefully. Learn the applications and limitations as well as the specific potential hazards related to this tool.

WORK AREA SAFETY

- Keep work area clean. Cluttered areas and benches invite accidents. Do not leave tools or pieces of wood on the tool while it is in operation.
- Do not use in dangerous environments. Do not use power tools in damp or wet locations or expose to rain. Keep the work area well lit.
- Keep children and visitors away. All visitors should wear safety glasses and be kept a safe distance from work area. Do not let visitors contact tool or extension cord while operating.
- Never use in an explosive atmosphere. Normal sparking of the motor could ignite fumes.

ELECTRICAL SAFETY

- Guard against electrical shock by preventing body contact with grounded surfaces, e.g., pipes, radiators, ranges, refrigerator enclosures.
- Do not abuse cord. Never carry tool by the cord or yank it to disconnect from receptacle. Keep cord from heat, oil, and sharp edges.
- Should any electrical component of the tool fail to perform properly, shut off the power switch, remove the plug from the power source and replace before resuming operation.
- Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.

PERSONAL SAFETY

- Stay alert and exercise control. Watch what you are doing and use common sense. Do not operate tool when you are tired. Do not rush.
- Dress properly. Do not wear loose clothing, neckties, or jewellery that can get caught and draw you into moving parts. Rubber gloves and nonskid footwear are recommended when working outdoors. Also wear protective hair covering to contain long hair.
- Always wear safety glasses with side shields. Everyday eyeglasses have only impact-resistant lenses; they are not safety glasses.
- Protect your lungs. Wear a face or dust mask if the operation is dusty.
- Protect your hearing. Wear hearing protection during extended periods of operation.
- Do not overreach. Keep proper footing and balance at all times.
- Remove adjusting keys and wrenches. Form habit of checking to see that keys and adjusting wrenches are removed from tool before turning it on.





AIR COMPRESSOR USE AND CARE

- Do not exceed the pressure rating of any component in the system.
- Protect material lines and air lines from damage or puncture. Keep hose and power cord away from sharp objects, chemical spills, oil, solvents, and wet floors.
- Check hoses for weak or worn condition before each use, making certain all connections are secure. Do not use if defect is found. Purchase a new hose or notify an authorised service centre for examination or repair.
- Release all pressures within the system slowly. Dust and debris may be harmful.
- Store idle air compressors out of the reach of children and other untrained persons. Air compressors are dangerous in the hands of untrained users.
- Maintain air compressors with care. Follow maintenance instructions. Properly maintained products are easier to control.
- Check for misalignment or binding of moving parts, breakage of parts, and any other condition that may affect the product's operation. If damaged, have the air compressor serviced before using. Many accidents are caused by poorly maintained products.
- Keep the exterior of the air compressor dry, clean, and free from oil and grease. Always use a clean cloth when cleaning. Never use brake fluids, gasoline, petroleum-based products, or any strong solvents to clean the unit. Following this rule will reduce the risk of deterioration of the enclosure plastic.

SERVICE

- When servicing use only identical replacement parts. Use of any other parts may create a hazard or cause product damage.

Save these instructions. Refer to them frequently and use them to instruct other users. If you loan someone this tool, loan them these instructions also.

AIR COMPRESSOR SAFETY WARNINGS

- Know your air compressor. Read operator's manual carefully. Learn its applications and limitations, as well as the specific potential hazards related to this product. Following this rule will reduce the risk of electric shock, fire, or serious injury.
- Drain tank of moisture after each day's use. If unit will not be used for a while, it is best to leave drain valve open until such time as it is to be used. This will allow moisture to completely drain out and help prevent corrosion on the inside of tank.
- Risk of fire or explosion. Do not spray flammable liquid in a confined area. Spray area must be well ventilated. Do not smoke while spraying or spray where spark or flame is present. Keep compressors as far from the spraying area as possible, at least 10 m (33 feet) from the spraying area and all explosive vapours.
- Risk of bursting. Do not adjust regulator to result in output pressure greater than marked maximum pressure of attachment. Do not use at pressure greater than 10 bar.
- To reduce the risk of electric shock, do not expose to rain. Store indoors.
- Inspect tank yearly for rust, pin holes, or other imperfections that could cause it to become unsafe.
- Never weld or drill holes in the air tank.
- Never use the air compressor with the guard removed.
- Make sure the hose is free of obstructions or snags. Entangled or snarled hoses can cause loss of balance or footing and may become damaged.
- Use the air compressor only for its intended use. Do not alter or modify the unit from the original design or function.
- Always be aware that misuse and improper handling of this product can cause injury to yourself and others.
- Never leave a tool unattended with the air hose attached.

- Never point any air tool toward yourself or others.
- Do not operate this air compressor if it does not contain a legible warning label.
- Do not continue to use a tool or hose that leaks air or does not function properly.
- Always disconnect the air supply and power supply before making adjustments, servicing a product, or when a product is not in use.
- Do not attempt to pull or carry the air compressor by the hose.
- Your tool may require more air consumption than this air compressor is capable of providing.
- Always follow all safety rules recommended by the manufacturer of your air tool, in addition to all safety rules for the air compressor. Following this rule will reduce the risk of serious personal injury.
- Never direct a jet of compressed air toward people or animals. Take care not to blow dust and dirt towards yourself or others. Following this rule will reduce the risk of serious injury.
- Do not use this air compressor to spray chemicals. Your lungs can be damaged by inhaling toxic fumes. A respirator may be necessary in dusty environments or when spraying paint. Do not carry while painting.
- Inspect product cords and hoses periodically and, if damaged, have them repaired at your nearest authorised service centre. Constantly stay aware of cord location. Following this rule will reduce the risk of electric shock or fire.
- Never use an electrical adaptor with this grounded plug.
- Check for damaged parts. Before further use of the air compressor or air tool, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function. Check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced by an authorised service centre. Following this rule will reduce the risk of serious injury.
- Never store a tool with an air line connected. Storing the tool while connected to an air supply can result in unexpected operation, firing or movement and possible serious personal injury.
- Protect your lungs. Wear a face or dust mask if the operation is dusty. Following this rule will reduce the risk of serious personal injury.
- If the power supply cord is damaged, it must be replaced only by the manufacturer or by an authorised service centre to avoid risk.
- Save these instructions. Refer to them frequently and use them to instruct others who may use this product. If you loan someone this product, loan them these instructions also.
- The machine shall be connected to a circuit protection device (fuse or circuit breaker).
- Connect the mains lead to a standard electrical supply which has protection devices of over current (10A, 220-240V, 50Hz).
- Operate the machine from the front of the control panel.
- When the machine is in operation, many parts of machine may cause a high temperature. Use necessary personal protection equipment such as gloves to avoid injuries resulting from a high temperature.
- When using the product with an extension cord, use a 3 x 1.5mm² heavy duty extension cord only.
- This machine is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge. Children should be supervised to ensure that they do not play with the machine.

RESIDUAL RISKS

Even when the product is used as prescribed, it is still impossible



to completely eliminate certain residual risk factors. The following hazards may arise and the operator should pay special attention to avoid the following:

- Use the product only for its intended use. Do not alter or modify the product from the original design or function.
- Always be aware that misuse and improper handling of the product can cause injury to yourself and others.
- Never leave an air compressor unattended with the hose attached to a tool.
- Do not continue to use an air compressor or hose which leaks air or does not function properly.
- Risk of bursting
 - Do not adjust regulator to result in output pressure greater than marked maximum pressure of attachment.
- Heat and high temperature are generated while motor and cylinder are running. Touching exposed metal can result in serious burns.
 - Always keep the air compressor away from the working zones.
- Injury caused by noise
 - Wear ear protection.
- The gas from air compressor can propel dirt, chips, loose particles and small objects at high speed. This may result in objects being thrown into eyes or other possible serious injury.
 - Always wear proper personal protective equipment when operating different tools.

SPECIFIED CONDITIONS OF USE

This compressor is designed to supply pressurised air only. It must not be used to compress any other gas. It is designed to operate air powered tools. The compressor should be operated indoors only.

ASSEMBLY

UNPACKING

This product requires assembly. Carefully remove the product and any accessories from the box.

⚠ WARNING

Do not use this product if any parts on the packing list are already assembled to your product when you unpack it. Parts on this list are not assembled to the product by the manufacturer and require customer installation. Use of a product that may have been improperly assembled could result in serious personal injury.

Inspect the product carefully to make sure no breakage or damage occurred during shipping.

Do not discard the packing material until you have carefully inspected and satisfactorily operated the product.

⚠ WARNING

If any parts are damaged or missing do not operate this product until the parts are replaced. Use of this product with damaged or missing parts could result in serious personal injury.

⚠ WARNING

Do not attempt to modify this product or create accessories not recommended for use with this product. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious personal injury.

⚠ WARNING

Do not connect to power supply until assembly is complete. Failure to comply could result in accidental starting and possible serious personal injury.

Packing list

- Air compressor
- Front handle
- Air filter x 4
- Wheel x 2
- Rubber foot x 2
- M10 Step bolt x 2
- M8 bolt x 2
- Front handle locking bolt x 2
- M10 hex nut x 2
- M8 hex nut x 2
- M10 x 4 mm flat washer x 2
- M10 x 1.5 mm flat washer x 2
- M8 flat washer x 4
- M10 spring washer x 2
- Operator's manual

INSTALLING FRONT HANDLE

See figure 2.

1. Insert both ends of the front handle in handle slots.
2. Align the holes on the front handle and handle slots. Secure both ends with locking bolts and hand tighten.

INSTALLING FEET

See figure 3.

1. Place a rubber foot under the left supporting frame at the front. Align the screw holes.
2. Insert an M8 bolt and M8 flat washer in the holes in the rubber foot and the supporting frame from the bottom.
3. Insert an M8 flat washer at the other end.
4. Secure the rubber foot with an M8 hex nut.
5. Repeat the above steps to install the other foot on the right.
6. Ensure the compressor is stable by gently applying lateral force on it.

INSTALLING WHEELS

See figure 4.

1. Insert an M10 step bolt in the centre hole of the wheel.
2. Insert the threaded section of the step bolt in the hole in the rear brace on the left. Place a 4 mm washer between the wheels and frame, and place a 1.5 mm washer on the inside of the frame.
3. Insert a spring washer.
4. Secure the step bolt with an M10 hex nut.
5. Repeat the above steps to install the other wheel on the right.
6. Ensure the compressor is stable by gently applying lateral force on it.

INSTALLING AIR FILTERS

See figure 5.

Attach one air filter to each of the cylinder covers. Screw in a clockwise direction to fasten securely.



OPERATION

DANGER

Do not disassemble check valve, tank drain valves or safety relief valve with air in tank — bleed tank.

WARNING

Always wear eye protection with side shields. Failure to do so could result in objects being thrown into your eyes resulting in possible serious injury.

WARNING

Do not attach any tools to the open end of the hose until start-up has been completed.

CAUTION

Do not use in an environment that is dusty or otherwise contaminated. Using the air compressor in this type of environment may cause damage to the unit.

TRANSPORTING THE AIR COMPRESSOR

See figure 6a.

The air compressor should be moved as instructed. This will help you avoid damaging the wheel or the air compressor by rolling it over items in its path.

Ensure the air compressor is unplugged and the power cord is secured from free movement.

To move the air compressor:

1. Grasp the front handle firmly with two hands.
2. Lift the air compressor toward you. Make sure the compressor is balanced on the wheels.
3. Push the unit along to the desired location.
4. Lower the air compressor until it sits securely on a flat surface.

To transport the air compressor up or down stairs:

See figure 6b.

1. Grasp the front handle and rear handle firmly. Lift the unit into a safe and comfortable carrying position.

NOTE: Use good lifting techniques and get help if needed.

2. With proper footing and balance, carry the unit one step at a time.
3. Use care in transporting the unit down or up stairs to avoid damage to the stairs, damage to unit and personal injury. Pay extra attention to the drain valve which is under the tank during transportation, to avoid any damage.
4. Lower the air compressor until it sits securely on a flat surface.

ATTACHING/DISCONNECTING AIR HOSE

See figure 7.

NOTE: For operation using pressures above 7 bar, (102 psi) delivery hoses should be fitted with a safety cord, e.g., wire rope.

1. Make sure the air compressor is off and unplugged.
2. Rotate pressure regulator knob fully counterclockwise.
3. Rotate pressure regulator locking ring fully counterclockwise.

4. Confirm that the outlet pressure is at zero (0) bar.
5. Attach hose with quick connect air fitting to 6.35 mm (1/4 in.) quick connect coupler (regulated pressure) on air compressor. Make sure to push the hose adapter end fully into the coupler until the sleeve springs forward to lock it in place.

To disconnect an air hose or an air tool:

1. Rotate pressure regulator knob fully counterclockwise.
2. Confirm that the outlet pressure is at zero (0) bar.
3. When disconnecting a hose from 6.35 mm (1/4 in.) quick coupler, always firmly hold release end of hose.
4. Pull back on the release sleeve on the 6.35 mm (1/4 in.) quick coupler.
5. With a firm grip, pull out the quick connect air fitting that is attached to the quick coupler.

TURNING THE AIR COMPRESSOR ON/OFF

See figure 9.

1. With the air compressor plugged in, pull the power switch to the ON position to power the compressor on.
2. To turn the air compressor off, push the power switch to the OFF position.

NOTE: When the compressor is in the ON position, the air compressor will automatically turn on when the designated tank air pressure drops below the preset pressure limit. It will also shut off again when the desired pressure is reached.

WARNING

Never exceed the air tool's pressure rating as recommended by the manufacturer. When using this air compressor as an inflation device, always follow the maximum inflation guidelines stated by the manufacturer of the item being inflated.

WARNING

Always ensure the switch is in the OFF (O) position and the regulator pressure gauge reads zero before changing air tools or disconnecting the hose from the air outlet. Failure to do so could result in possible serious personal injury.

USING THE AIR COMPRESSOR

See figure 8 - 9.

1. Ensure power switch is in the OFF (O) position and air compressor is unplugged.
2. If not already installed, attach hose to compressor as previously instructed.
3. Attach 6.35 mm (1/4 in.) quick connect air fitting to accessory or tool you intend to use.
4. Insert the other end of the quick connect air fitting to the quick coupler (regulated pressure) on the open end of hose.
5. Connect the power cord to the power supply.
6. Turn the switch ON (I).
7. Rotate pressure regulator knob to desired line pressure. Turning the knob clockwise increases air pressure at the outlet; turning counterclockwise reduces air pressure at the outlet.
8. Rotate pressure regulator locking ring fully counterclockwise to lock the air pressure.
9. Following all safety precautions in this manual and the manufacturer's instructions in the air tool manual, you may now proceed to use your air-powered tool.



⚠ WARNING

Air powered tools may require more air consumption than this air compressor is capable of providing. Check the tool manual to avoid damage to the tool or risk of personal injury.

10. Control the amount of air flow with the pressure regulator knob. Turning the knob fully counterclockwise will completely stop the flow of air.

NOTE: Always use the minimum amount of pressure necessary for your application. Using a higher pressure than needed will drain air from the tank more rapidly and cause the unit to cycle on more frequently.

11. When finished, always drain the tank and unplug the unit. Never leave the unit plugged in and/or running unattended.
12. It is recommended to use a residual current device with a rated residual current of 30 mA or less.

CHECKING THE PRESSURE RELIEF VALVE

See figure 10.

⚠ WARNING

Do not attempt to tamper with the safety valve. Anything loosened from this device could fly up and hit you. Failure to heed this warning could result in death or serious personal injury.

The pressure relief valve will automatically release air if the air tank pressure exceeds the preset maximum. The valve should be checked before each day of use by pulling the ring by hand.

1. Turn the air compressor on and allow the tank to fill. The compressor will shut off when the pressure reaches the preset maximum.
2. Turn the air compressor off.
3. Pull the ring on the safety valve to release air for three to five seconds. Air should rapidly escape. Release the ring and the air should stop.
4. The ring pin may need to be pushed back into position to stop the flow of air at high pressure.

⚠ WARNING

If air leaks after the ring has been released, or if the valve is stuck and cannot be actuated by the ring, do not use the air compressor until the safety valve has been replaced. Use of the air compressor in this condition could result in serious personal injury.

DRAINING THE TANK

See figure 11.

To prevent tank corrosion and keep moisture out of the air used, the air tank of the compressor should be drained daily.

To drain:

1. Turn the air compressor off.
2. Pull the ring on the pressure relief valve to release until pressure gauge reads less than 1.4 bar.
3. Release the ring.
4. Turn the drain valve counterclockwise to open and drain the moisture.

NOTE: Condensate is a polluting material and should be disposed of in compliance with local regulations.

5. If drain valve is clogged, release all air pressure. Remove and clean the valve, then reinstall.

⚠ DANGER

Unplug the air compressor and release all air from the tank before servicing. Failure to depressurise tank before attempting to remove valve may cause serious personal injury.

6. Turn the drain valve clockwise until tightly closed.

STORAGE

1. Push the power switch to the OFF position to turn off the compressor.
2. Unplug the compressor.
3. Run the air tool to relieve the air pressure in the hose, then remove the air hose and the tool, or release the air by the pressure relief valve.
4. Drain water from the tank as instructed in Draining the Tank section. Leave the valve open until the next usage.
5. Store the air compressor in its normal operating position in a dry and protected area.

⚠ WARNING

Water will condense in the air compressor tank when the compressor is in operation. Water left in the tank can cause the tank to weaken and corrode, increasing the risk of tank rupture.

⚠ WARNING

Always disconnect the air hose from tools whenever not in use or while servicing. During maintenance, a tool connected to air hose may operate accidentally, causing serious personal injury!

⚠ WARNING

Failure to unplug the air compressor before storage may result in the compressor running continuously, causing overheating, damage to the compressor, and possibly a fire.

MAINTENANCE

⚠ WARNING

When servicing use only original replacement parts. Use of any other parts may create a hazard or cause product damage.

⚠ WARNING

Always wear eye protection with side shields. Failure to do so could result in objects being thrown into your eyes resulting in possible serious injury.

⚠ WARNING

Always release all pressure, disconnect from power supply, and allow unit to cool before cleaning or making repairs on the air compressor.

GENERAL MAINTENANCE

Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use. Use clean cloths to remove dirt, dust, oil, grease, etc.

Do not modify this product in any way or use accessories not approved by the manufacturer. Your safety and that of others may be compromised.

Disconnect the power supply before making adjustments or when doing any maintenance on the machine.

WARNING

Do not at any time let brake fluids, gasoline, petroleum-based products, penetrating oils, etc., come in contact with plastic parts. Chemicals can damage, weaken or destroy plastic which may result in serious personal injury.

REPLACING AIR FILTERS

See figure 12.

Follow the instructions below to replace the air filters:

Normal environment

Check and clean the filters once a month. Replace damaged or heavily clogged filters.

Heavy-dust environment

Check and clean the filters once a week. Replace damaged or heavily clogged filters.

To replace an air filter:

1. Remove the air filter by turning counterclockwise.
2. Attach a new air filter and rotate clockwise to secure.

WARNING

For greater safety and reliability, all repairs should be performed by an authorised AEG service centre.

Use only AEG accessories and spare parts. Should components need to be replaced which have not been described, please contact one of our AEG service agents (see our list of guarantee/service addresses). If needed, an exploded view of the product can be ordered. Please state the Article No. as well as the machine type printed on the label and order the drawing at your local service agents or directly at:

Techtronic Industries Australia Pty Ltd

PO Box 1065
Mount Waverley VIC 3149
Tel. no. 1300 234 797
Australia

Techtronic Industries N.Z. Limited

70 Business Parade South
Highbrook
Auckland 2013
Tel no. 0800 234 797
New Zealand

SYMBOLS



Safety alert



Please read the instructions carefully before starting the machine.



Always wear goggles when using the machine.



Wear ear protectors.



Regulatory Compliance Mark (RCM). Product meets applicable regulatory requirements.



Indoor use



Wet condition alert. Do not expose to rain. Store indoors.



Risk of breathing. Air obtained directly from the air compressor should never be used to supply air for human consumption.



Risk of bursting. Do not adjust regulator to result in output pressure greater than marked maximum pressure of attachment. Do not use at pressure greater than 10 bar.



Hot surface: To reduce the risk of injury or damage, avoid contact with any surface.



This compressor may start without warning.



Risk of fire or explosion. Spray area must be well ventilated. Do not smoke while spraying or spray where spark or flame is present. Keep compressors as far from the spraying area as possible. Keep compressor, at least 10 m from the spraying area and all explosive vapours.



Caution, risk of electric shock



Do not dispose of electric tools together with household waste material. Electric tools and electronic equipment that have reached the end of their life must be collected separately and returned to an environmentally compatible recycling facility.





TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
Compressor will not run	Loss of power or overheating	Check for proper use of extension cord
	No electrical power	Check to be sure unit is plugged in
		Check fuse/breaker
	Blown shop/house fuse	Replace shop/house blown fuse
	Shop/house breaker open	Reset shop/house breaker, determining why problem happened
	Current limiting protector open	Reset motor overload to restart after motor has cooled.
	Bad pressure switch	Replace pressure switch
Tank is full of air	Compressor will turn on when tank pressure drops to cut-in pressure	
Motor hums but cannot run or runs slowly	Low voltage	Check with voltmeter
	Wrong gauge wire or length of extension cord	Check for proper gauge wire and cord length
	Shorted or open motor winding	Take compressor to service centre
	Defective check valve or unloader	Take compressor to service centre
Current limiting protector cuts out repeatedly	Low voltage	Check with voltmeter
	Lack of proper ventilation/room temperature too high	Move compressor to well-ventilated area
	Wrong gauge wire or length of extension cord	Check for proper gauge wire and cord length
Air tank pressure drops when compressor shuts off	Loose connections (fittings, tubing, etc.)	Check all connections with soap and water solution and tighten
	Loose drain valve	Tighten drain valve
	Check valve leaking	Take compressor to service centre <div style="background-color: black; color: white; text-align: center; padding: 5px;">⚠ DANGER</div> Do not disassemble check valve, tank drain valve or pressure relief valve with air in tank — bleed tank.
Excessive moisture in discharge air	Excessive water in air tank	Drain tank
	High humidity	Move to area of less humidity; use air line filter
Compressor runs continuously	Defective pressure switch	Take compressor to service centre
	Excessive air usage	Take compressor to service centre
		Decrease air usage; compressor not large enough for tool's requirement
Piston rings are worn	Replace piston rings; air inlet filter is blocked, call customer service for assistance	
Air output lower than normal	Broken inlet valves	Take compressor to service centre
	Connections leaking	Tighten connections



PARTS LIST

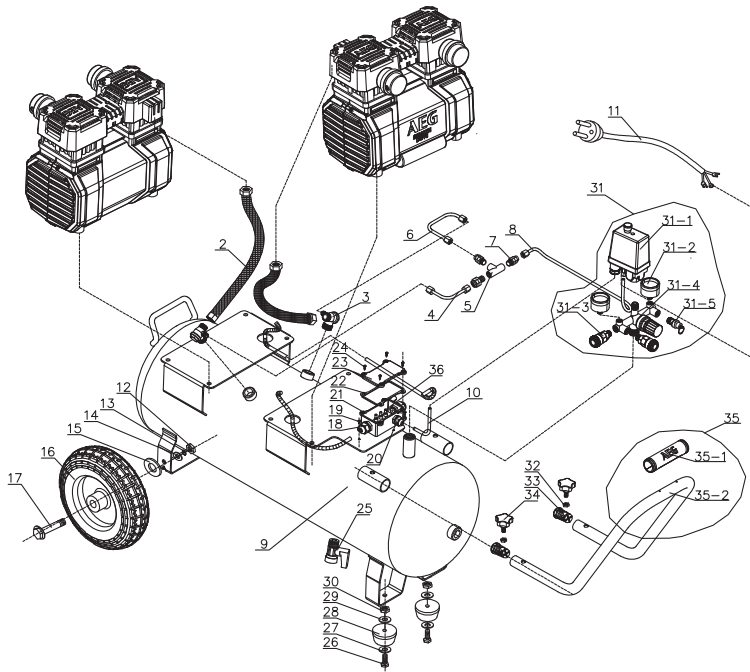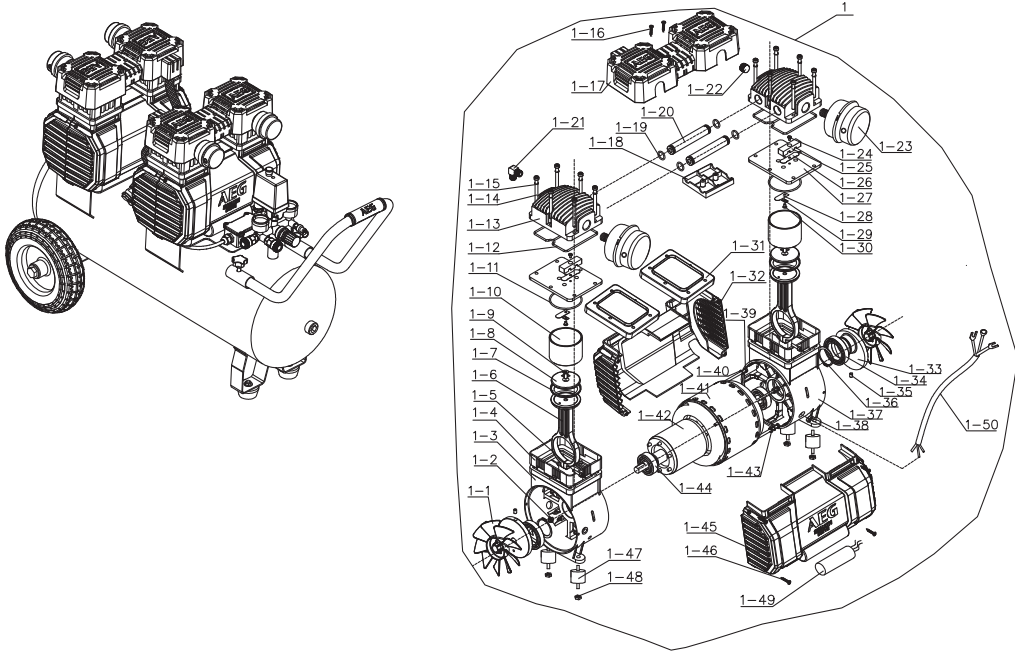




No.	Description	No.	Description	No.	Description	No.	Description
1	Motor and pump assembly	1-31	Cover	13	Spring - Dia. 10		
1-1	Fan	1-32	Cover A	14	Washer - Dia. 10		
1-2	Nut-M5	1-33	Shaft seal	15	Washer - Dia. 45° Dia. 10*4		
1-3	Left crankcase	1-34	Bearing 6908	16	Wheel - 10"		
1-4	Adjusting washer	1-35	Bolt - M8*10	17	Bolt - M10		
1-5	Bolt - M6*18	1-36	Washer	18	Safety carriage - PG9		
1-6	Connecting rod	1-37	Right crankcase	19	Bolt - M4*10		
1-7	Piston cup	1-38	Protection ring	20	Safety carriage - PG11		
1-8	Binder plate	1-39	Bolt	21	Box		
1-9	Bolt - M6*16	1-40	Spring	22	Obturing ring		
1-10	Cylinder	1-41	Stator	23	Cover		
1-11	Obturing ring	1-42	Rotator	24	Bolt - M3*10		
1-12	Obturing ring	1-43	Washer - Dia. 10	25	Drain cock		
1-13	Cylinder head	1-44	Bearing 6204	26	Bolt - M8*25		
1-14	Bolt- M6*70	1-45	Cover B	27	Washer		
1-15	Spring - Dia. 6	1-46	Bolt M5*25	28	Cushion foot		
1-16	Bolt - M4*16	1-47	Vibration column- M8	29	Washer		
1-17	Head cover	1-48	Nut- M8	30	Nut		
1-18	Fixed block	1-49	Capacitor -35uf	31	Switch assembly		
1-19	Obturing ring	1-50	Motor electrical wire	31-1	Pressure switch		
1-20	Connecting pipe	2	Pipe	31-2	Pressure gauge		
1-21	Elbow	3	Check valve	31-3	Quick valve		
1-22	Bolt-G1/2	4	Unloading pipe	31-4	Support		
1-23	Air filter	5	Tee joints	31-5	Safety valve		
1-24	Bolt - M4*8	6	Unloading pipe	32	Nut - M8		
1-25	Limit block	7	Connector	33	Block up		
1-26	Valve	8	Unloading pipe	34	Bolt -M8		
1-27	Valve plate	9	Tank - 60	35	Handle assembly		
1-28	Valve	10	Electrical wire	35-1	Handle cover - Dia. 25		
1-29	Washer	11	Plug- 15*2.2m	35-2	Handle - Dia. 25		
1-30	Bolt	12	Nut - M10	36	Close end wire connector		



CIRCUIT DIAGRAM

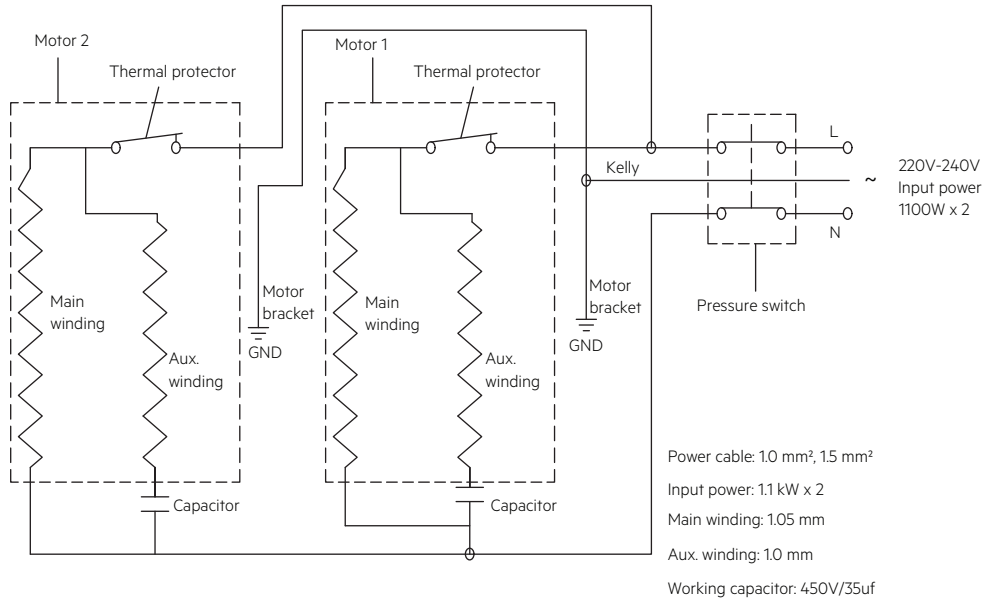

AEG

www.aegpowertools.com.au
www.aegpowertools.co.nz

Techtronic Industries Australia Pty Ltd

31 Gilby Road, Mount Waverley
VIC, 3149, Australia

Techtronic Industries N.Z. Limited

Unit C, 70 Business Parade South
Highbrook, Auckland 2013, New Zealand

20190326v1b

*AEG is a registered trademark used under
license from AB Electrolux (publ).*